REVISION HISTORY BG2T CHASSIS

MODEL

KV-HA14M80
KV-HA14N80
KV-HA14P52

PART NO.: 9-872-281-01

NO.	SUFFIX	DATE	SUPPL. / CORR	DESCRIPTION
1	-01	2001/01	--	1st. Issue

Self Diagnosis
Supported model

SERVICE MANUAL BG2T CHASSIS

MODEL	COMMANDER	DEST.	CHASSIS NO.	MODEL	COMMANDER	DEST.	CHASSIS NO.
KV-HA14M80	RM-969	India	SCC-U74D-A				
KV-HA14N80	RM-968	Philippines	SCC-U76E-A				
KV-HA14P52	RM-969	Thailand	SCC-U73M-A				

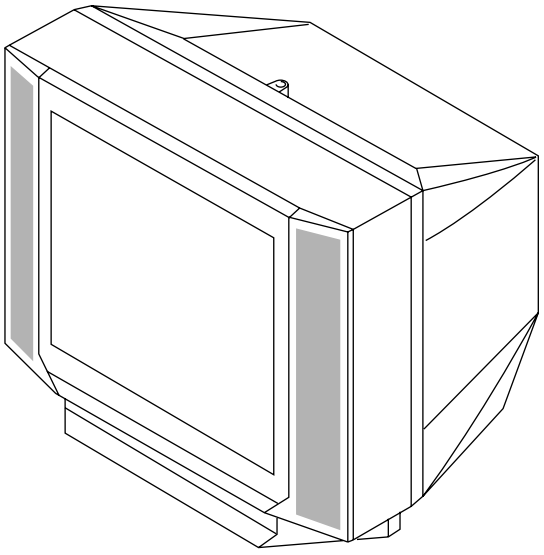

RM-968



RM-969

TRINITRON ® COLOR TV

SONY ®

SPECIFICATIONS

			Note
Power requirements	110-240 V AC, 50/60 Hz		(KV-HA14M80/HA14N80)
	220-240V AC, 50/60 Hz		(KV-HA14P52)
Power consumption (W)	Indicated on the rear of the TV		
Television system	B/G		(KV-HA14P52)
	M		(KV-HA14N80)
	B/G, I, D/K, M		(KV-HA14M80
Color system	PAL, PAL 60, NTSC3.58, NTSC4.43, SECAM		(KV-HA14M80)
	PAL, PAL 60, NTSC3.58 (AV IN), NTSC4.43		(KV-HA14P52)
	NTSC 3.58, PAL*, PAL 60*, NTSC 4.43*		* AV IN ONLY (KV-HA14N80)
Channel coverage			
M	VHF: 2 to 13 UHF: 14 to 69 CATV: 1 to 125		(KV-HA14N80)
B/G	VHF: E2 to E12 UHF: E21 to E69 CATV: S01 to S03, S01 to S41		(KV-HA14M80/HA14P52)
I	UHF: B21 to B68 CATV: S01 to S03, S1 to S41		(KV-HA14M80 only)
D/K	VHF: C1 to C12, R1 to R12 UHF: C13 to C57, R21 to R60 CATV: S01 to S03, S1 to S41, Z1 to Z39		
M	VHF: A2 to A13 UHF: A14 to A79 CATV: A-8 to A-2, A to W+4, W+6 to W+84		
⅂Γ (Antenna)	75-ohm external terminal		
Audio output (Speaker)	3W + 3W		
Number of terminal			
Video	Input: 2* Output: 1	Phono jacks; 1 V_{P-P}, 75 ohms	* One input line available
♪ Audio	Input: 2* Output: 1	Phono jacks; 500 mVrms	* One input line available
(Headphone)	Output: 1	Stereo minijack	
Picture tube	14 in.		
Tube size (cm)	37		Measured diagonally
Screen size (cm)	34		Measured diagonally
Dimension (w/h/d, mm)	466 × 346 × 419		
Mass (kg)	13		

Design and specifications are subject to change without notice.

CAUTION

SHORT CIRCUIT THE ANODE OF THE PICTURE TUBE AND THE ANODE CAP TO THE METAL CHASSIS, CRT SHIELD, OR CARBON PAINTED ON THE CRT, AFTER REMOVING THE ANODE.

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY SHADING AND MARK ⚠ ON THE SCHEMATIC DIAGRAMS, EXPLODED VIEWS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

TABLE OF CONTENTS

Section *Title* *Page*

SELF DIAGNOSTIC FUNCTION 4

1. GENERAL 7

2. DISASSEMBLY
2-1. Rear Cover Removal 13
2-2. Speaker Removal 13
2-3. Chassis Assy Removal 13
2-4. Service Position 13
2-5. Terminal Bracket Removal 13
2-6. Replacement Of Parts 13
2-6-1. Replacement Of Light Guide 13
2-6-2. Replacement Of Power Button 13
2-7. Picture Tube Removal 14

3. SET-UP ADJUSTMENTS
3-1. Beam Landing 15
3-2. Convergence 16
3-3. Focus Adjustment 18
3-4. G2 (SCREEN) and White Balance Adjustments ... 18

4. CIRCUIT ADJUSTMENTS
4-1. Adjustment With Commander 19
4-2. Adjustment Method 19
4-3. Picture Quality Adjustment 28
4-4. Deflection Adjustment 28
4-5. A Board Adjustment After IC003 (MEMORY) Replacement 28
4-6. Picture Distortion Adjustment 29

Section *Title* *Page*

5. DIAGRAMS
5-1. Block Diagram 30
5-2. Circuit Boards Location 32
5-3. Schematic Diagram 33
(1) A Board Schematic Diagram 34
(2) C Board Schematic Diagram 36
5-4. Voltage Measurement 39
5-5. Waveforms 41
5-6. Printed Wiring Boards and Parts Location 42
5-7. Semiconductors 45

6. EXPLODED VIEWS
6-1. Picture Tube and Chassis 47

7. ELECTRICAL PARTS LIST 49

SELF DIAGNOSTIC FUNCTION

The units in this manual contain a self-diagnostic function. If an error occurs, the STANDBY/TIMER lamp will automatically begin to flash.
The number of times the lamp flashes translates to a probable source of the problem. A definition of the STANDBY/TIMER lamp flash indicators is listed in the instruction manual for the user's knowledge and reference. If an error symptom cannot be reproduced, the remote commander can be used to review the failure occurrence data stored in memory to reveal past problems and how often these problems occur.

1. DIAGNOSTIC TEST INDICATORS

When an errors occurs, the STANDBY/TIMER lamp will flash a set number of times to indicate the possible cause of the problem. If there is more than one error, the lamp will identify the first of the problem areas.

Result for all of the following diagnostic items are displayed on screen. No error has occured if the screen displays a "0".

Diagnostic Item Description	No. of times STANDBY/TIMER lamp flashes	Self-diagnostic display/Diagnostic result	Probable Cause Location	Detected Symptoms
• Power does not turn on	Does not light	—	• Power cord is not plugged in. • Fuse is burned out F600 (A board)	• Power does not come on. • No power is supplied to the TV. • AC power supply is faulty.
• +B overcurrent (OCP) • Horizontal deflection overdrive	2 times	002:000 or 002:001~255	• H.OUT Q801 is shorted. (A board)	• Power does not come on. • Load on power line is shorted. • Has entered standby state after horizontal raster. • Power line is shorted or power supply is stopped.
• White balance failure (no PICTURE) • Vertical deflection stopped	4 times	004:000 or 004:001~225	• -13V is not supplied. (A board) • IC 551 faulty (A board)	• Vertical deflection pulse is stopped
• Micro reset	—	101:00 or 101:001~225	• Discharge CRT (C Board) • Static discharge • External noise	• Power is shut down shortly, after this return back to normal. • Detect Micro latch up.

Note 1: If a + B overcurrent is detected, stoppage of the vertical deflection is detected simultaneously. The symptom that is diagnosed first by the microcontroller is displayed on the screen.
Note 2: Refer to screen (G2) Adjustment in section 3-4 of this manual.

2. DISPLAY OF STANDBY/TIMER LIGHT FLASH COUNT

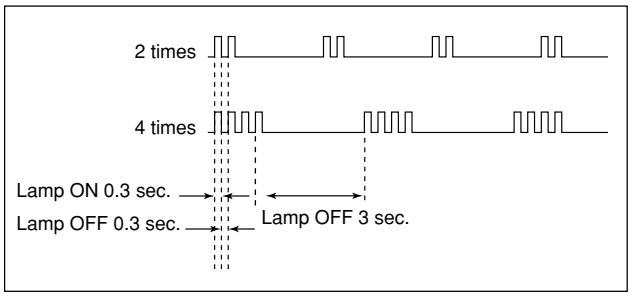

Diagnostic Item	Flash Count*
+B overcurrent/overvoltage	2 times
Vertical deflection stopped	4 times

* One flash count is not used for self-diagnostic.

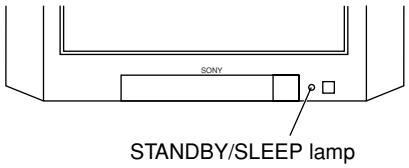

3. STOPPING THE STANDBY/TIMER FLASH

Turn off the power switch on the TV main unit or unplug the power cord from the outlet to stop the STANDBY/TIMER lamp from flashing.

4. SELF-DIAGNOSTIC SCREEN DISPLAY

For errors with symptoms such as “power sometimes shuts off” or “screen sometimes goes out” that cannot be confirmed, it is possible to bring up past occurances of failure for confirmation on the screen:

[To Bring Up Screen Test]
In standby mode, press buttons on the remote commander sequentially in rapid succession as shown below:

[Screen display] ➡ channel [5] ➡ Sound volume [-] ➡ Power ON

⇧

Note that this differs from entering the service mode (mode volume [+]).

Self-Diagnosis screen display

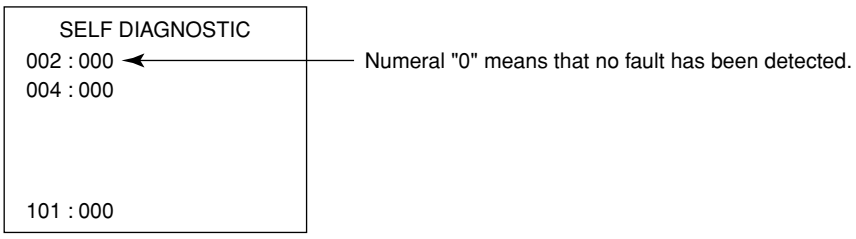

5. HANDLING OF SELF-DIAGNOSTIC SCREEN DISPLAY

Since the diagnostic results displayed on the screen are not automatically cleared, always check the self-diagnostic screen during repairs. When you have completed the repairs, clear the result display to “0”.

Unless the result display is cleared to “0”, the self-diagnostic function will not be able to detect subsequent faults after completion of the repairs.

[Clearing the result display]
To clear the result display to “0”, press buttons on the remote commander sequentially as shown below when the diagnostic screen is being displayed.

Channel [8] ➡ 0

[Quitting Self-diagnostic screen]
To quit the entire self-diagnostic screen, turn off the power switch on the remote commander or the main unit.

6. SELF-DIAGNOSTIC CIRCUIT

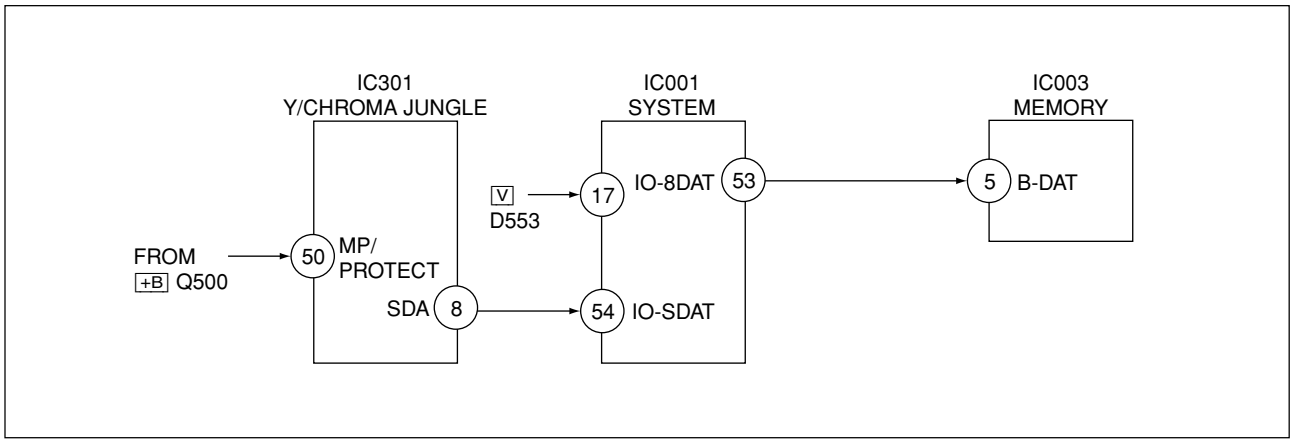

[+B overcurrent (OCP)]	Occurs when an overcurrent on the +B(135) line is detected by Q500. If Q500 go to ON and the voltage to pin 50 of IC301 more than 3.5V when V.SYNC is more than seven verticals in a period, the unit will automatically turn off.
[Vertical deflection stopped]	Occurs when an absence of the vertical deflection pulse is detected by Pin 17 and IC001 shut down the power supply.
[White balance failure]	If the RGB levels* do not balance or become low level within 5 seconds, this error will be detected by IC301. TV will stay on, but there will be no picture. * (Refers to the RGB levels of the AKB detection Ref pulse that detects IK.)

The operating instruction mentioned here are partial abstracts from the Operating Instruction Manual. The page numbers of the Operating Instruction Manual remain as in the manual.

SECTION 1 GENERAL

A Getting Started (KV-HA14M80)

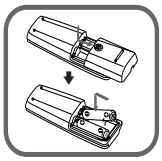

Step 1

Insert the batteries (supplied) into the remote.

Note
- Do not use old batteries nor use different types of batteries together.

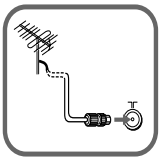

Step 2

Connect the antenna cable (not supplied) to ⅂ (antenna input) at the rear of the TV.

Tip
- You can also connect your TV to other optional components. (See E)

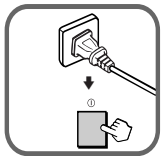

Step 3

Plug in the power cord, then press ⏻ on the TV to turn it on.

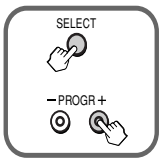

Step 4

Press SELECT and PROGR + on the TV at the same time for one to two seconds to preset the channels automatically. (See J)

Tip
- To stop the automatic channel presetting, press SELECT.

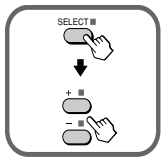

Step 5

Press SELECT on the remote until "LANGUAGE/اللغة: ENGLISH" appears on the screen, then press + or – to change the on-screen display language.

A Getting Started (KV-HA14P52)

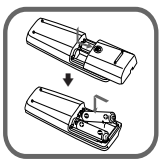

Step 1

Insert the batteries (supplied) into the remote.

Note
- Do not use old batteries nor use different types of batteries together.

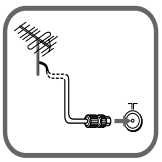

Step 2

Connect the antenna cable (not supplied) to ⅂ (antenna input) at the rear of the TV.

Tip
- You can also connect your TV to other optional components. (See E)

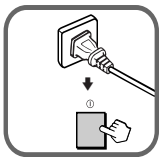

Step 3

Plug in the power cord, then press ⏻ on the TV to turn it on.

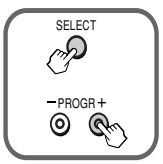

Step 4

Press SELECT and PROGR + on the TV at the same time for one to two seconds to preset the channels automatically. (See J)

Tip
- To stop the automatic channel presetting, press SELECT.

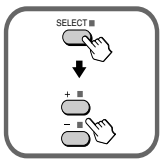

Step 5

Press SELECT on the remote until "LANGUAGE/ภาษา: ENGLISH" appears on the screen, then press + or – to change the on-screen display language.

A Getting Started (KV-HA14N80)

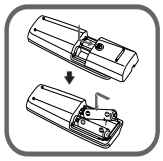

Step 1

Insert the batteries (supplied) into the remote.

Note
- Do not use old batteries nor use different types of batteries together.

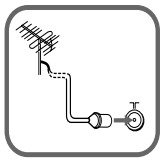

Step 2

Connect the antenna cable (not supplied) to ⅂ (antenna input) at the rear of the TV.

Tip
- You can also connect your TV to other optional components. (See E)

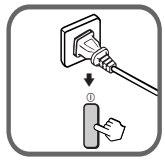

Step 3

Plug in the power cord, then press ⏻ on the TV to turn it on.

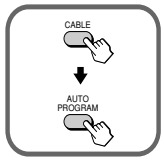

Step 4

Press CABLE on the remote to select "CABLE: ON", then press AUTO PROGRAM on the remote to preset the channels automatically. (See J)

Tip
- To stop the automatic channel presetting, press SELECT.

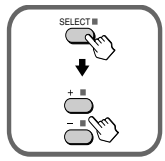

Step 5

Press SELECT on the remote until "LANGUAGE/語文顯示: ENGLISH" appears on the screen, then press + or – to change the on-screen display language.

B WARNING

- Dangerously high voltages are present inside the TV.
- TV operating voltage: 110 – 240 V AC. (KV-HA14M80/HA14N80)
  220-240 V AC. (KV-HA14P52)
- Do not plug in the power cord until you have completed making all other connections; otherwise a minimum leakage current might flow through the antenna and other terminals to ground.
- To avoid battery leakage and damage to the remote, remove the batteries from the remote if you are not going to use it for several days. If any liquid that leaks from the batteries touches you, immediately wash it away with water.

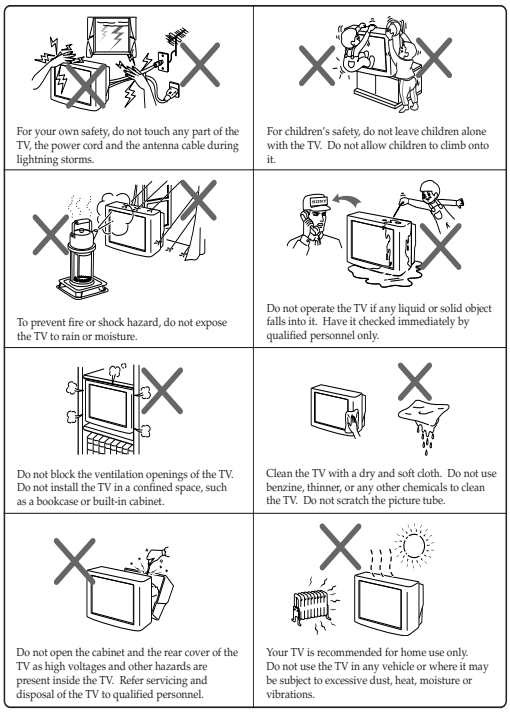

For your own safety, do not touch any part of the TV, the power cord and the antenna cable during lightning storms.

For children's safety, do not leave children alone with the TV. Do not allow children to climb onto it.

To prevent fire or shock hazard, do not expose the TV to rain or moisture.

Do not operate the TV if any liquid or solid object falls into it. Have it checked immediately by qualified personnel only.

Do not block the ventilation openings of the TV. Do not install the TV in a confined space, such as a bookcase or built-in cabinet.

Clean the TV with a dry and soft cloth. Do not use benzine, thinner, or any other chemicals to clean the TV. Do not scratch the picture tube.

Do not open the cabinet and the rear cover of the TV as high voltages and other hazards are present inside the TV. Refer servicing and disposal of the TV to qualified personnel.

Your TV is recommended for home use only. Do not use the TV in any vehicle or where it may be subject to excessive dust, heat, moisture or vibrations.

WARNING (continued)

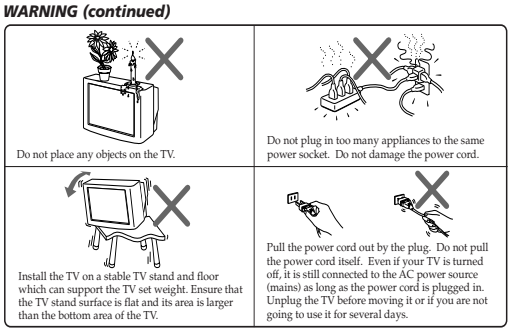
Do not place any objects on the TV.
Do not plug in too many appliances to the same power socket. Do not damage the power cord.
Install the TV on a stable TV stand and floor which can support the TV set weight. Ensure that the TV stand surface is flat and its area is larger than the bottom area of the TV.
Pull the power cord out by the plug. Do not pull the power cord itself. Even if your TV is turned off, it is still connected to the AC power source (mains) as long as the power cord is plugged in. Unplug the TV before moving it or if you are not going to use it for several days.

C Securing the TV

▶ **KV-HA21 only**

To prevent the TV from falling, use the supplied screws, clamps and band to secure the TV.

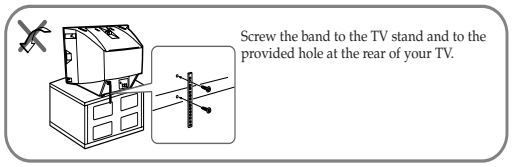

or

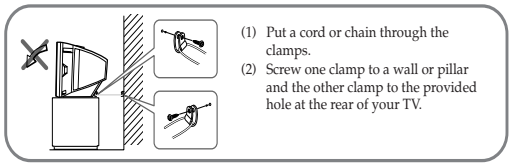
(1) Put a cord or chain through the clamps.
(2) Screw one clamp to a wall or pillar and the other clamp to the provided hole at the rear of your TV.

Note

- Use only the supplied screws. Use of other screws may damage the TV.

D TV front and rear panels

(KV-HA14N80)

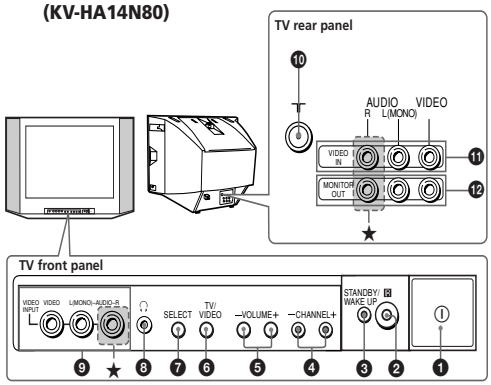

Button	Function
❶ ⏻	Turn off or turn on the TV.
❷ R	Remote control sensor.
❸ STANDBY	Standby indicator.
❸ WAKE UP	Wake Up indicator.
❹ CHANNEL +/–	Select channel number.
❺ VOLUME +/– *	Adjust volume.
❻ TV/VIDEO	Select TV or video input.
❼ SELECT	Select the desired item.
❽	Earphone terminal. (KV-HA21N70 only)
❽ ∩	Headphone terminal. (KV-HA21N80/HA14N80)
❾ VIDEO INPUT	Video input terminal.
❿	Antenna input terminal.
⓫ VIDEO IN	Video input terminal.
⓬ MONITOR OUT	Monitor output terminal.

* You can also use the VOLUME +/– buttons on the TV to work as the +/– buttons on the remote.

★ *The R (audio input) jacks are available for KV-HA21N80/HA14N80 only.*

D TV front and rear panels

(KV-HA14M80/HA14P52)

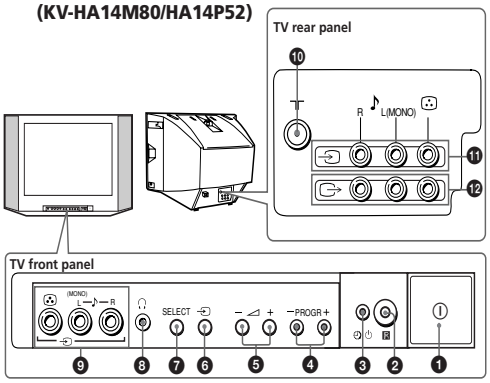

Button	Function
❶ ⏻	Turn off or turn on the TV.
❷ R	Remote control sensor.
❸ ⏻	Standby indicator.
❸	Wake Up indicator.
❹ PROGR +/–	Select program number.
❺ +/– *	Adjust volume.
❻	Select TV or video input.
❼ SELECT	Select the desired item.
❽ ∩	Headphone terminal.
❾, ⓫	Video input terminal.
❿	Antenna input terminal.
⓬	Monitor output terminal.

* You can also use the +/– buttons on the TV to work as the +/– buttons on the remote.

E Connecting optional components

(KV-HA14N80)

Connecting to the video input terminal

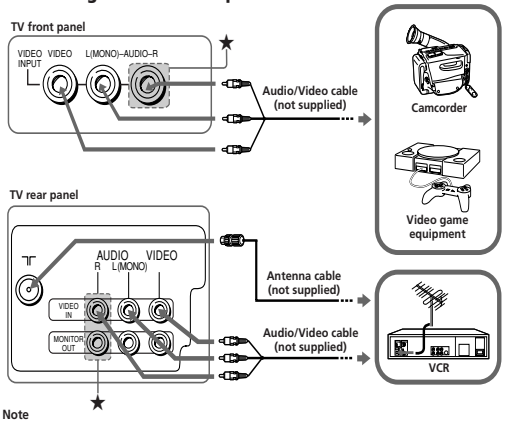

Note

- Do not connect video equipment to VIDEO INPUT at the front and VIDEO IN at the rear of your TV at the same time; otherwise the picture will not be displayed properly on the screen.

Connecting to the monitor output terminal

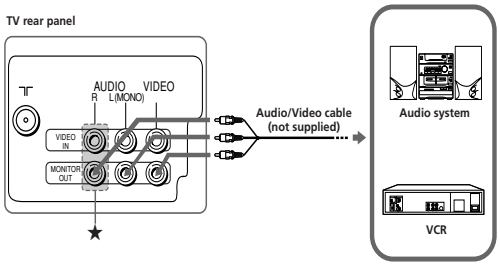

★ *The R (audio input) jacks are available for KV-HA21N80/HA14N80 only.*

E Connecting optional components (KV-HA14M80/HA14P52)

Connecting to the video input terminal ( )

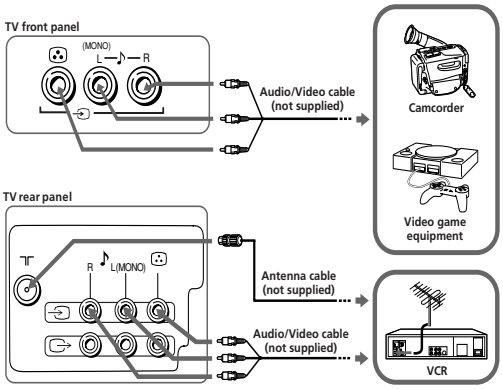

Note

- Do not connect video equipment to (video input) at the front and the rear of your TV at the same time; otherwise the picture will not be displayed properly on the screen.

Connecting to the monitor output terminal ( )

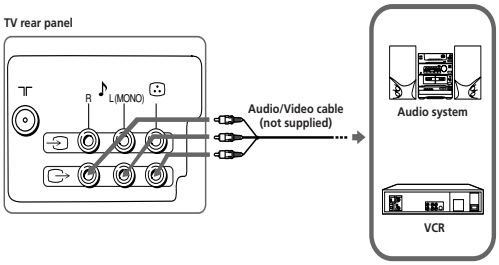

F Troubleshooting

If you find any problem while viewing your TV, please check the following guide. If any problem persists, contact your Sony dealer.

Symptom	Solutions
Snowy picture, noisy sound	• Check the antenna cable and connection on the TV, VCR and on the wall. • Preset the channel manually again. (See J) • Check the antenna setup. Contact a Sony dealer for advice.
Good picture, noisy sound	• Select the appropriate TV system. (KV-HA14M80 only). (See J) • Press A/B until the sound is optimal. (KV-HA14P52)
No picture, no sound	• Check the power cord, antenna and the VCR connections. • Press I/⏻ (power) or ⏻ (main power) to turn on the TV.
Good picture, no sound	• Press + to increase the volume level. • Press to cancel the muting.
Dotted lines or stripes	• Do not use a hair dryer or other equipment near the TV. • Check the antenna setup. Contact a Sony dealer for advice.
Double images or "ghosts"	• Use the fine tuning ("FINE") function. (See J) • Turn off or disconnect the booster if it is in use. • Check the antenna setup. Contact a Sony dealer for advice.
No color	• Select the appropriate color system. (See J) • Adjust the color level. (See K) • Check the antenna setup. Contact a Sony dealer for advice.
Abnormal color patches	• Keep external speakers or other electrical equipment away from the TV. Press ⏻ (main power) to turn off the TV for about 15 minutes, then turn it on again to demagnetize the TV.
The ⏻ (standby) indicator on your TV flashes red several times after every three seconds.	• Count the number of times the ⏻ (standby) indicator flashes. Press ⏻ (main power) to turn off your TV. Contact your nearest Sony service center.
TV cabinet creaks.	• Changes in room temperature sometimes make the TV cabinet expand or contract, making a noise. This does not indicate a malfunction.
A "boom" sound is heard when the TV is turned on.	• The TV's demagnetizing function is working. This does not indicate a malfunction.

H Remote control (KV-HA14N80)

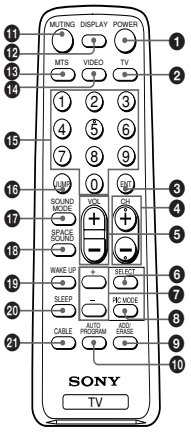

Button	Function	See
❶ POWER	Turn off temporarily or turn on the TV.	–
❷ TV	Display the TV program.	–
❸ ENT	Confirm input number	–
❹ CH +/–	Select channel number.	–
❺ VOL +/–	Adjust volume.	–
❻ SELECT	Select the desired items.	–
❼ +/–	Adjust items.	–
❽ PIC MODE	Select picture mode.	K
❾ ADD/ERASE	Preset channels manually.	J
❿ AUTO PROGRAM	Preset channels automatically.	J
⓫ MUTING	Mute the sound.	–
⓬ DISPLAY	Display on-screen information.	–
⓭ VIDEO	Select TV or video input.	–
⓮ 0 – 9	Input numbers.	–
⓯ JUMP	Jump to previous channel number.	–
Timer operations		
⓰ WAKE UP	Set TV to turn on automatically.	I
⓴ SLEEP	Set TV to turn off automatically.	I
㉑ CABLE	Select the cable TV.	–
Sound mode operations		
⓱ SOUND MODE	Select sound mode.	K
⓲ SPACE SOUND	Select space sound mode.	K
⓳ MTS	Not function for your TV.	–

H Remote control (KV-HA14M80/HA14P52)

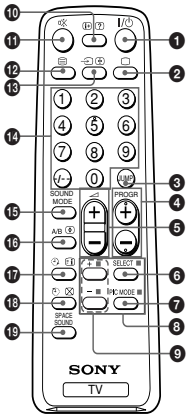

Button	Function	See
❶ I/⏻	Turn off temporarily or turn on the TV.	–
❷	Display the TV program.	–
❸ JUMP	Jump to previous program number.	–
❹ PROGR +/–	Select program number.	–
❺ +/–	Adjust volume.	–
❻ SELECT	Select the desired item.	–
❼ PIC MODE	Select picture mode.	K
❾ +/–	Adjust items.	–
❿	Display on-screen information.	–
⓫	Mute the sound.	–
⓭	Select TV or video input.	–
⓮ 0 – 9, -/--	Input numbers.	–
Timer operations		
⓰	Set TV to turn on automatically.	I
⓲	Set TV to turn off automatically.	I
⓯ SOUND MODE	Select sound mode.	K
⓳ SPACE SOUND	Select space sound mode.	K
Stereo/bilingual operations		
⓬ A/B	Select stereo/bilingual mode. (KV-HA14P52)	L
Teletext operations		
❽ ■ (red, green, yellow, blue)	Not function for your TV.	–
❿		
⓬		
⓮		
⓯		
⓱		
⓲		

I Setting the timers (KV-HA14N80)

You can turn on and off your TV by using the WAKE UP and SLEEP buttons respectively.

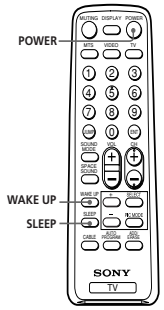

Setting the Wake Up timer

1 Press WAKE UP until the desired period of time appears on the screen.



The Wake Up timer starts immediately after you have set it.

2 Select the program number or video input you want to wake up to.

3 Press POWER, or set the Sleep timer if you want the TV to turn off automatically.

The WAKE UP indicator on the TV lights up orange when the TV goes into standby mode.

Setting the Sleep timer

Press SLEEP until the desired period of time appears on the screen.



The Sleep timer starts immediately after you have set it.

Notes

- You can also cancel the Wake Up and Sleep timers by turning off the TV's main power.
- If no buttons or controls are pressed for more than two hours after the TV is turned on using the Wake Up timer, the TV automatically goes into standby mode.

J Presetting channels (KV-HA14N80)

You can automatically preset cable TV, VHF or UHF broadcast channels, or manually preset the channels to receive new channels or channels with a weak signal.

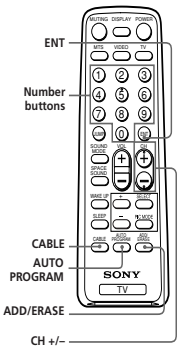

Presetting channels automatically

1 Press ⏻ on the TV to turn on the TV.

2 Press CABLE to select "CABLE: ON".

3 Press AUTO PROGRAM on the remote or press SELECT and CHANNEL + on the TV at the same time for one to two seconds to preset the channels automatically.

Presetting channels manually

1 Press the number buttons to select the desired channel number, then press ENT.

2 Press ADD/ERASE.

"+" appears beside the channel number, indicating that presetting is complete.

Notes

- If you select "CABLE: ON", you will be able to receive 125 cable TV channels. If there are no cable TV channels, you will receive VHF broadcast channels.
- If you select "CABLE: OFF ", you will be able to receive 68 VHF or UHF broadcast channels only.

I Setting the timers (KV-HA14M80/HA14P52)

You can turn on and off your TV by using the ◴ and ◷ buttons respectively.

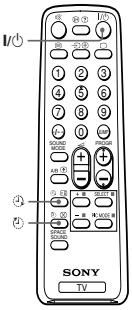

Setting the Wake Up timer

1 Press ◴ until the desired period of time appears on the screen.



The Wake Up timer starts immediately after you have set it.

2 Select the program number or video input you want to wake up to.

3 Press I/⏻, or set the Sleep timer if you want the TV to turn off automatically.

The ◴ indicator on the TV lights up orange when the TV goes into standby mode.

Setting the Sleep timer

Press ◷ until the desired period of time appears on the screen.



The Sleep timer starts immediately after you have set it.

Notes

- You can also cancel the Wake Up and Sleep timers by turning off the TV's main power.
- If no buttons or controls are pressed for more than two hours after the TV is turned on using the Wake Up timer, the TV automatically goes into standby mode.

J Presetting channels (KV-HA14M80/HA14P52)

You can automatically preset up to 100 TV channels in numerical sequence from program number 1, or manually preset desired channels and channels that cannot be preset automatically.

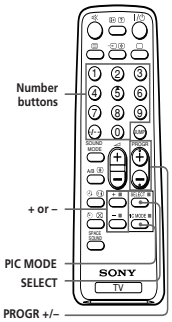

Presetting channels automatically from a specified program number

1 Press SELECT until "AUTO PROGRAM" appears on the screen.

2 Press + or – once to enter the "AUTO PROGRAM" mode.

The on-screen display will start flashing.

3 Press PROGR +/– or the number buttons until the desired program number appears on the screen.

4 Press + or – to start presetting channels automatically.

Presetting channels manually

1 Press SELECT until "MANUAL PROGRAM" appears on the screen.

2 Press + or – once to enter the "MANUAL PROGRAM" mode.

3 Press PROGR +/– or the number buttons until the desired program number appears on the screen.

4 Press + or – until the desired channel picture appears on the screen.

5 To preset other channels manually, repeat steps 3 to 4.

Presetting channels (continued) (KV-HA14N80)

To change the color system setting

If the color is abnormal when receiving programs through the video input terminal.

(1) Press SELECT until "COLOR SYS" appears on the screen.

(2) Press + or – to select the appropriate color system until the color is optimal.

AUTO → PAL → NTSC3.58 → NTSC4.43

To skip program numbers

(1) Press CH +/– until the unused or unwanted channel number appears on the screen.

(2) Press ADD/ERASE to skip the unused or unwanted channel number.

"–" appears beside the channel number, indicating that disabling is complete.

Note

- To restore the skipped channel number again, preset the channel automatically or manually.

K Customizing the picture and sound (KV-HA14N80)

You can customize the picture and sound by selecting the picture and sound modes or by adjusting its settings.

You can change the sound effect by selecting the space sound mode.

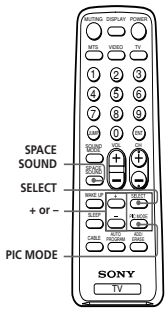

Selecting the picture mode

Press PIC MODE to select the desired picture mode.

Select	To
"DYNAMIC"	view high contrast pictures.
"STANDARD"	view normal contrast pictures.
"SOFT"	view mild pictures.

Selecting the sound mode

▶ **KV-HA21N80/HA14N80 only**

Press SOUND MODE to select the desired sound mode.

Select	To
"♪ DYNAMIC"	listen to dynamic and clear sound that emphasizes the low and high sound.
"♪ DRAMA"	listen to sound that emphasizes vocals and background music.
"♪ SOFT"	listen to soft sound.

Adjusting the picture and sound settings

1 Press SELECT until the desired setting appears.

Each time you press SELECT, the setting item will change as follows:

PICTURE → COLOR → BRIGHT → HUE → BALANCE ← TREBLE ← BASS ← SHARP

2 Press + or – to adjust the item.

3 To adjust other items, repeat steps 1 to 2.

Notes

- "BASS", "TREBLE" and "BALANCE" can be adjusted for KV-HA21N80/HA14N80 only.
- "HUE" can be adjusted for the NTSC color system only.
- Reducing "SHARP" can also reduce picture noise.

Presetting channels (continued) (KV-HA14M80/HA14P52)

To change the TV system setting (KV-HA14M80 Only)

If the picture or sound is abnormal when receiving programs through the ℸ (antenna input) terminal

(1) Press SELECT until "TV SYS" appears on the screen.

(2) Press + or – to select the appropriate TV system until the picture or sound quality is optimal.

B/G → I → D/K → M

To change the color system setting

If the color is abnormal when receiving programs through the ℸ (antenna input) terminal or the ⇦ (video input) terminal

(1) Press SELECT until "COLOR SYS" appears on the screen.

(2) Press + or – to select the appropriate color system until the color is optimal.

AUTO → PAL → SECAM → NTSC3.58 → NTSC4.43

To skip program numbers

(1) Press PROGR +/– or the number buttons until the unused or unwanted program number appears on the screen.

(2) Press SELECT until "MANUAL PROGRAM" appears on the screen.

(3) Press + or – once to enter the "MANUAL PROGRAM" mode.

(4) Press PIC MODE to skip the unused or unwanted program number.

(5) Press SELECT to exit the "MANUAL PROGRAM" mode.

Note

- To restore the skipped program number again, preset the channel automatically or manually.

To use the fine tuning function

The fine tuning (FINE) function may help to reduce the following problems: double images and lines moving across the TV screen.

You can use the fine tuning function as below:

(1) Select the program number you want to adjust.

(2) Press SELECT until "MANUAL PROGRAM" appears on the screen.

(3) Press + or – once to enter the "MANUAL PROGRAM" mode.

(4) Press ⊞ to display "FINE" on the screen.

(5) Press + or – continuously until the above problems are minimized. The + or – icon on the screen flashes while tuning.

(6) Press SELECT to exit the "MANUAL PROGRAM" mode.

K Customizing the picture and sound (KV-HA14M80/HA14P52)

You can customize the picture and sound by selecting the picture and sound modes or by adjusting its settings.

You can change the sound effect by selecting the space sound mode.

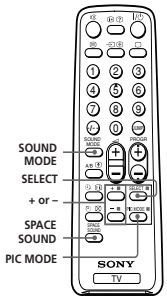

Selecting the picture mode

Press PIC MODE to select the desired picture mode.

Select	To
"DYNAMIC"	view high contrast pictures.
"STANDARD"	view normal contrast pictures.
"SOFT"	view mild pictures.

Selecting the sound mode

Press SOUND MODE to select the desired sound mode.

Select	To
"♪ DYNAMIC"	listen to dynamic and clear sound that emphasizes the low and high sound.
"♪ DRAMA"	listen to sound that emphasizes vocals and background music.
"♪ SOFT"	listen to soft sound.

Adjusting the picture and sound settings

1 Press SELECT until the desired setting appears.

Each time you press SELECT, the setting item will change as follows:

PICTURE → COLOR → BRIGHT → HUE → BALANCE ← TREBLE ← BASS ← SHARP

2 Press + or – to adjust the item.

3 To adjust other items, repeat steps 1 to 2.

Notes

- "HUE" can be adjusted for the NTSC color system only.
- Reducing "SHARP" can also reduce picture noise.

Customizing the picture and sound (continued)

Selecting the space sound mode

Press SPACE SOUND.

Select	To
"ON"	listen to monaural sound with a stereo-like effect.
"OFF"	turn off space sound mode.

Note

- You can also turn space sound on or off using the SELECT and + or – buttons.

L Enjoying stereo or bilingual programs (KV-HA14P52 only)

You can enjoy stereo sound or bilingual programs of NICAM and A2 stereo systems by using the A/B button.

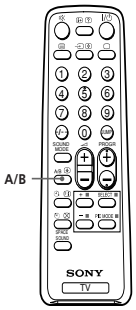

When receiving a NICAM program
▶KV-HA21M60 only

Broadcasting	On-screen display (Selected sound)
NICAM stereo	NICAM (Stereo sound) → MONO (Regular sound)
NICAM bilingual	NICAM MAIN (Main sound) → NICAM SUB (Sub sound) → MONO (Regular sound)
NICAM monaural	NICAM MAIN (Main sound) → MONO (Regular sound)

When receiving an A2 program

Broadcasting	On-screen display (Selected sound)
A2 stereo (KV-HA21M60 only)	MONO (Regular sound) → STEREO (Stereo sound)
A2 bilingual	MAIN (Main sound) → SUB (Sub sound)

Notes

- If the sound is distorted when receiving a monaural program through the 𝍐 (antenna) terminal, press A/B repeatedly until "MONO" appears on the screen. To cancel the monaural sound setting, press A/B again until "AUTO" appears on the screen.

KV-HA21M60 only

- If the stereo sound is noisy when receiving a stereo program, select "MONO". The sound becomes monaural, but the noise is reduced.

KV-HA21P52/HA14P52 only

- When viewing a non-bilingual program, select the main sound. Otherwise, you may hear some noise or abnormal sound.

SECTION 2
DISASSEMBLY

2-1. REAR COVER REMOVAL

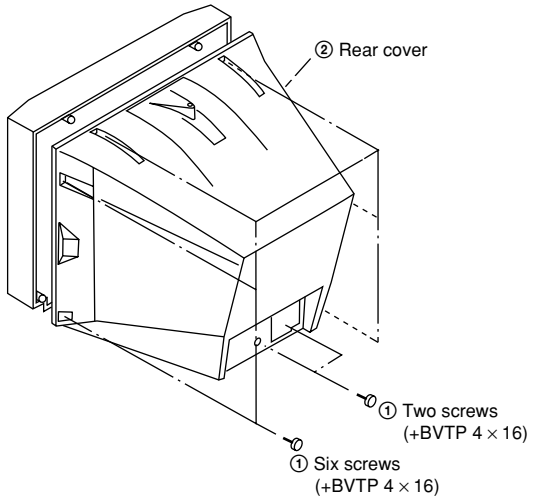

2-2. SPEAKER REMOVAL

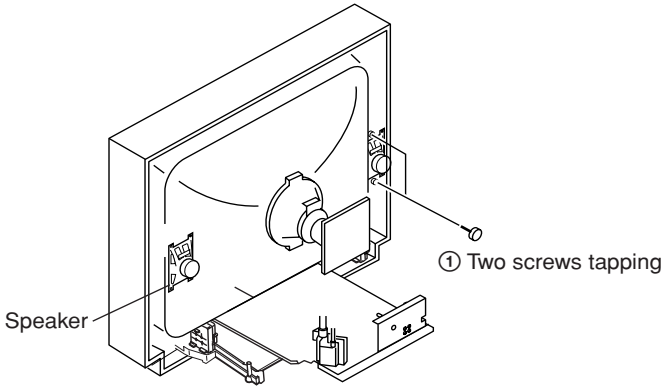

2-3. CHASSIS ASSY REMOVAL

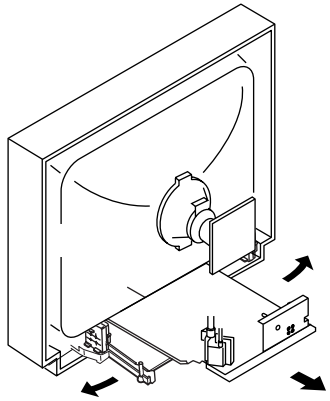

2-4. SERVICE POSITION

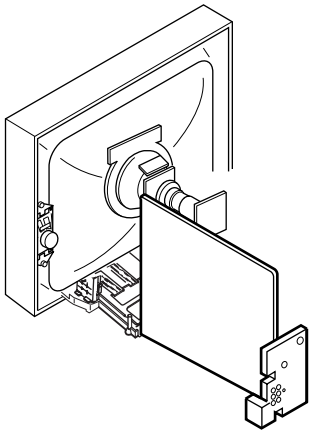

Caution: Do not take out CRT support block while TV set in standing position.

Note: Undress necessary wires that creates tension while placing the chassis into Service Position.

2-5. TERMINAL BRACKET REMOVAL

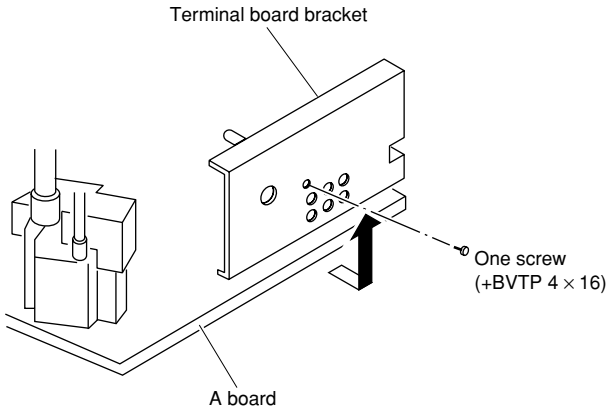

2-6. REPLACEMENT OF PARTS

For replacements of light guide,unscrew them, exchange with new parts and fix them with screws respectively.

2-6-1. Replacement of Light Guide

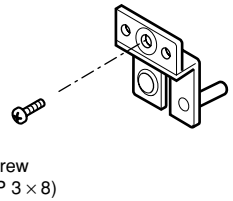

2-6-2. Replacement of Power Button

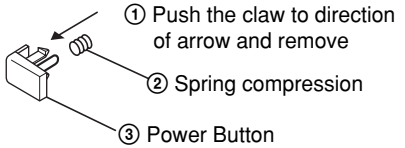

2-7. PICTURE TUBE REMOVAL

Note:

- Please make sure the TV set is not in standing position before removing necessary CRT support located on bottom right and left.

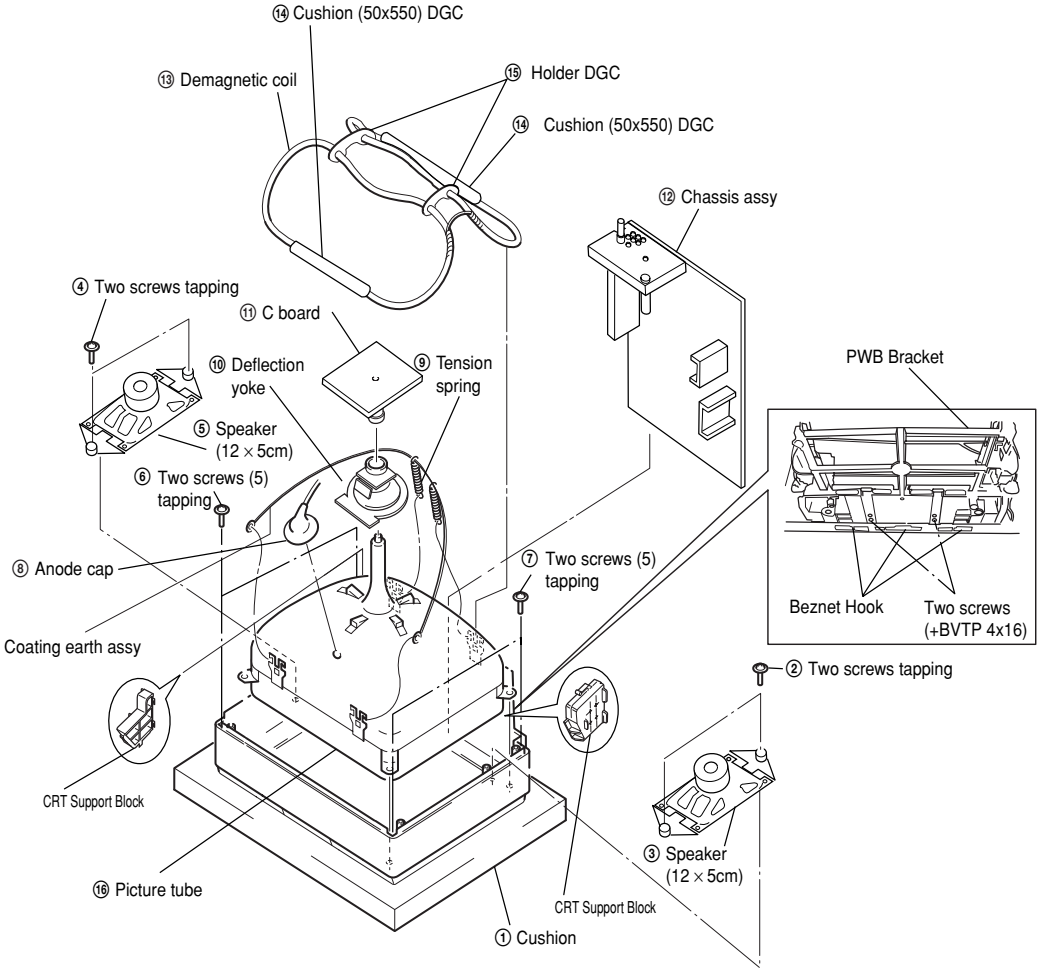

• REMOVAL OF ANODE-CAP

NOTE : After removing the anode, short circuit the anode of the picture tube and the anode cap to the metal chassis, CRT shield or carbon paint on the CRT.

• REMOVING PROCEDURES

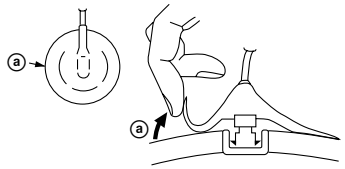

① Turn up one side of the rubber cap in the direction indicated by the arrow ⓐ.

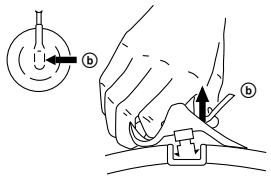

② Using a thumb pull up the rubber cap firmly in the direction indicated by the arrow ⓑ.

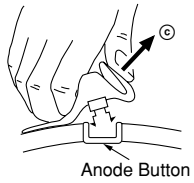

③ When one side of the rubber cap is separated from the anode button, the anode-cap can be removed by turning up the rubber cap and pulling it up in the direction of the arrow ⓒ.

- **HOW TO HANDLE AN ANODE-CAP**

① Do not damage the surface of anode-caps with sharp shaped objects.
② Do not press the rubber too hard so as not to damage the inside of anode-cap. A metal fitting called the shatter-hook terminal is built into the rubber.
③ Do not turn the foot of rubber over too hard. The shatter-hook terminal will stick out or damage the rubber.

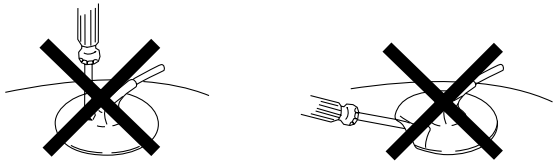

SECTION 3
SET-UP ADJUSTMENTS

The following adjustments should be made when a complete realignment is required or a new picture tube is installed.

These adjustments should be performed with rated power supply voltage unless otherwise noted.

Controls and switches should be set as follows unless otherwise noted:

PICTURE control ..... normal
BRIGHTNESS control ..... normal

Perform the adjustments in the following order :

1. Beam Landing
2. Convergence
3. Focus
4. White Balance

Note : Test Equipment Required.

1. Pattern Generator
2. Degausser
3. Oscilloscope

Preparation :

In order to reduce the influence of geomagnetism on the set's picture tube, face it east or west.
Switch on the set's power and degauss with the degausser.

3-1. BEAM LANDING

1. Input a white signal with the pattern generator.
   Contrast } normal
   Brightness
2. Set the pattern generator raster signal to a green raster.
3. Move the deflection yoke to the rear and adjust with the purity control so that the green is at the center and the blue and the red take up equally sized areas on each side. (See Figures 3-1 through 3-4.)
4. Move the deflection yoke forward and adjust so that the entire screen is green. (See Figure 3-1.)
5. Switch the raster signal to blue, then to red and verify the condition.
6. When the position of the deflection yoke has been decided, fasten the deflection yoke with the screws and DY spacers.
7. If the beam does not land correctly in all the corners, use a magnet to adjust it. (See Figure 3-4.)

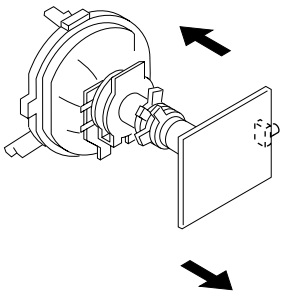

Fig. 3-1

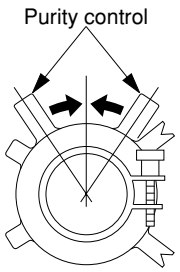

Fig. 3-2

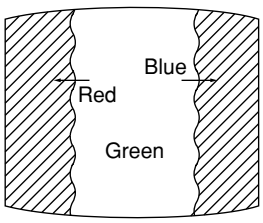

Fig. 3-3

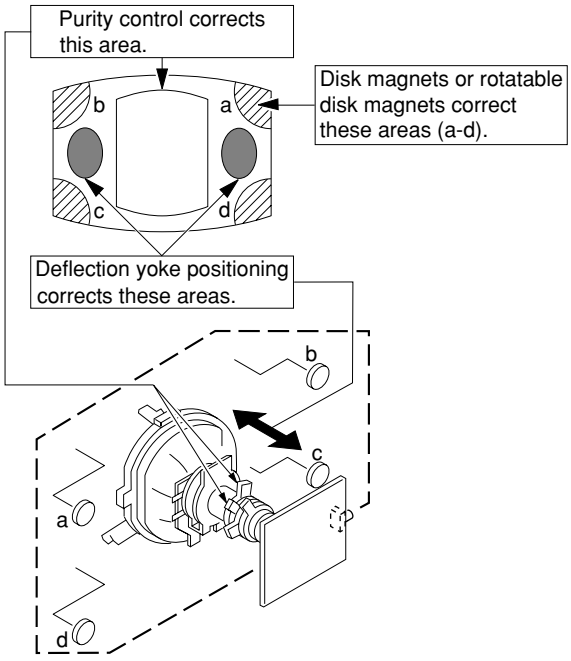

Fig. 3-4

3-2. CONVERGENCE

Preparation :

- Before starting this adjustment, adjust the focus, horizontal size and vertical size.
- Receive dot/hatch signal.
- Pic mode: Soft.

(1) Horizontal and Vertical Static Convergence

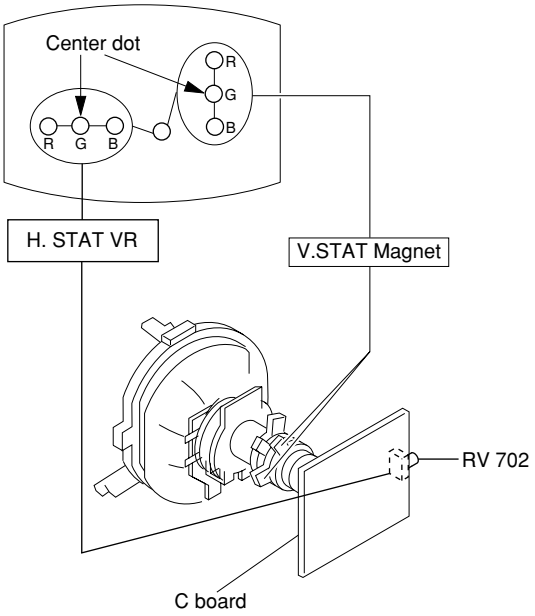

1. (Moving vertically), adjust the V.STAT magnet so that the red, green and blue dots are on top of each other at the center of the screen.
2. (Moving horizontally), adjust the H.STAT VR control so that the red, green and blue dots are on top of each other at the center of the screen.
3. If the H.STAT variable resistor cannot bring the red, green and blue dots together at the center of the screen, adjust the horizontal convergence with the H.STAT variable resistor and the V.STAT magnet in the manner given below.
   (In this case, the H.STAT variable resistor and the V.STAT magnet influence each other, so be sure to perform adjustments while tracking.)

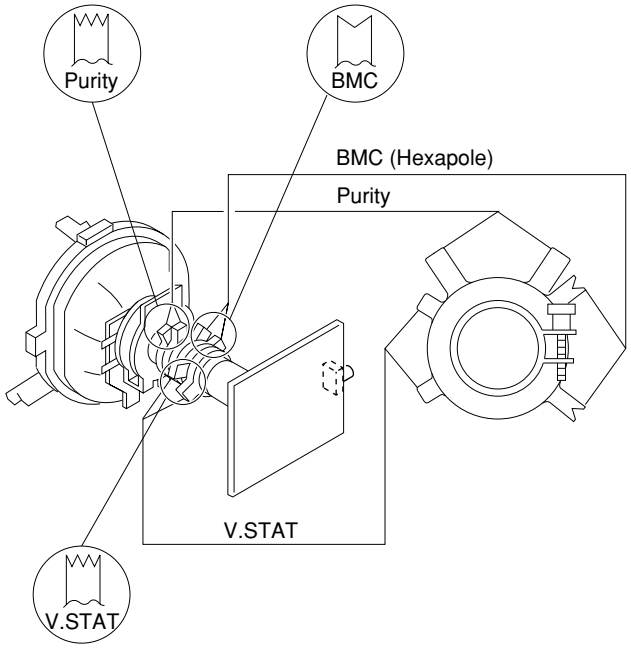

- Operation of V. Stat magnet
  If the V. Stat magnet is moved in the "a" and "b" arrows, the red, green and blue dots move as shown below.

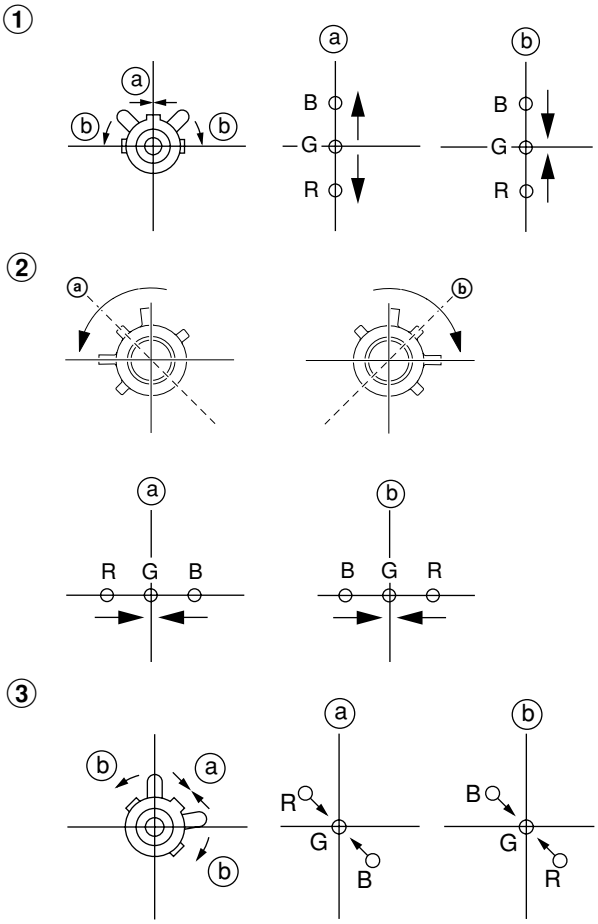

④ BMC (Hexapole) Magnet.
If the red, green and blue dots are not balanced or aligned, then use the BMC magnet to adjust in the manner described below.

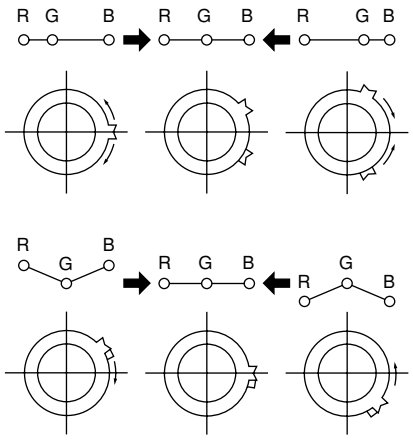

(2) Dynamic Convergence Adjustment

Preparation:

Before starting this adjustment, adjust the horizontal static convergence and the vertical static convergence

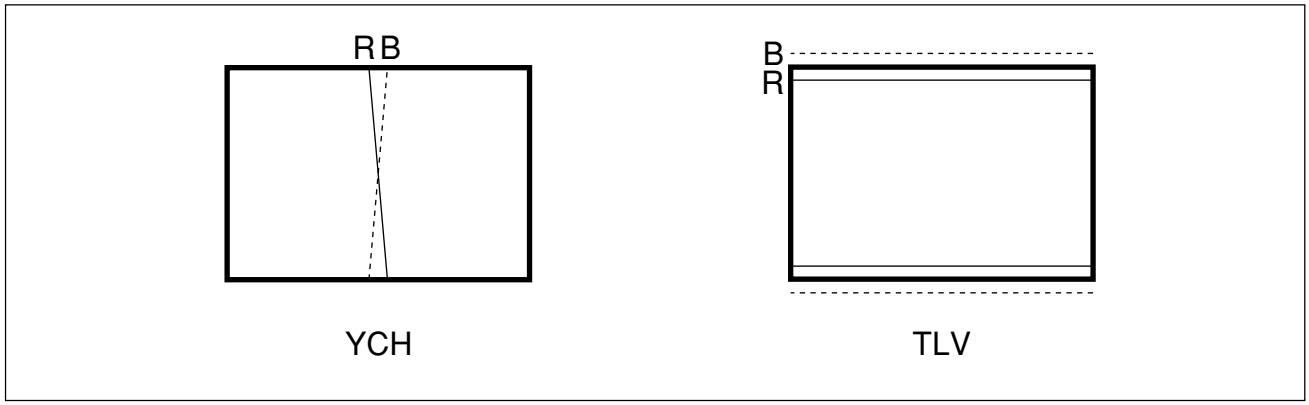

TLH	Insert	TLH	Correction Plate to DY Pocket (Left or Right)
YCH	Rotate	YCH	VOL on DY
TLV	Rotate	TLV	VOL ON DY
XCV	Rotate	XCV	Adj core on DY

ON DY:

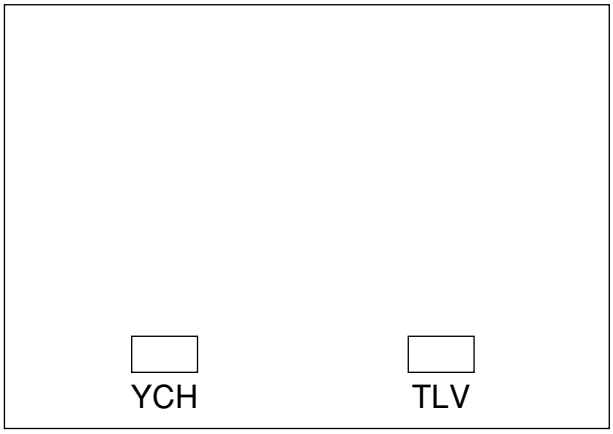

(3) Screen-corner Convergence

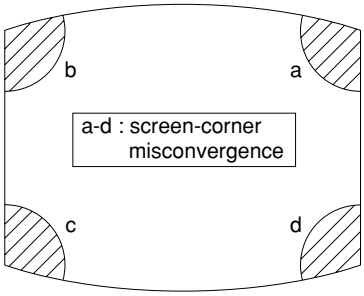

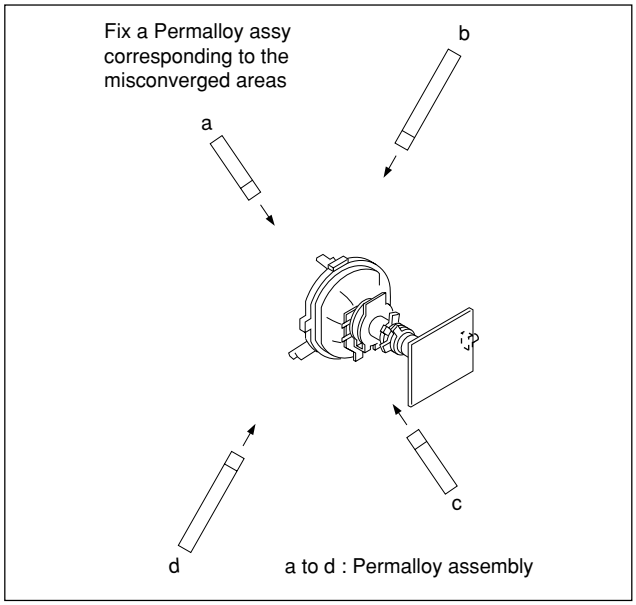

3-3. FOCUS ADJUSTMENT

FOCUS adjustment should be completed before W/B adjustment.

1. Receive digital monoscope pattern.
2. Set "Picture Mode" to "DYNAMIC".
3. Adjust focus VR so that the center of screen becomes just focus.
4. Change the receiving signal to white pattern and blue back.
5. Confirm magenta ring is not noticeable. Incase magenta is very obvious, adjust focus VR to take balance of magenta ring and focus.

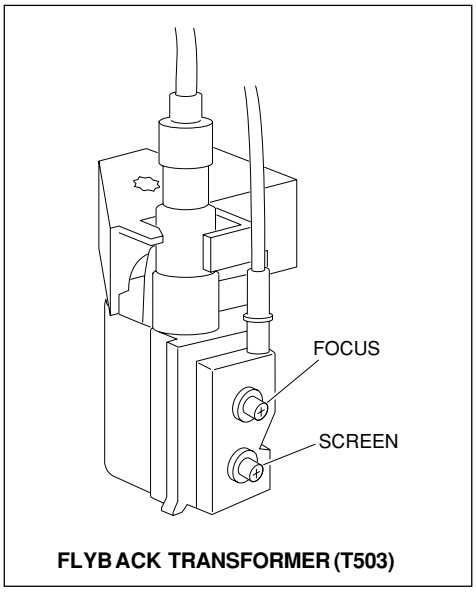

FLYBACK TRANSFORMER (T503)

3-4. G2 (SCREEN) AND WHITE BALANCE ADJUSTMENTS

1. G2 (SCREEN) ADJUSTMENT

1) Set the PICTURE to normal.
2) Put to VIDEO input mode without signals.
3) Connect R, G and B of the C board cathode to the oscilloscope.
4) Adjust BRIGHTNESS to obtain the cathode voltage to the value below.
5) Adjust G2 (screen) on the FBT until picture shows the point before cut off.

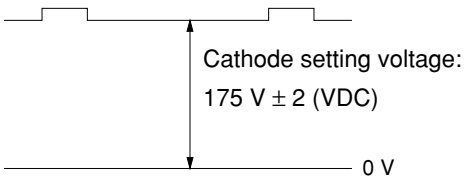

2.a) WHITE BALANCE ADJUSTMENT

1) Set to Service Mode (Refer Section 4-1: ADJUSTMENTS WITH COMMANDER).
2) Input white raster signal.
3) Set (ABL) and IF (VP2) service mode to 00.
4) Set Picture to DYNAMIC.
5) Select OB (RDR) with [1] and [4], and set the level to 25 with [3] and [6] for best white balance.
6) Select OC 'GDR' and OD 'BDR' with [1] and [4], and adjust the level with [3] and [6] for the best white balance.
7) Write into the memory by pressing [MUTING] then [0].
8) Set back 'ABL' and IF 'VP2' service mode to original data.

2.b) SUB BRIGHT ADJUSTMENT

1) Set to service mode.
2) Set (ABL) and IF (VP2) service mode to 00
3) Input a staircase signal of black to white from the pattern generator.
4) BRIGHTNESS .... 50%.
   PICTURE ..... MINIMUM
5) Select OE 'SBR' with [1] and [4], and adjust OE 'SBR' level with [3] and [6] so that the second stripe from the right is dimly lit.
6) Write into the memory by pressing [MUTING] then [0].
7) Set back (ABL) and IF (VP2) service mode to original data.

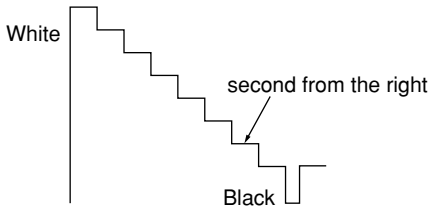

SECTION 4
CIRCUIT ADJUSTMENTS

4-1. ADJUSTMENT WITH COMMANDER

Service adjustments to this model can be performed using the supplied Remote Commander RM-968 and RM-969.

a. ENTERING SERVICE MODE

With the unit on standby

→ [DISPLAY] → [5] → [VOL (+)] → [POWER]

This operation sequence puts the unit into service mode.

The screen display is :

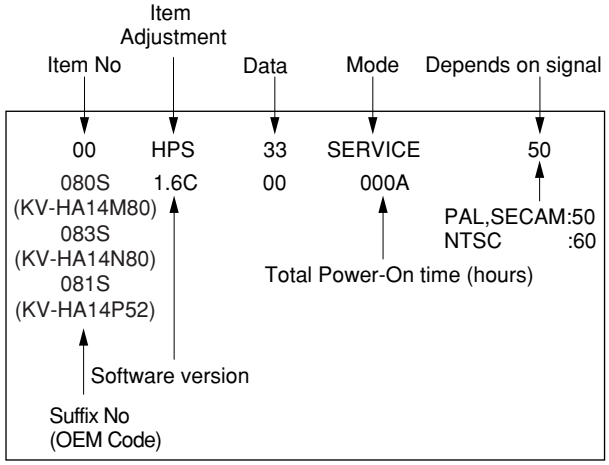

b. METHOD OF CANCELLATION FROM SERVICE MODE

Set the standby condition (Press [POWER] button on the commander), then press [POWER] button again, hereupon it becomes TV mode.

c. METHOD OF WRITE INTO MEMORY

1) Set to Service Mode.
2) Press [1] (UP) and [4] (DOWN), to select the adjustment.
4) Press [MUTING] button to indicate WRITE on the screen.
5) Press [0] button to write into memory.

d. MEMORY WRITE CONFIRMATION METHOD

1) After adjustment, pull out the plug from AC outlet, and then plug into AC outlet again.
2) Turn the power switch ON and set to Service Mode.
3) Call the adjusted items again to confirm adjustments were made.

[1], [4]	Select the adjustment item.
↓	
[3], [6]	Raise/lower the data value.
↓	
[MUTING]	Writes.
↓	
[0]	Executes the writing.

e. OTHER FUNCTION VIA REMOTE COMMANDER

[7], [0]	All the data becomes the values in memory.
[8], [0]	All user control goes to the standard state.
[5], [0]	Service data initialization (Be sure not to use usually.)
[2], [0]	Copy and write all data.
[MUTE], [0]	Write 50Hz adjustment data to 60Hz or vice versa.

4-2. ADJUSTMENT METHOD

Item Number 00 HPS

This explanation uses H Shift as an example.

1. Select “00 HPS” with the [1] and [4] buttons.
2. Raise/lower the data with the [3] and [6] buttons.
3. Select the optimum state. (The standard is 1F for PAL reception.)
4. Write with the [MUTING] button. (The display changes to WRITE.)
5. Execute the writing with the [0] button. (The WRITE display will be changed to red color while excuting, and back to SERVICE.)

Example on screen display :-

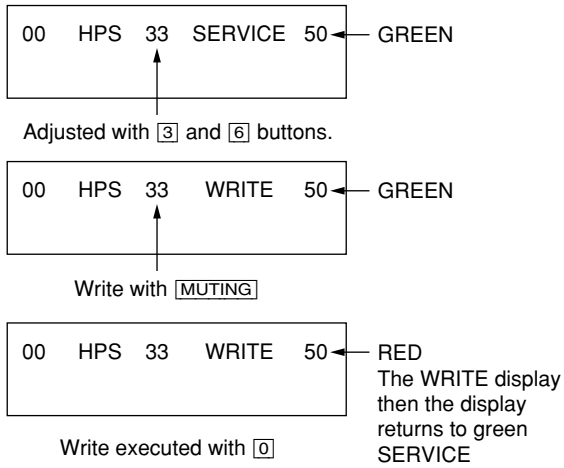
00 HPS 33 SERVICE 50
GREEN
Adjusted with 3 and 6 buttons.
00 HPS 33 WRITE 50
GREEN
Write with MUTING
00 HPS 33 WRITE 50
RED
The WRITE display then the display returns to green SERVICE
Write executed with 0

Use the same method for all Items. Use [1] and [4] to select the adjustment item, use [3] and [6] to adjust, write with [MUTING], then execute the write with [0].

Note : 1. In [WRITE], the data for all items are written into memory together.
2. For adjustment items that have different standard data between 50Hz or 60Hz, be sure to use the respective input signal after adjustment.

Adjustment Item Table (KV-HA14N80)

Functionality		Initial	Range	Function	Table & Note	Device Name (Slave Address)	Common		50		60		SECAM		NTSC		PAL		TV		Video		Teletext		M system		Non-M system		Dynamic		Others	
No.	Name																															
00	HPS	24	3F	H Shift	50/60Hz	TDA8843 / 44 (8A)			A040	2A	A04A	2A																				
01	HSZ	23	3F	H Size	50/60Hz				A041	1F	A04B	1F																				
02	PAP	21	3F	Pin Amplitude	50/60Hz				A042	1F	A04C	1F																				
03	CPN	29	3F	Corner Pin	50/60Hz				A043	1F	A040	1F																				
04	TLT	20	3F	Tilt	50/60Hz				A044	1F	A04E	1F																				
05	VSL	20	3F	V Slope	50/60Hz				A045	**26**	A04F	**26**																				
06	VAP	1D	3F	V Amplitude	50/60Hz				A046	0F	A050	0F																				
07	SCO	20	3F	S Correction	50/60Hz				A047	0F	A051	0F																				
08	VPS	20	3F	V Shift	50/60Hz				A048	1F	A052	1F																				
09	VZM	19	3F	Vertical Zoom			A05A	**19**																								
0A	VSC	20	3F	Vertical Scroll	50/60Hz				A400	**1F**	A401	**1F**																				
0B	RDR	25	3F	R Drive	DYNAMIC/Others																								A056	**1F**	A428	**24**
0C	GDR	25	3F	G Drive	DYNAMIC/Others																								A057	25	A429	25
0D	BDR	25	3F	B Drive	DYNAMIC/Others																								A058	25	A42A	20
0E	SBR	4B	7F	Sub Brightness			A02C	58																								
0F	PMX	27	3F	Picture Maximum Data	TV/Video/Teletext														A028	20	A029	20	A02A	20								
10	PMI	05	3F	Picture Minimum Data			A02B	**04**																								
11	SHU	05	0F	Sub Hue	TV/Video														A02D	07	A427	09										
12	SSH	01	03	Sub Sharpness	TV/Video														A02E	**01**	A02F	**03**										
13	SC1	1F	3F	Sub Color Lower	50/60Hz				A031	20	A033	1C																				
14	SC2	0B	3F	Sub Color Higher	50/60Hz				A030	**08**	A032	**0B**																				
15	FO	00	03	01 Time Constant	TV/Video/Teletext														A037	**00**	A03A	**00**	A03D	**00**								
16	AGT	30	3F	AGC Take Over	TV/Video/Teletext														A039	00	A03C	00	A03F	00								
17	VSW	0	1	Video Mute Switch	TV/Video/Teletext														A039	**00**	A03C	**01**	A03F	**00**								
18	FOR	00	03	Forced Field Frequency			A055	**03**																								
19	DL	0	1	De-interface			A055	**00**																								
1A	POC	0	1	Fixed 01 Synchro. Mode			A07E	**00**																								
1B	COR	0	1	Noise Coring	TV/Video/Teletext														A038	**00**	A03B	**00**	A03E	**00**								
1C	RBL	0	1	RGB Blanking	TV/Video/Teletext														A038	**00**	A03B	**00**	A03E	**00**								
1D	YDL	08	0F	Y-Delay	PAL/NTSC/SECAM								A40A	**06**	A40B	**0C**	A409	**0A**														
1E	VP1	00	FF	Extra Bits (see below)			A42C	**00**																								
1F	VP2	01	FF	Extra Bits (see below)			A42D	**01**																								
20	VP3	08	FF	Extra Bits (see below)			A42E	**0F**																								
21	ING	00	0F	Input Gain	M System/non-M/Video	TDA7438 (88)															A061	00			A060	00	A05F	00				
22	VOM	01	3F	Volume Output Gain	M System only		A062	00																								
23	BCS	01	03	Bass Center Shift			A424	**01**																								
24	TCS	01	03	Treble Center Shift			A425	**02**																								
25	BKP	00	3F	Picture Data at Blanking OFF		Other Control	A077	**00**																								
26	ODL	10	FF	Power ON Delay			A07A	**10**																								
27	OSH	0A	3F	OSD H Position			A078	0A																								
28	TSY	00	03	TV System at Auto Preset	00 : B/G, 01 : I, 02 : D/K, 03 : M		A40C	**00**																								
29	DKS	01	01	D/K Stereo enable/disable			A07E	**01**																								
2A	MUT	00	01	Muting on/off at No Sync			A07E	**00**																								
2B	ABL	00	01	Bright ABL Switch			A07E	**01**																								
2C	SCM	00	01	SECAM Trap active/inactive			A07E	**01**																								
2D	SLS	00	01	Activate SL.OR.IFI Sync			A07E	**01**																								
2E	SSV	02	07	Space Sound Volume Step Up			A421	**02**																								
2F	VPW	28	7F	Timer of Video Processor start up wait			A422	**35**																								
30	SCA	01	01	Shipping Condition of Cable on/off			A430	**01**																								
31	SCH	01	7F	Shipping Condition of Channel Number			A430	**01**																								
32	OP1	2F	FF	Optional Flags 0 (see below)			A421	**02**																								
33	OP2	0F	FF	Optional Flags 1 (see below)			A07C	9D																								
34	OP3	00	FF	Optional Flags 2 (see below)			A07D	A0																								

NOTE:

- Bold item :- are fixed data
- Standard data listed on the Adjustment Item Table are reference values, therefore it may be different for each model and for each mode.
- Note for Different Data Those are the standard data values written on the microprocessor. Therefore, the data values of the modes and stored respectively in the memory. In case of a device replacement, adjustment by rewriting the data value is necessary for some items.

Adjustment Item Table (KV-HA14M80/HA14P52)

Functionality		Initial	Range	Function	Table & Note	Device Name (Slave Address)	Common		50		60		SECAM		NTSC		PAL		TV		Video		Teletext		M system		Non-M system		Dynamic		Others	
No.	Name																															
00	HPS	2A	3F	H Shift	50/60Hz	TDA8843 / 44 (8A)			A040	2A	A04A	2A																				
01	HSZ	1F	3F	H Size	50/60Hz				A041	1F	A04B	1F																				
02	PAP	1F	3F	Pin Amplitude	50/60Hz				A042	1F	A04C	1F																				
03	CPN	1F	3F	Corner Pin	50/60Hz				A043	1F	A04D	1F																				
04	TLT	1F	3F	Tilt	50/60Hz				A044	1F	A04E	1F																				
05	VSL	26	3F	V Slope	50/60Hz				A045	**26**	A04F	**26**																				
06	VAP	0F	3F	V Amplitude	50/60Hz				A046	0F	A050	0F																				
07	SCO	0F	3F	S Correction	50/60Hz				A047	0F	A051	0F																				
08	VPS	1F	3F	V Shift	50/60Hz				A048	1F	A052	1F																				
09	VZM	19	3F	Vertical Zoom			A05A	**19**																								
0A	VSC	1F	3F	Vertical Scroll	50/60Hz				A400	**1F**	A401	**1F**																				
0B	RDR	1F	3F	R Drive	DYNAMIC/Others																								A056	**1F**	A428	**24**
0C	GDR	25	3F	G Drive	DYNAMIC/Others																								A057	25	A429	25
0D	BDR	25	3F	B Drive	DYNAMIC/Others																								A058	25	A42A	20
0E	SBR	58	7F	Sub Brightness			A02C	58																								
0F	PMX	20	3F	Picture Maximum Data	TV/Video/Teletext														A028	20	A029	20	A02A	20								
10	PMI	04	3F	Picture Minimum Data			A02B	**04**																								
11	SHU	07	0F	Sub Hue	TV/Video														A02D	07	A427	09										
12	SSH	01	03	Sub Sharpness	TV/Video														A02E	**01**	A02F	**03**										
13	SC1	20	3F	Sub Color Lower	50/60Hz				A031	20	A033	1C																				
14	SC2	08	3F	Sub Color Higher	50/60Hz				A030	**08**	A032	**0B**																				
15	FO	00	03	01 Time Constant	TV/Video/Teletext														A037	**00**	A03A	**00**	A03D	**00**								
16	AGT	00	3F	AGC Take Over	TV/Video/Teletext														A039	00	A03C	00	A03F	00								
17	VSW	00	01	Video Mute Switch	TV/Video/Teletext														A039	**00**	A03C	**01**	A03F	**00**								
18	FOR	03	03	Forced Field Frequency			A055	**03**																								
19	DL	00	01	De-interlace			A055	**00**																								
1A	POC	00	01	Fixed 01 Synchro. Mode			A07E	**00**																								
1B	COR	01	01	Noise Coring	TV/Video/Teletext														A038	**01**	A03B	**00**	A03E	**00**								
1C	RBL	00	01	RGB Blanking	TV/Video/Teletext														A038	**00**	A03B	**00**	A03E	**00**								
1D	YDL	0A	0F	Y-Delay	PAL/NTSC/SECAM								A40A	**06**	A40B	**0C**	A409	**0A**														
1E	VP1	00	FF	Extra Bits (see below)			A42C	**00**																								
1F	VP2	01	FF	Extra Bits (see below)			A42D	**01**																								
20	VP3	0F	FF	Extra Bits (see below)			A42E	**0F**																								
21	WST	15	FF	W/G Stereo Threshold		MSP3417G(80)	A067	**15**																								
22	WBT	EC	FF	W/G Bilingual Threshold			A064	**EC**																								
23	WLL	05	FF	W/G Monaural Threshold			A066	**05**																								
24	WAC	01	0F	W/G Agreement count			A06F	**01**																								
25	WDL	30	FF	W/G Search Delay			A070	**30**																								
26	NDL	20	FF	NICAM Search Delay			A071	**20**																								
27	SDL	10	FF	Stereo Status Read Delay			A065	**10**																								
28	AGC	01	01	AGC Switch auto/constant			A068	**01**																								
29	REL	28	3F	AGC Gain at Constant Mode			A068	**28**																								

Adjustment Item Table (KV-HA14M80/HA14P52)

Functionality		Initial	Range	Function	Table & Note	Device Name (Slave Address)	Common		50		60		SECAM		NTSC		PAL		TV		Video		Teletext		M system		Non-M system		Dynamic		Others	
No.	Name																															
2A	CRM	00	01	Carrier Muting on/off			A06C	**00**																								
2B	ACO	01	01	Audio Clock-out on/off			A06C	**01**																								
2C	FP	1B	7F	FM Prescale for B/G, I, D/K			A069	**1B**																								
2D	FPM	32	7F	FM Prescale for M			A06D	**32**																								
2E	FH	36	7F	FM Prescale for HDEV (non-M)			A063	**36**																								
2F	FHM	65	7F	FM Prescale for HDEV (M)			A075	**65**																								
30	WGP	1C	7F	W/G Prescale			A06A	**1C**																								
31	NIP	7F	7F	NICAM Prescale			A06B	**7F**																								
32	ERR	50	FF	Auto FM Switch Threshold			A06E	**50**																								
33	VOL	6D	7F	DFP Volume Maximum			A072	6D																								
34	ING	00	0F	Input Gain	M System/non-M/Video	TDA7438(88)															A061	00			A060	00	A05F	00				
35	VOM	00	3F	Volume Output Gain	M System only		A062	00																								
36	BCS	01	03	Bass Center Shift			A424	**01**																								
37	TCS	02	03	Treble Center Shift			A425	**02**																								
38	TXH	2A	FF	Horizontal Display Position		SAA5264(58)	A41A	**2A**																								
39	TXV	27	3F	Vertical Display Position (line offset from V-sync)			A41B	**27**																								
3A	THD	00	7F	H-sync Active Edge Shift			A41C	**00**																								
3B	TVD	3F	7F	V-sync Active Edge Shift			A41D	**3F**																								
3C	HPL	01	01	H-sync Polarity Configuration	00:Positive, 01:Negative		A41E	**01**																								
3D	VPL	01	01	V-sync Polarity Configuration	00:Positive, 01:Negative		A41E	**01**																								
3E	FPL	01	01	Filed Polarity Configuration	00:V-sync second half line, 01:V-sync first half line		A41F	**01**																								
3F	FMD	00	03	Force Mode	00:Auto, 01:Default, 02:Fastext, 03:Top mode		A41E	**00**																								
40	TBR	08	0F	Set Teletext RGB Brightness			A41E	**08**																								
41	NOP	01	0F	National Option Table Configuration			A41F	**01**																								
42	TCH	01	03	Twisted Character Set Configuration			A41F	**01**																								
43	BKP	00	3F	Picture Data at Blanking OFF		Other Control	A077	**00**																								
44	ODL	10	FF	Power ON Delay			A07A	**10**																								
45	OSH	0A	3F	OSD H Position			A078	0A																								
46	TSY	00	03	TV System at Auto Preset	00:B/G, 01:I, 02:D/K, 03:M		A40C	**00**																								
47	DKS	01	01	D/K Stereo enable/disable			A07E	**01**																								
48	MUT	00	01	Muting on/off at No Sync			A07E	**00**																								
49	ABL	01	01	Bright ABL Switch			A07E	**01**																								
4A	SCM	01	01	SECAM Trap active/inactive			A07E	**01**																								
4B	SLS	01	01	Activate SL. OR. IFI Sync			A07E	**01**																								
4C	SSV	02	07	Space Sound Volume Step Up			A421	**02**																								
4D	VPW	35	7F	Timer of Video Processor start up wait			A422	**35**																								
4E	OP1	2F	FF	Optional Flags 0 (see below)			A07B	28																								
4F	OP2	0F	FF	Optional Flags 1 (see below)			A07C	9D																								
50	OP3	00	FF	Optional Flags 2 (see below)			A07D	A0																								

NOTE:

- Bold item :- are fixed data
- Standard data listed on the Adjustment Item Table are reference values, therefore it may be different for each model and for each mode.
- Note for Different Data Those are the standard data values written on the microprocessor. Therefore, the data values of the modes and stored respectively in the memory. In case of a device replacement, adjustment by rewriting the data value is necessary for some items.

ITEM INFORMATION (KV-HA14M80/HA14P52)

No. 1E VP1

Item	-	-	BCO	OSO	SBL	HBL	FCO	FFI
KV-HA14M80	0	0	0	0	0	0	0	0
KV-HA14P52	0	0	0	0	0	0	0	0

BCO	Switch-on behaviour 1=Switch -on of picture via internal delay 0=Without delay	00(4)
OSO	1=Switch off in vertical overscan 0=Switch-off undefind	18(7)
SBL	Service blanking 1= on 0= off	0B(7)
HBL	RGB Blanking Mode 1 = wide blanking, 0 = normal blanking	02(7)
FCO	Forced Color-on 1=no colour killer 0=normal colour killer function	1B(0)
FFI	Fast filler IF-PLL 1=increased time constant 0=normal time constant	1A(1)

No. 1F VP2

Item	-	-	MAT	DS	DSA	EBS	BLS	BKS
KV-HA14M80	0	0	0	0	0	0	0	1
KV-HA14P52	0	0	0	0	0	0	0	1

MAT	PAL-SECAM-/NTSC Matrix 1 =PAL matrix, 0=adapted to standard	0E(7)
DS	Dynamic skin control on/off 1= on 0= off	1A(3)
DSA	Dynamic skin control angle 1=correction angle 117 degrees 0=correction angle 123 degrees	1A(2)
EBS	Extended Blue Stretch 1= on 0= off	1A(0)
BLS	Blue stretch 1= on 0= off	18(4)
BKS	Black stretch 1= on 0= off	18(3)

No. 20 VP3

Item	BB	AKB	BPS	CB	ACL	CL2	CL1	CL0
KV-HA14M80	0	0	0	0	1	0	0	0
KV-HA14P52	0	0	0	0	1	0	0	0

BB	Blue back when no video signal is identified 1= on 0= off	18(0)
AKB	Black current stabilisation 1=not active 0=active	02(6)
BPS	Bypass of chroma base-band delay line 1=bypassed 0=active	19(6)
CB	Chroma bandpass centre frequency 1= 1.1x Fsc 0=Fsc	18(5)
ACL	Automatic colour limiting 1= active 0= not active	19(5)

CL2	CL1	CL0	Cathode Drive amplitude
0	0	0	57V
0	0	1	63V
0	1	0	70V
0	1	1	77V
1	0	0	84V
1	0	1	91V
1	1	0	99V
1	1	1	107V

No. 4E OP1

Item	HA ME VOL	AV Input		COMB	B/G	I	D/K	M
KV-HA14M80	0	0	10	0	1	1	1	1
KV-HA14P52	0	0	10	0	1	1	1	1

HA ME Vol — Tone controller Volume curve setting. 1 = for HA(ME), 0 = for HA(GE)

AV Input — 00 = no AV Input model; 01 = 1 AV Input model; 10 = 2 AV Input model; 11 = Not available

COMB (for NTSC model) — 1 = Enable external comb filter, 0 =Disable external comb filter

Other optional function will be enabled if the corresponding bit is set to 1.

No. 4F OP2

Item	No NICAM	US ST	HDEV	IV-Curve	XTAL SEL		SECAM	2nd Lang.
KV-HA14M80	0	0	0	0	11	11	1	1
KV-HA14P52	0	0	0	0	11	11	1	1

No NICAM — 1 = NICAM search is disable in any TV system, 0 = NICAM search operates

US ST — (Reserved for NTSC model)

1 V-Curve (Multi Model Only) — 1 = using common volume curve for every mode and every TV system
0 = another volume curve available for video mode and M system

XTAL SEL — 00 = only 4.43 XTAL 01 = only 3.58 XTAL
10 = not used 11 = both 4.43 and 3.58 XTAL

Other optional function will be enabled if the corresponding bit is set to 1.

No. 50 OP3

Item	Pict Rot.	Auto TV Sys.	No Bal.	SPC SOUND	Korean ST	VM	H.K. Bil.	Thai Bil.
KV-HA14M80	0	0	0	0	0	0	0	0
KV-HA14P52	0	0	0	0	0	0	0	1

No Bal. (for AV stereo model) — 1 = no balance in analog select items, 0 = balance included

SPC SOUND — 1 = Space Sound available, 0 = not available

Korean ST — (Reserved for NTSC model)

H.K. Bil. (Multi Model Only) — 1 = NICAM bilingual available (No NICAM stereo), 0 = not available

Other optional function will be enable if the corresponding bit is set to 1.

ITEM INFORMATION (KV-HA14N80)

No. 1E VP1

Item	-	-	BCO	OSO	SBL	HBL	FCO	FFI
KV-HA14N80	0	0	0	0	0	0	0	0

BCO	Switch-on behaviour 1=Switch -on of picture via internal delay 0=Without delay	00(4)
OSO	1=Switch off in vertical overscan 0=Switch-off undefind	18(7)
SBL	Service blanking 1= on 0= off	0B(7)
HBL	RGB Blanking Mode 1 = wide blanking, 0 = normal blanking	02(7)
FCO	Forced Color-on 1=no colour killer 0=normal colour killer function	1B(0)
FFI	Fast filler IF-PLL 1=increased time constant 0=normal time constant	1A(1)

No. 1F VP2

Item	-	-	MAT	DS	DSA	EBS	BLS	BKS
KV-HA14N80	0	0	0	0	0	0	0	1

MAT	PAL-SECAM-/NTSC Matrix 1 =PAL matrix, 0=adapted to standard	0E(7)
DS	Dynamic skin control on/off 1= on 0= off	1A(3)
DSA	Dynamic skin control angle 1=correction angle 117 degrees 0=correction angle 123 degrees	1A(2)
EBS	Extended Blue Stretch 1= on 0= off	1A(0)
BLS	Blue stretch 1= on 0= off	18(4)
BKS	Black stretch 1= on 0= off	18(3)

No. 20 VP3

Item	BB	AKB	BPS	CB	ACL	CL2	CL1	CL0
KV-HA14N80	0	0	0	0	1	0	0	0

BB	Blue back when no video signal is identified 1= on 0= off	18(0)
AKB	Black current stabilisation 1=not active 0=active	02(6)
BPS	Bypass of chroma base-band delay line 1=bypassed 0=active	19(6)
CB	Chroma bandpass centre frequency 1= 1.1x Fsc 0=Fsc	18(5)
ACL	Automatic colour limiting 1= active 0= not active	19(5)

CL2	CL1	CL0	Cathode Drive amplitude
0	0	0	57V
0	0	1	63V
0	1	0	70V
0	1	1	77V
1	0	0	84V
1	0	1	91V
1	1	0	99V
1	1	1	107V

No. 32 OP1

Item	HA ME VOL	AV Input		COMB	B/G	I	D/K	M
KV-HA14N80	0	0	10	0	1	1	1	1

HA ME Vol — Tone controller Volume curve setting. 1 = for HA(ME), 0 = for HA(GE)

AV Input — 00 = no AV Input model; 01 = 1 AV Input model; 10 = 2 AV Input model; 11 = Not available

COMB (for NTSC model) — 1 = Enable external comb filter, 0 =Disable external comb filter

Other optional function will be enabled if the corresponding bit is set to 1.

No. 33 OP2

Item	No NICAM	US ST	HDEV	IV-Curve	XTAL SEL		SECAM	2nd Lang.
KV-HA14N80	0	0	0	0	11	11	1	1

No NICAM — 1 = NICAM search is disable in any TV system, 0 = NICAM search operates

US ST — (Reserved for NTSC model)

HDEV (Multi Model Only)

1 V-Curve (Multi Model Only) — 1 = using common volume curve for every mode and every TV system
0 = another volume curve available for video mode and M system

XTAL SEL — 00 = only 4.43 XTAL 01 = only 3.58 XTAL
10 = not used 11 = both 4.43 and 3.58 XTAL

Other optional function will be enabled if the corresponding bit is set to 1.

No. 34 OP3

Item	Pict Rot.	Auto TV Sys.	No Bal.	SPC SOUND	Korean ST	VM	H.K. Bil.	Thai Bil.
KV-HA14N80	0	0	0	0	0	0	0	0

No Bal. (for AV stereo model) — 1 = no balance in analog select items, 0 = balance included

SPC SOUND — 1 = Space Sound available, 0 = not available

Korean ST — (Reserved for NTSC model)

H.K. Bil. (Multi Model Only) — 1 = NICAM bilingual available (No NICAM stereo), 0 = not available

Thai Bil. (Multi Model Only)

Other optional function will be enable if the corresponding bit is set to 1.

OPERATION GUIDE

SERVICE MODE

How to set up new NVM (or initialize already written one)
(1) AC ON
(2) Enter Service Mode - describing below how to enter
(3) Push the commander button “5” and “0” sequentially (only set initial data into RAM, but not write them into NVM yet)
(4) Push the commander button “2” and “0” sequentially (copy the data into all NVM area - all wide modes and 50/60Hz respectively)
(5) Push the commander button “8” and “0” sequentially (initialize user data, select program 1 and exit Service Mode)
(6) Select TV system and execute Auto Preset

How to enter Service Mode
- At power ON, push the commander button “test” and “TV ON” sequentially
- At stand-by, push the commander button “display”, “5”, “vol +” and “power” sequentially

How to exit Service Mode
- Push the commander button “other ON” or power (AC) OFF

How to increment/decrement items and data
- Items : push the commander button “1” / “4”
- Data : push the commander button “3” / “6” (not write into NVM)

Other operations
- Write data into NVM - push the commander button “mute” and “0” sequentially
- Read data from NVM - push the commander button “7” and “0” sequentially
- Copy 50Hz data into 60Hz area - push the commander button “display” and “0” sequentially

SELF DIAGNOSIS MODE

How to enter Self Diagnosis Mode
- At stand-by, push the commander button “display”, “5”, “vol-” and “power” sequentially

How to exit Self Diagnosis Mode
- Push the commander button “other ON” or power (AC) OFF

Other operations
- Clear data and Write into NVM - push the commander button “8” and “0” sequentially

HOTEL TV MODE

How to enter Hotel TV Mode ON stage
- At stand-by, push the commander button “display”, “MUTE”, “vol +” and “power” sequentially
- The Hotel TV setup display, where the maximum level of the volume can be applied (=35 or above)
- Write data into NVM - push the commander button “mute” and “0” sequentially

How to enter Hotel TV Mode OFF stage
- At stand-by, push the commander button “display”, “MUTE”, “vol -” and “power” sequentially
- Write data into NVM - push the commander button “mute” and “0” sequentially

Modification Note

The item including the new addition is yellow.

1. The flag was added to bit 7 of OP1. This is the flag which chooses the volume curve used by HA (ME) model. (V2. IC) (KV-HA14M80/HA14P52)

4-3. PICTURE QUALITY ADJUSTMENT

SUB COLOR ADJUSTMENT

1. Select Video.
2. Input a PAL color-bar.
3. Set to the following condition:
   PICTURE 100%, BRIGHTNESS 50%, COLOR 50%
4. Connect an oscilloscope to pin ① (B OUT) of CN300, A board.
5. Set to Service Mode and select 13 'SC1' with [1] and [4] of the commander then adjust to VB2=VB3=VB4 with [3] and [6].
6. Press [MUTING] → [0] of the commander to write the data.
7. Adjust 13 'SC1' as step 2 to 5 when receiving NTSC color-bar.

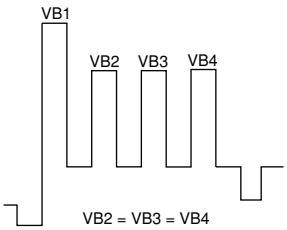

VB2 = VB3 = VB4 (Difference is within 70mV)

SUB HUE ADJUSTMENT

1. Select Video.
2. Input a NTSC 3.58, color-bar into Video/TV mode.
3. Set the following condition:
   PICTURE 100%, BRIGHTNESS 50%, COLOR 50%
4. Connect an oscilloscope to pin ① (B OUT) of CN300, A board.
5. Select 11"SHU" with [1] and [4] of the commander by setting to Service Mode and adjust to VB1=VB2=VB3=VB4 with [3] and [6] .

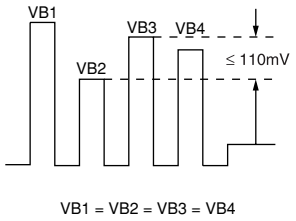

   The highest level of VB1,VB2,VB3,VB4 must be aligned at the same line. Ideal difference level between VB2 and VB3 should be within ± 110mV.
6. Press [MUTING] → [0] of the commander to write the data.
7. Select TV channel with NTSC 3.58 and repeat 3 to 5.
8. Press [MUTING] → [0] of the commander to write the data.
9. Single system model with NTSC 4.43, select TV channel with NTSC 4.43 and repeat 3 to 5.

4-4. DEFLECTION ADJUSTMENT

NORMAL MODE (50Hz)

1. Set to Service mode.
2. Input PAL color bar.
3. Using the [1] and [4] button, select category GEO (Service Mode).
4. Raise/lower the data using the [3] and [6] buttons.
   Select and adjust the following items to obtain optimum image.

Service Item

GEO :	00	HPS	H POSITION
	01	HSZ	H SIZE
	02	PAP	PIN AMPLITUDE
	03	CPN	CORNER PIN
	04	TLT	TILT
	05	VSL	V SLOPE
	06	VAP	VERTICAL AMPLITUDE
	07	SCO	S CORRECTION
	08	VPS	V SHIFT

NORMAL MODE (60Hz)

5. Input 525/60Hz signal.
6. Using the [1] and [4] buttons select category GEO (Service Mode).
7. Select and adjust the following items to obtain obtimum image.
   Raise/lower the data with the [3] and [6] buttons.

Service Item

GEO :	00	HPS	H POSITION
	01	HSZ	H SIZE
	02	PAP	PIN AMPLITUDE
	03	CPN	CORNER PIN
	04	TLT	TILT
	05	VSL	V SLOPE
	06	VAP	VERTICAL AMPLITUDE
	07	SCO	S CORRECTION
	08	VPS	V SHIFT

4-5. A BOARD ADJUSTMENT AFTER IC003 (MEMORY) REPLACEMENT

1. Enter to Service Mode.
2. Press commander buttons [5] and [0] (Data Initialize), and [2] and [0] (Data Copy) to initialize the data.
3. Call each item number and check if the respective screen shows the normal picture.
   In cases where items are not well adjusted, rectify the fine adjustment.
   Write the data per each item number ([MUTING] +[0]).
4. Select item numbers 4E 'OP0', 4F 'OP1', 50 'OP2' and respectively set the bit per model with command buttons [3] and [6] .
5. Press commander buttons [8] and [0] (Test Normal) to return to the data that was set on the shipment from the factory. (This will also cancel Service Mode.)

4-6. PICTURE DISTORTION ADJUSTMENT

Item Number 00 – 08

00 HPS (H POSITION)



01 HSZ (H SIZE)



02 PAP (PIN AMPLITUDE)



03 CPN (CORNER PIN)



04 TLT (TILT)



05 VSL (V SLOPE)



06 VAP (VERTICAL AMPLITUDE)



07 SCO (S CORRECTION)



08 VPS (V SHIFT)



SECTION 5
DIAGRAMS

5-1. BLOCK DIAGRAM

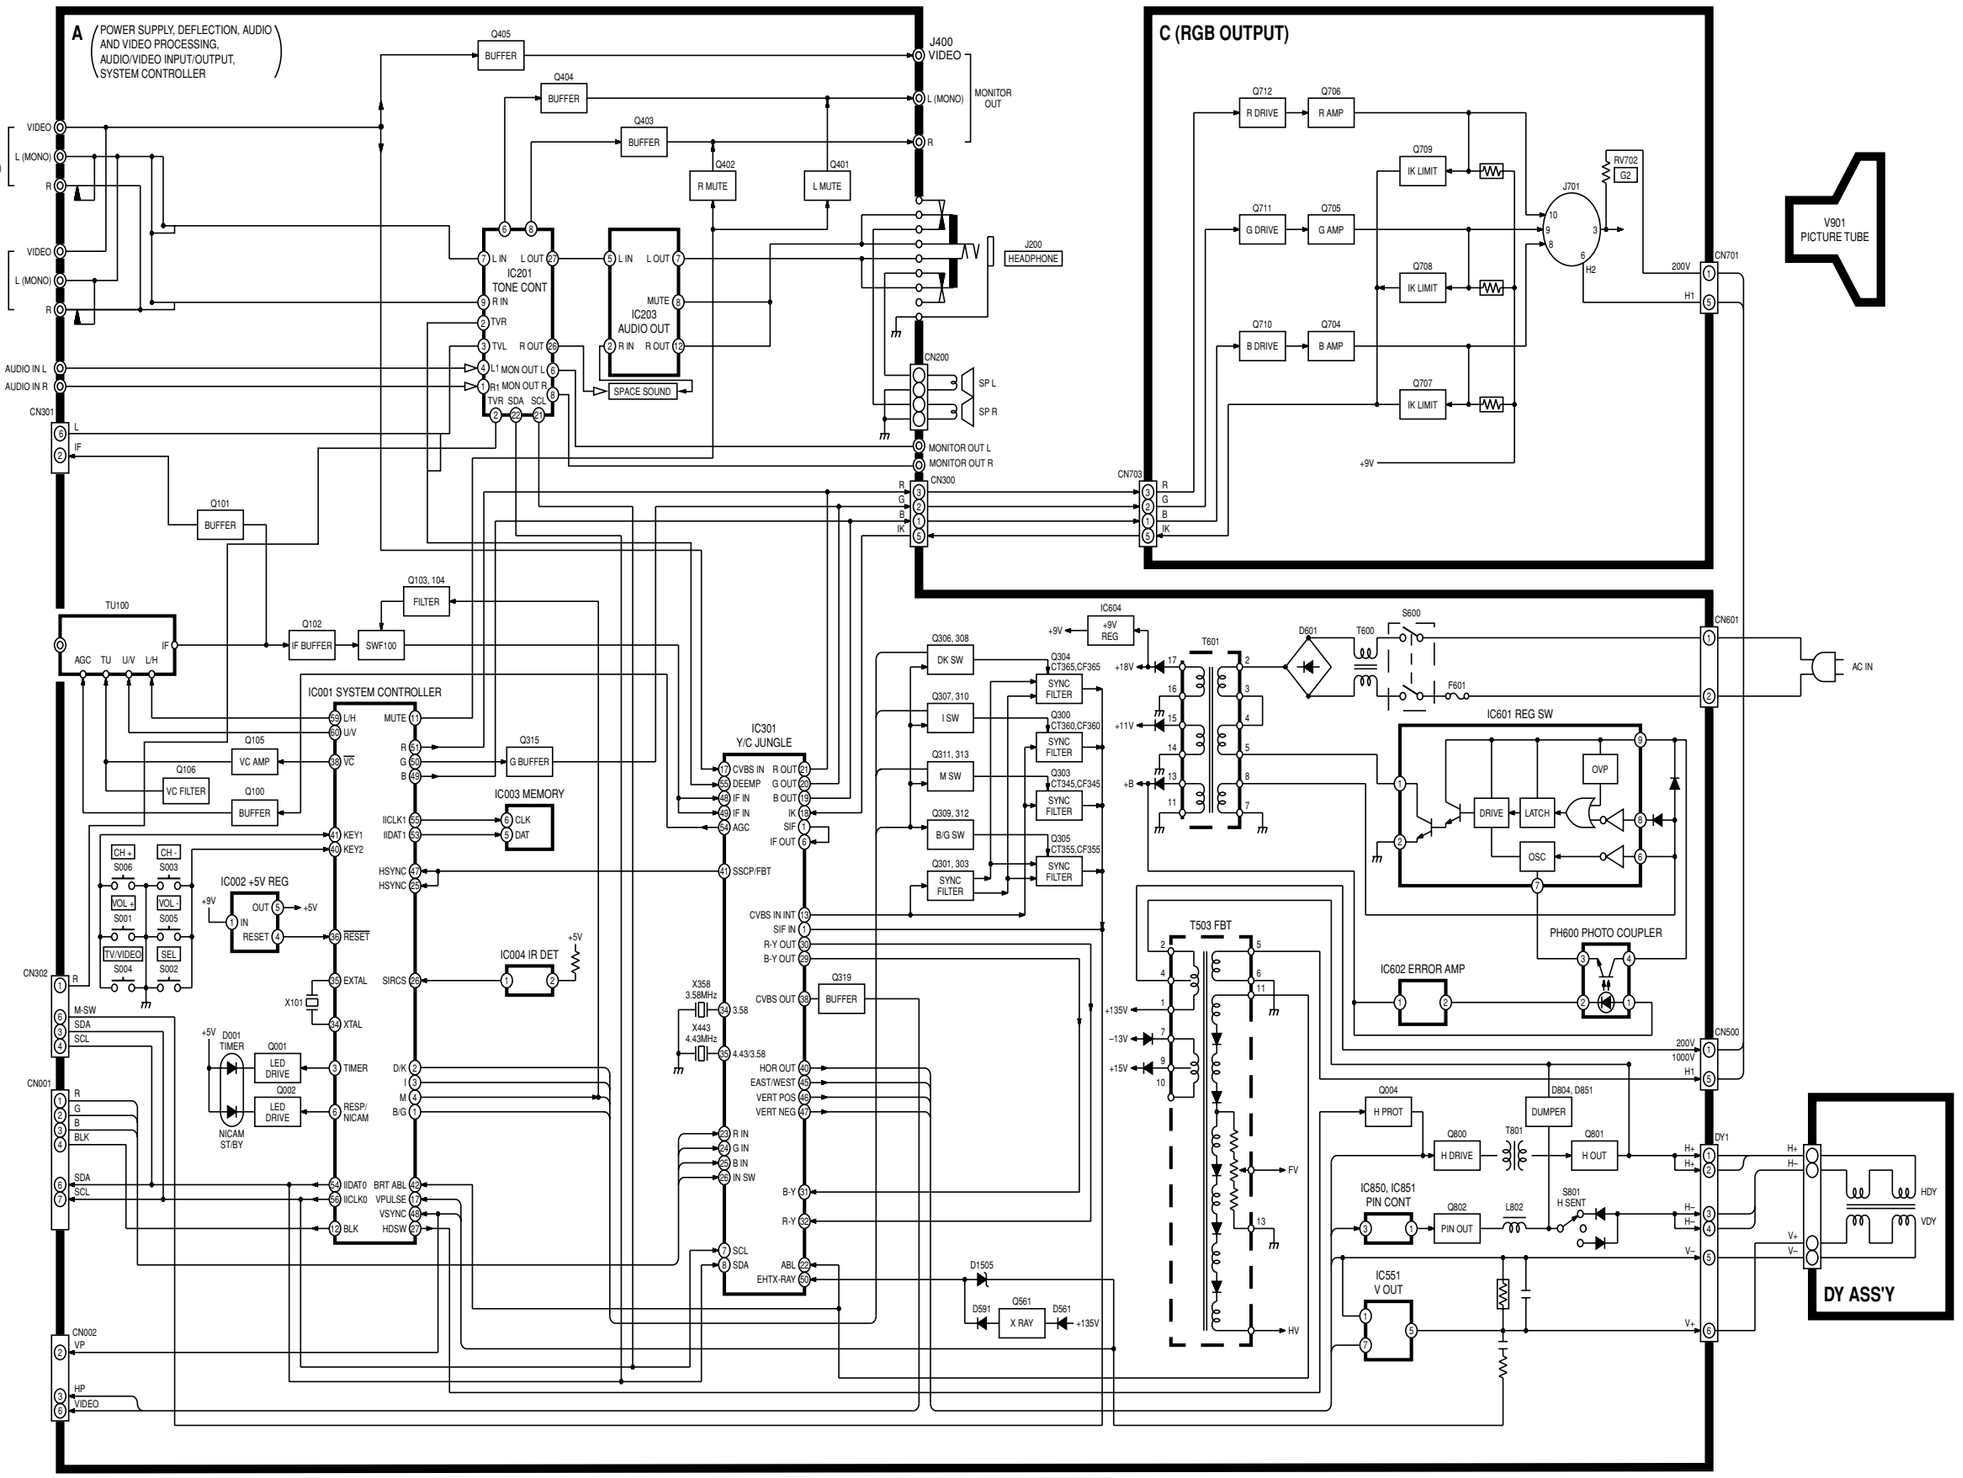

5-2. CIRCUIT BOARDS LOCATION

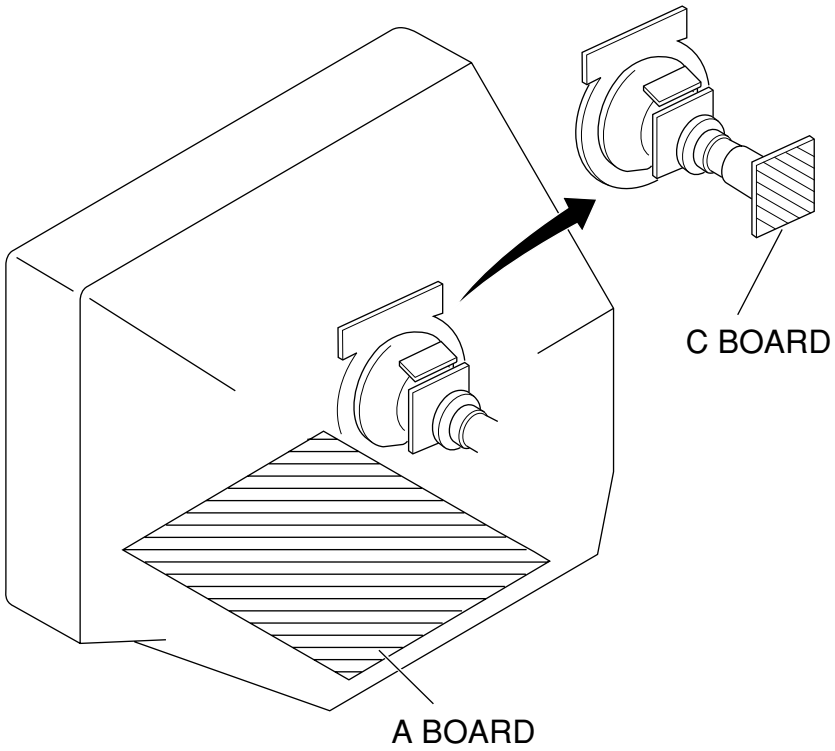

5-3. SCHEMATIC DIAGRAM

Note:

- All capacitors are in µF unless otherwise noted.
- All electrolytic capacitors are rated at 50V unless otherwise noted.
- All resistors are in ohms.
  kΩ = 1000Ω, MΩ = 1000kΩ
- Indication of resistance which does not have rating electrical power is as follows.

  Pitch: 5 mm
  Rating electrical power 1/4W (CHIP: 1/10W)

- : nonflammable resistor.
- △ : internal component.
- : panel designation or adjustment for rrepair.
- All variable and adjustable resistors have characteristic curve B unless otherwise noted.
- **Redings are taken with a color-bar signal input.**
  no mark : COMMON
  ( ) : PAL
  [ ] : NTSC 3.58
- **Readings are taken with a 10 MΩ digital multimeter.**
- **Voltage are dc with respect to ground unless otherwise noted.**
- **Voltage variations may be noted due to normal production tolerances.**
- **All voltage are in Volt.**
- **✻ : Cannot be measured.**
- **Circled numbers are waveform references.**
- **: B +bus.**
- **: B –bus.**
- **⇨ : signal path.**

Reference information

RESISTOR	: RN	METAL FILM
	: RC	SOLID
	: FPRD	NONFLAMMABLE CARBON
	: FUSE	NONFLAMMABLE FUSIBLE
	: RS	NONFLAMMABLE METAL OXIDE
	: RB	NONFLAMMABLE CEMENT
	: RW	NONFLAMMABLE WIREWOUND
	: ✻	ADJUSTMENT RESISTOR
COIL	: LF-8L	MICRO INDUCTOR
CAPACITOR	: TA	TANTALUM
	: PS	STYROL
	: PP	POLYPROPYLENE
	: PT	MYLAR
	: MPS	METALIZED POLYESTER
	: MPP	METALIZED POLYPROPYLENE
	: ALB	BIPOLAR
	: ALT	HIGH TEMPERATURE
	: ALR	HIGH RIPPLE

Note: The component identified by shading and mark ⚠ are critical for safety. Replace only with part number specified.

KV-HA14M80/HA14P52/HA14N80
RM-969 RM-968

(1) A Board Schematic Diagram

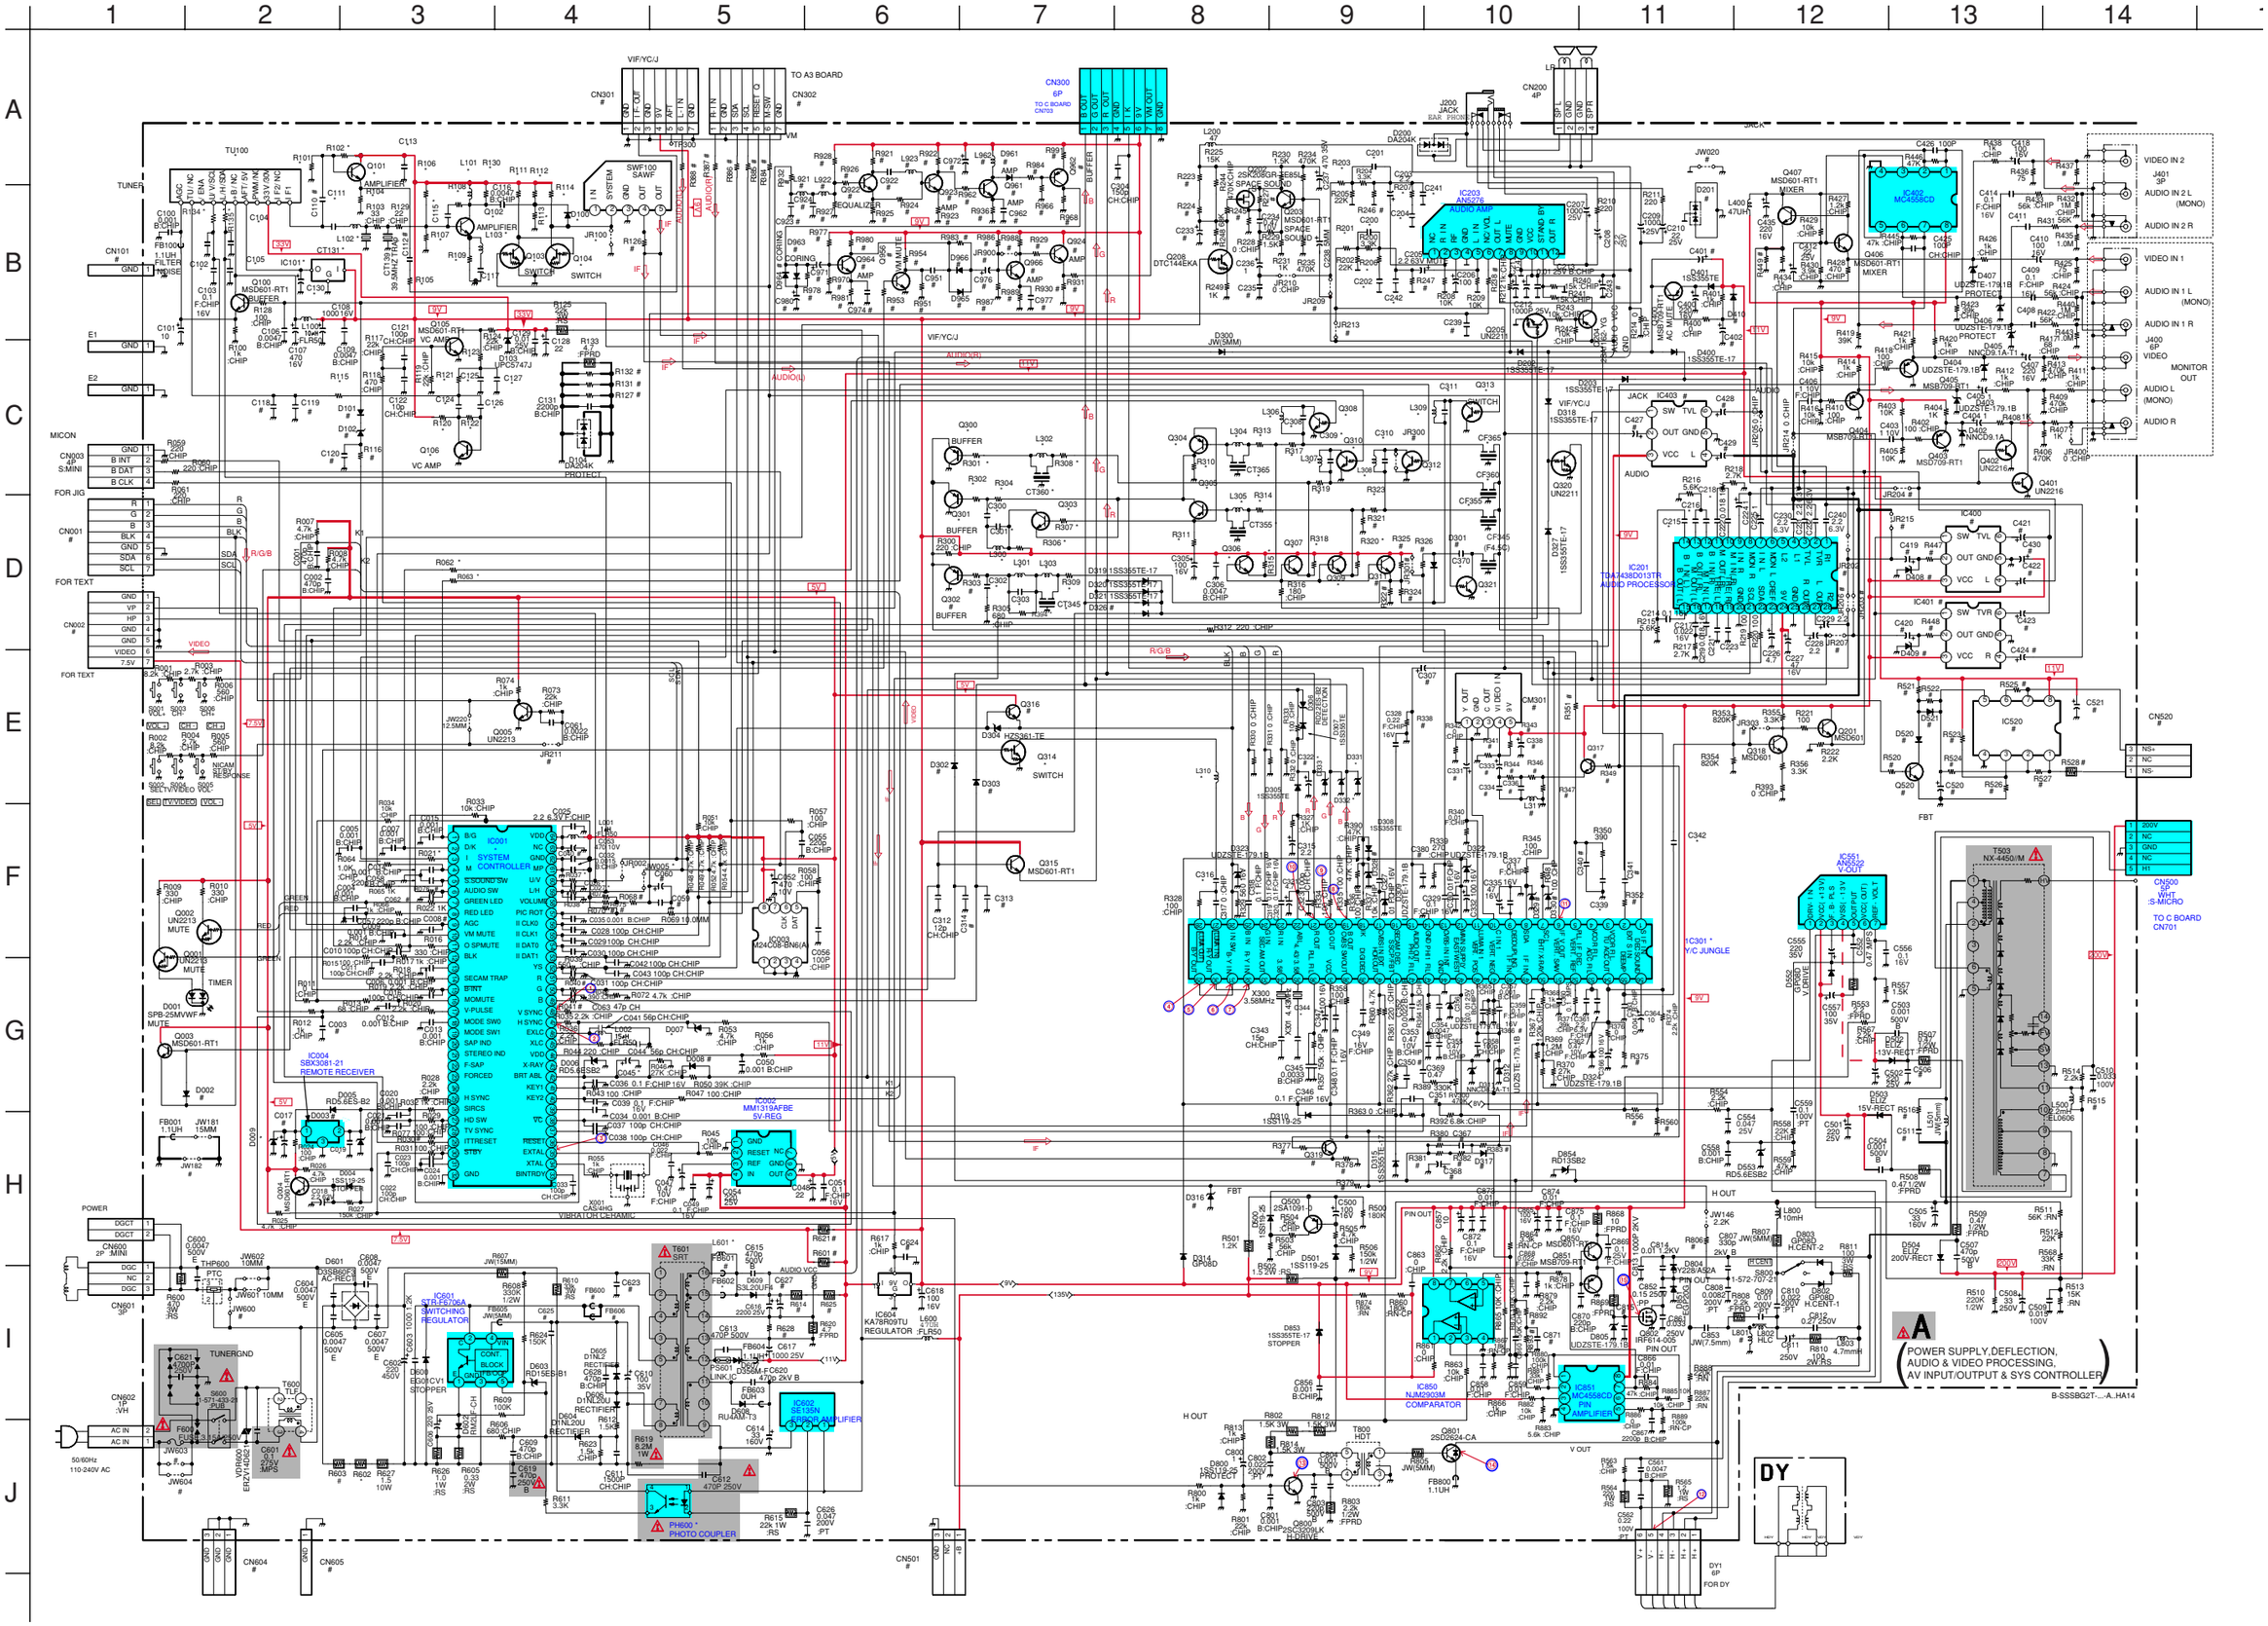
IC001 SYSTEM CONTROLLER
IC002 MM1319AFBE 5V-REG
IC004 SBX3081-21 REMOTE RECEIVER
IC201 TDA7439D013TR AUDIO PROCESSOR
IC203 AN5276 AUDIO AMP
IC301 * Y/C JUNGLE
IC400
IC401
IC520
IC551 AN5522 V-OUT
IC601 STR-F6706A SWITCHING REGULATOR
IC602 SE135N FBP/H AMPLIFIER
IC604 KA78R09TU REGULATOR
IC850 NJM2903M COMPARATOR
IC851 MC4558CD PIN AMPLIFIER
IC2402 MC4558CD
Q100 MSD601-RT1 BUFFER
Q101 AMPLIFIER
Q102 AMPLIFIER
Q103 SWITCH
Q104 SWITCH
Q105 MSD601-RT1 VC AMP
Q106 VC AMP
Q201 MSD601
Q300 BUFFER
Q301 BUFFER
Q302 BUFFER
Q303
Q304
Q305
Q306
Q307
Q308
Q309
Q310
Q311
Q312
Q313 SWITCH
Q314 SWITCH
Q315 MSD601-RT1
Q316
Q317
Q318 MSD601
Q320 UN2211
Q401 UN2216
Q402 MSD709-RT1
Q403 UN2216
Q404 MSB709-RT1
Q405 NNCD9.1A
Q406 MSD601-RT1 MIXER
Q407 MSD601-RT1 MIXER
Q500 2SA1091-O
Q501 MSD601-RT1
Q502 MSD709-RT1
Q503 MSD601-RT1
Q504 MSD709-RT1
Q505 MSD601-RT1
Q506 MSD709-RT1
Q507 IRFI614-005
Q508 MSD709-RT1
Q509 MSD601-RT1
Q510 MSD709-RT1
Q511 MSD709-RT1
Q512 MSD709-RT1
Q513 MSD709-RT1
Q514 MSD709-RT1
Q515 MSD709-RT1
Q516 MSD709-RT1
Q517 MSD709-RT1
Q518 MSD709-RT1
Q519 MSD709-RT1
Q520 MSD709-RT1
Q521 MSD709-RT1
Q522 MSD709-RT1
Q523 MSD709-RT1
Q524 MSD709-RT1
Q525 MSD709-RT1
Q526 MSD709-RT1
Q527 MSD709-RT1
Q528 MSD709-RT1
Q529 MSD709-RT1
Q530 MSD709-RT1
Q531 MSD709-RT1
Q532 MSD709-RT1
Q533 MSD709-RT1
Q534 MSD709-RT1
Q535 MSD709-RT1
Q536 MSD709-RT1
Q537 MSD709-RT1
Q538 MSD709-RT1
Q539 MSD709-RT1
Q540 MSD709-RT1
Q541 MSD709-RT1
Q542 MSD709-RT1
Q543 MSD709-RT1
Q544 MSD709-RT1
Q545 MSD709-RT1
Q546 MSD709-RT1
Q547 MSD709-RT1
Q548 MSD709-RT1
Q549 MSD709-RT1
Q550 MSD709-RT1
Q551 MSD709-RT1
Q552 MSD709-RT1
Q553 MSD709-RT1
Q554 MSD709-RT1
Q555 MSD709-RT1
Q556 MSD709-RT1
Q557 MSD709-RT1
Q558 MSD709-RT1
Q559 MSD709-RT1
Q560 MSD709-RT1
Q561 MSD709-RT1
Q562 MSD709-RT1
Q563 MSD709-RT1
Q564 MSD709-RT1
Q565 MSD709-RT1
Q566 MSD709-RT1
Q567 MSD709-RT1
Q568 MSD709-RT1
Q569 MSD709-RT1
Q570 MSD709-RT1
Q571 MSD709-RT1
Q572 MSD709-RT1
Q573 MSD709-RT1
Q574 MSD709-RT1
Q575 MSD709-RT1
Q576 MSD709-RT1
Q577 MSD709-RT1
Q578 MSD709-RT1
Q579 MSD709-RT1
Q580 MSD709-RT1
Q581 MSD709-RT1
Q582 MSD709-RT1
Q583 MSD709-RT1
Q584 MSD709-RT1
Q585 MSD709-RT1
Q586 MSD709-RT1
Q587 MSD709-RT1
Q588 MSD709-RT1
Q589 MSD709-RT1
Q590 MSD709-RT1
Q591 MSD709-RT1
Q592 MSD709-RT1
Q593 MSD709-RT1
Q594 MSD709-RT1
Q595 MSD709-RT1
Q596 MSD709-RT1
Q597 MSD709-RT1
Q598 MSD709-RT1
Q599 MSD709-RT1
Q600 MSD709-RT1
Q601 MSD709-RT1
Q602 MSD709-RT1
Q603 MSD709-RT1
Q604 MSD709-RT1
Q605 MSD709-RT1
Q606 MSD709-RT1
Q607 MSD709-RT1
Q608 MSD709-RT1
Q609 MSD709-RT1
Q610 MSD709-RT1
Q611 MSD709-RT1
Q612 MSD709-RT1
Q613 MSD709-RT1
Q614 MSD709-RT1
Q615 MSD709-RT1
Q616 MSD709-RT1
Q617 MSD709-RT1
Q618 MSD709-RT1
Q619 MSD709-RT1
Q620 MSD709-RT1
Q621 MSD709-RT1
Q622 MSD709-RT1
Q623 MSD709-RT1
Q624 MSD709-RT1
Q625 MSD709-RT1
Q626 MSD709-RT1
Q627 MSD709-RT1
Q628 MSD709-RT1
Q629 MSD709-RT1
Q630 MSD709-RT1
Q631 MSD709-RT1
Q632 MSD709-RT1
Q633 MSD709-RT1
Q634 MSD709-RT1
Q635 MSD709-RT1
Q636 MSD709-RT1
Q637 MSD709-RT1
Q638 MSD709-RT1
Q639 MSD709-RT1
Q640 MSD709-RT1
Q641 MSD709-RT1
Q642 MSD709-RT1
Q643 MSD709-RT1
Q644 MSD709-RT1
Q645 MSD709-RT1
Q646 MSD709-RT1
Q647 MSD709-RT1
Q648 MSD709-RT1
Q649 MSD709-RT1
Q650 MSD709-RT1
Q651 MSD709-RT1
Q652 MSD709-RT1
Q653 MSD709-RT1
Q654 MSD709-RT1
Q655 MSD709-RT1
Q656 MSD709-RT1
Q657 MSD709-RT1
Q658 MSD709-RT1
Q659 MSD709-RT1
Q660 MSD709-RT1
Q661 MSD709-RT1
Q662 MSD709-RT1
Q663 MSD709-RT1
Q664 MSD709-RT1
Q665 MSD709-RT1
Q666 MSD709-RT1
Q667 MSD709-RT1
Q668 MSD709-RT1
Q669 MSD709-RT1
Q670 MSD709-RT1
Q671 MSD709-RT1
Q672 MSD709-RT1
Q673 MSD709-RT1
Q674 MSD709-RT1
Q675 MSD709-RT1
Q676 MSD709-RT1
Q677 MSD709-RT1
Q678 MSD709-RT1
Q679 MSD709-RT1
Q680 MSD709-RT1
Q681 MSD709-RT1
Q682 MSD709-RT1
Q683 MSD709-RT1
Q684 MSD709-RT1
Q685 MSD709-RT1
Q686 MSD709-RT1
Q687 MSD709-RT1
Q688 MSD709-RT1
Q689 MSD709-RT1
Q690 MSD709-RT1
Q691 MSD709-RT1
Q692 MSD709-RT1
Q693 MSD709-RT1
Q694 MSD709-RT1
Q695 MSD709-RT1
Q696 MSD709-RT1
Q697 MSD709-RT1
Q698 MSD709-RT1
Q699 MSD709-RT1
Q700 MSD709-RT1
Q701 MSD709-RT1
Q702 MSD709-RT1
Q703 MSD709-RT1
Q704 MSD709-RT1
Q705 MSD709-RT1
Q706 MSD709-RT1
Q707 MSD709-RT1
Q708 MSD709-RT1
Q709 MSD709-RT1
Q710 MSD709-RT1
Q711 MSD709-RT1
Q712 MSD709-RT1
Q713 MSD709-RT1
Q714 MSD709-RT1
Q715 MSD709-RT1
Q716 MSD709-RT1
Q717 MSD709-RT1
Q718 MSD709-RT1
Q719 MSD709-RT1
Q720 MSD709-RT1
Q721 MSD709-RT1
Q722 MSD709-RT1
Q723 MSD709-RT1
Q724 MSD709-RT1
Q725 MSD709-RT1
Q726 MSD709-RT1
Q727 MSD709-RT1
Q728 MSD709-RT1
Q729 MSD709-RT1
Q730 MSD709-RT1
Q731 MSD709-RT1
Q732 MSD709-RT1
Q733 MSD709-RT1
Q734 MSD709-RT1
Q735 MSD709-RT1
Q736 MSD709-RT1
Q737 MSD709-RT1
Q738 MSD709-RT1
Q739 MSD709-RT1
Q740 MSD709-RT1
Q741 MSD709-RT1
Q742 MSD709-RT1
Q743 MSD709-RT1
Q744 MSD709-RT1
Q745 MSD709-RT1
Q746 MSD709-RT1
Q747 MSD709-RT1
Q748 MSD709-RT1
Q749 MSD709-RT1
Q750 MSD709-RT1
Q751 MSD709-RT1
Q752 MSD709-RT1
Q753 MSD709-RT1
Q754 MSD709-RT1
Q755 MSD709-RT1
Q756 MSD709-RT1
Q757 MSD709-RT1
Q758 MSD709-RT1
Q759 MSD709-RT1
Q760 MSD709-RT1
Q761 MSD709-RT1
Q762 MSD709-RT1
Q763 MSD709-RT1
Q764 MSD709-RT1
Q765 MSD709-RT1
Q766 MSD709-RT1
Q767 MSD709-RT1
Q768 MSD709-RT1
Q769 MSD709-RT1
Q770 MSD709-RT1
Q771 MSD709-RT1
Q772 MSD709-RT1
Q773 MSD709-RT1
Q774 MSD709-RT1
Q775 MSD709-RT1
Q776 MSD709-RT1
Q777 MSD709-RT1
Q778 MSD709-RT1
Q779 MSD709-RT1
Q780 MSD709-RT1
Q781 MSD709-RT1
Q782 MSD709-RT1
Q783 MSD709-RT1
Q784 MSD709-RT1
Q785 MSD709-RT1
Q786 MSD709-RT1
Q787 MSD709-RT1
Q788 MSD709-RT1
Q789 MSD709-RT1
Q790 MSD709-RT1
Q791 MSD709-RT1
Q792 MSD709-RT1
Q793 MSD709-RT1
Q794 MSD709-RT1
Q795 MSD709-RT1
Q796 MSD709-RT1
Q797 MSD709-RT1
Q798 MSD709-RT1
Q799 MSD709-RT1
Q800 MSD709-RT1
Q801 2SD2624-CA
Q802 MSD709-RT1
Q803 MSD709-RT1
Q804 MSD709-RT1
Q805 MSD709-RT1
Q806 MSD709-RT1
Q807 MSD709-RT1
Q808 MSD709-RT1
Q809 MSD709-RT1
Q810 MSD709-RT1
Q811 MSD709-RT1
Q812 MSD709-RT1
Q813 MSD709-RT1
Q814 MSD709-RT1
Q815 MSD709-RT1
Q816 MSD709-RT1
Q817 MSD709-RT1
Q818 MSD709-RT1
Q819 MSD709-RT1
Q820 MSD709-RT1
Q821 MSD709-RT1

(2) C Board Schematic Diagram

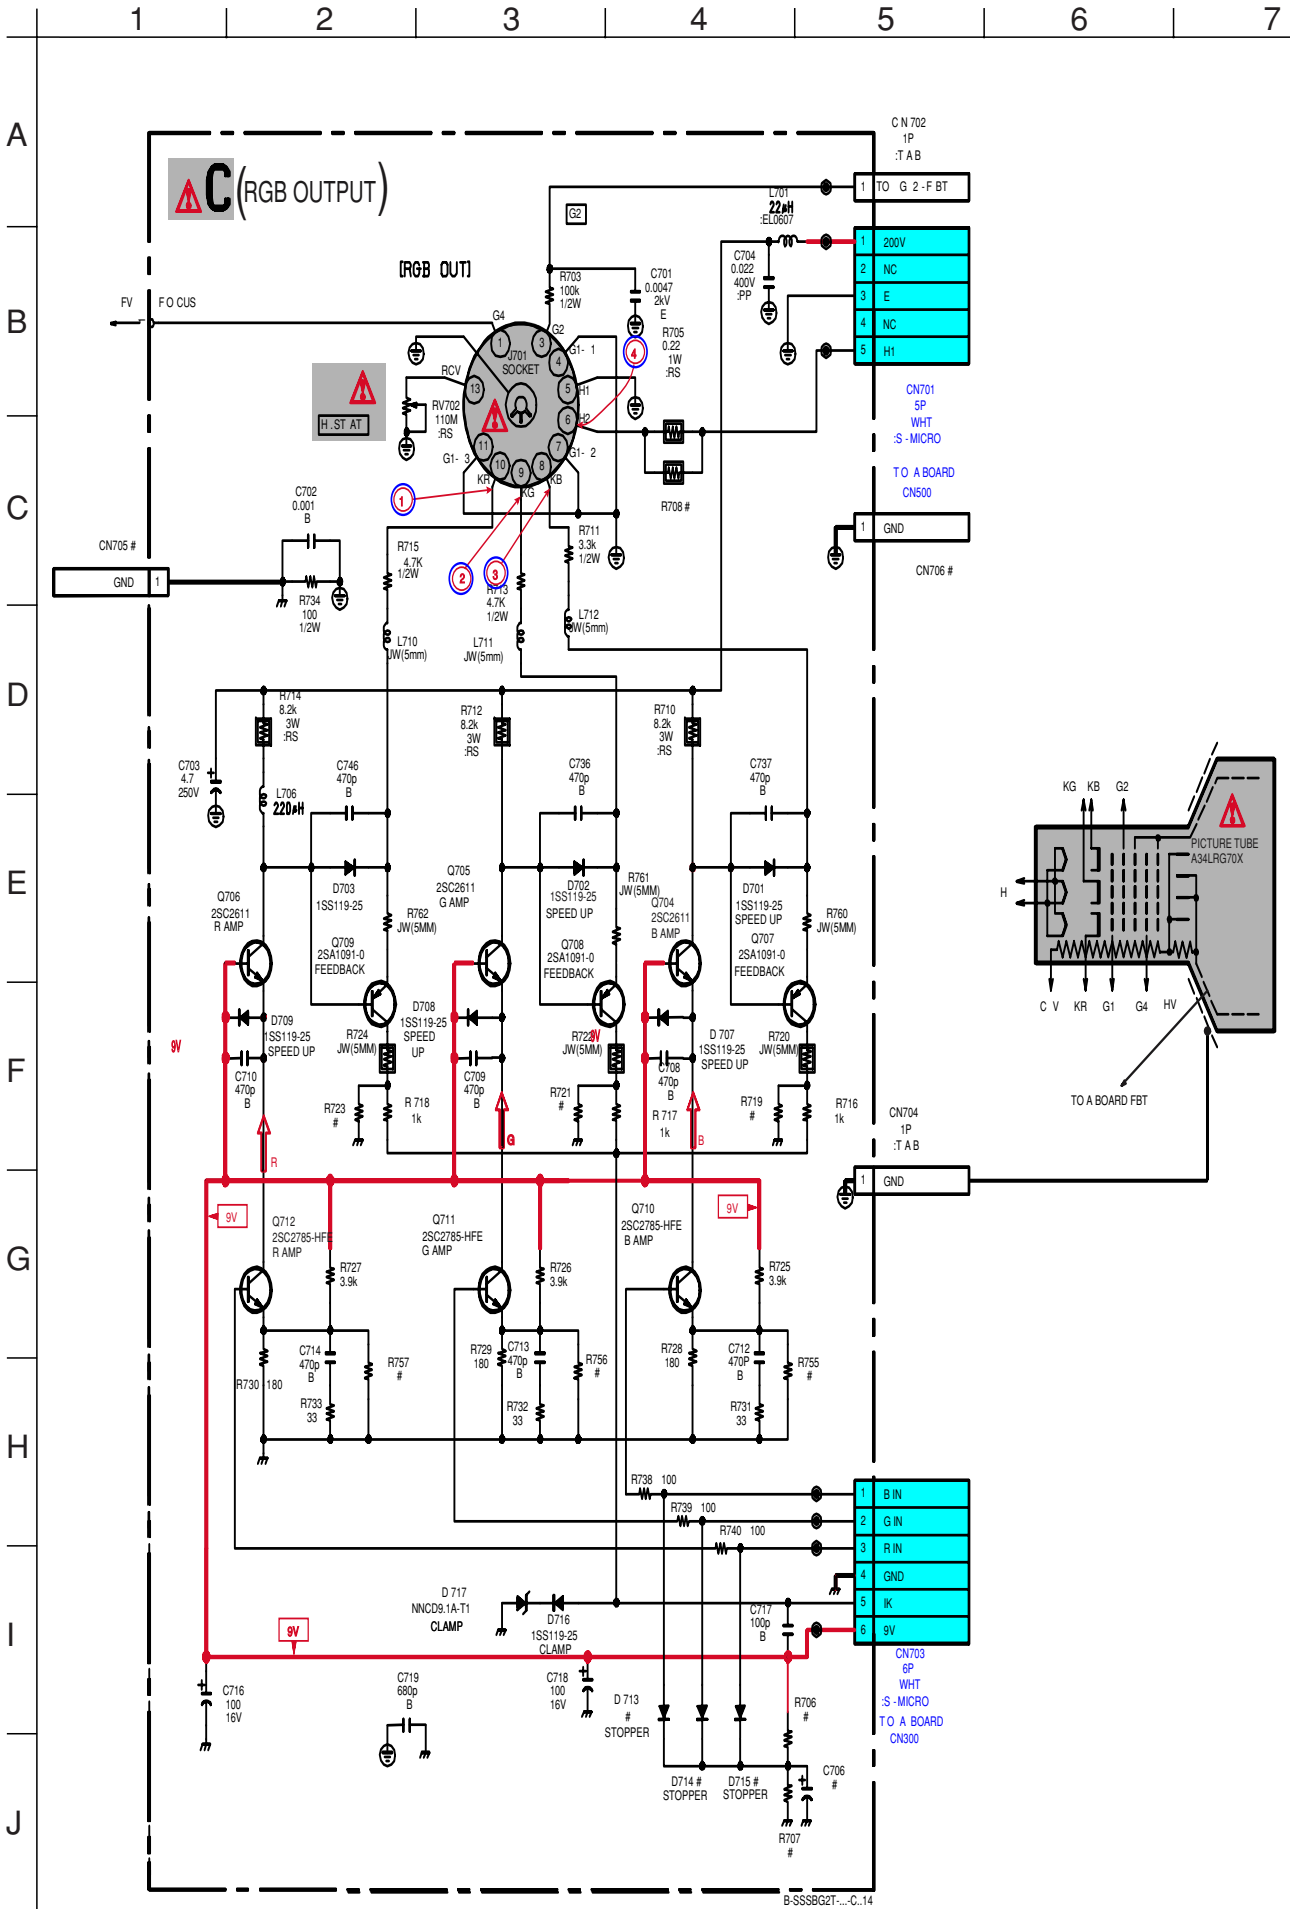

A Board ✲ Mark List

	KV-HA14M80	KV-HA14N80	KV-HA14P52
C018	2.2 63V	2.2	2.2
C026	0.001 :CHIP	#	0.001 :CHIP
C027	0.001 :CHIP	#	0.001 :CHIP
C036	0.1 25V :CHIP	0.1 25V :CHIP	0.1 16V :CHIP
C039	0.1 25V :CHIP	0.1 25V :CHIP	0.1 16V :CHIP
C045	3.3 63V	3.3	3.3
C049	0.1 25V :CHIP	0.1 25V :CHIP	0.1 16V :CHIP
C051	0.1 25V :CHIP	0.1 25V :CHIP	0.1 16V :CHIP
C054	220 25V	220 25V	220
C102	0.1 25V F:CHIP	#	0.1 16V F:CHIP
C103	0.1 25V F:CHIP	#	0.1 16V F:CHIP
C104	0.1 25V F:CHIP	#	0.1 16V F:CHIP
C105	0.1 25V F:CHIP	#	0.1 16V F:CHIP
C110	0.01 25V	#	#
C111	0.01P 25V B:CHIP	39P :CHIP	0.01P 25V B:CHIP
C112	0.01 25V	#	#
C113	0.0047 :CHIP	#	#
C115	0.0047 :CHIP	0 :CHIP	0.0047 :CHIP
C117	56P :CHIP	#	56P :CHIP
C124	0.068 :PT	#	0.068 :PT
C125	0.1 :PP	#	0.1 :PP
C126	0.068 :PT	#	0.068 :PT
C127	100P :CHIP	#	100P :CHIP
C130	#	100 16V	#
C205	2.2 63V	2.2	2.2
C215	0.47 16V B:CHIP	0.47 16V B:CHIP	0.47 10V B:CHIP
C218	0.47 16V B:CHIP	0.47 16V B:CHIP	0.47 10V B:CHIP
C234	0.47 16V :CHIP	0.47 16V :CHIP	0.47 10V :CHIP
C300	47P :CHIP	#	56P :CHIP
C301	27P :CHIP	#	27P :CHIP
C302	47P :CHIP	11P :CHIP	#
C303	68P :CHIP	62P :CHIP	#
C308	390P :CHIP	#	390P :CHIP
C309	330P :CHIP	#	#
C310	390P :CHIP	#	390P :CHIP
C311	470P :CHIP	470P :CHIP	#
C315	2.2 63V :CHIP	2.2	2.2
C316	47P :CHIP	#	#
C318	0.1 25V :CHIP	0.1 25V :CHIP	0.1 16V :CHIP
C319	0.1 25V :CHIP	0.1 25V :CHIP	0.1 16V :CHIP
C320	0.1 25V :CHIP	0.1 25V :CHIP	0.1 16V :CHIP
C327	0.1 25V :CHIP	0.1 25V :CHIP	0.1 16V :CHIP
C328	0.22 25V :CHIP	0.22 25V :CHIP	0.22 16V :CHIP
C329	0.1 25V :CHIP	0.1 25V :CHIP	0.1 16V :CHIP
C330	0.1 25V :CHIP	0.1 25V :CHIP	0.1 16V :CHIP
C337	0.1 25V :CHIP	0.1 25V :CHIP	0.1 16V :CHIP
C339	0.1 25V F:CHIP	0.1 25V F:CHIP	0.1 16V F:CHIP
C342	0.1 25V F:CHIP	0.1 25V F:CHIP	0.1 16V F:CHIP
C344	16P :CHIP	15P :CHIP	15P :CHIP
C346	0.1 25V :CHIP	0.1 25V :CHIP	0.1 16V :CHIP
C348	0.1 25V :CHIP	0.1 25V :CHIP	0.1 16V :CHIP
C353	0.47 16V :CHIP	0.47 16V :CHIP	0.47 10V :CHIP
C355	0.47 16V :CHIP	0.47 16V :CHIP	0.47 10V :CHIP
C359	0.1 25V :CHIP	0.1 25V :CHIP	0.1 16V :CHIP
C370	0 :CHIP	0 :CHIP	#
C408	0.1 25V F:CHIP	0.1 25V F:CHIP	0.1 16V :CHIP
C409	0.1 25V :CHIP	0.1 25V :CHIP	0.1 16V :CHIP
C411	0.1 25V F:CHIP	0.1 25V F:CHIP	0.1 16V F:CHIP
C414	0.1 25V :CHIP	0.1 25V :CHIP	0.1 16V :CHIP
C554	0.047	0.047	0.047 25V :CHIP
C556	0.1 25V :CHIP	0.1 25V :CHIP	0.1 16V :CHIP
C869	0.1	0.1	0.1 25V :CHIP
C872	0.1 25V :CHIP	0.1 25V :CHIP	0.1 16V :CHIP
C875	0.1 25V :CHIP	0.1 25V :CHIP	0.1 16V :CHIP
CF345	F4.5C	F4.5C	#
CF355	(F5.5C)	#	(F5.5C)
CF360	(F6.0C)	#	#
CF365	(F6.5C)	#	FILTER, CERAMIC
CN600	2P	2P	#
CT131	TRAP CERAMIC	82	TRAP CERAMIC
CT139	TRAP CERAMIC	#	TRAP CERAMIC
CT345	T4.5C	T4.5C	#
CT355	(T55B)	#	(T55B)
CT360	(T60B)	#	#
CT365	(T65B)	#	(T55B)
D007	RD5.1SB.T2	RD5.1SB.T2	UDZSTE-175.1B
D009	RD5.1SB.T2	RD5.1SB.T2	UDZSTE-175.1B
D100	MA77	#	#
D301	1SS355TE-17	1SS355TE-17	#
D331	UDZSTE-179.1B	#	UDZSTE-179.1B
D332	UDZSTE-179.1B	#	UDZSTE-179.1B
D333	UDZSTE-179.1B	#	UDZSTE-179.1B
IC001	CXP85224A-080S	CXP85220A-083S	CXP85224A-081S
IC101	#	TA7805S	#
IC301	TDA8844/N2	TDA8843/N2	TDA8843/N2
JR002	#	0 :CHIP	#
JR034	0 :CHIP	#	#
JR100	#	0 :CHIP	0 :CHIP
L101	1.2UH	#	1.2UH

A Board ✲ Mark List

	KV-HA14M80	KV-HA14N80	KV-HA14P52
L102	0.22UH	0.33UH	0.22UH
L103	0.33UH	#	0.33UH
L300	18UH	#	15UH
L301	12UH	18UH	#
L302	8.2UH	#	#
L303	8.2UH	18UH	#
L304	12UH	#	12UH
L305	12UH	#	12UH
L306	1.8UH	#	2.2UH
L307	2.2UH	#	#
L308	2.2UH	#	2.2UH
L309	2.7UH	2.7UH	#
L310	27UH	#	#
PH600	PC123F2	PC123F2	ON3171-R
Q101	MSD601-RT1	#	#
Q102	2SC3779C, D-AA	#	2SC3779C, D-AA
Q103	UN2216	#	#
Q104	UN2216	#	#
Q106	MSD601-RT1	#	MSD601-RT1
Q300	MSB709-RT1	#	#
Q301	MSB709-RT1	#	MSB709-RT1
Q302	MSB709-RT1	MSB709-RT1	#
Q303	MSD601-RT1	#	MSD601-RT1
Q304	MSB709-RT1	#	MSB709-RT1
Q305	MSB709-RT1	#	MSB709-RT1
Q306	MSD601-RT1	#	MSD601-RT1
Q307	MSD601-RT1	#	#
Q308	UN2216	#	UN2216
Q309	MSD601-RT1	#	MSD601-RT1
Q310	UN2216	#	#
Q311	MSD601-RT1	MSD601-RT1	#
Q312	UN2216	#	UN2216
Q313	UN2216	UN2216	#
Q314	UN2211	#	#
Q321	#	UN2216	#
R021	1.0K :CHIP	#	#
R037	1.0K :CHIP	#	1.0K :CHIP
R038	1.0K :CHIP	#	1.0K :CHIP
R062	1.0K :CHIP	#	1.0K :CHIP
R063	1.0K :CHIP	#	1.0K :CHIP
R064	1K :CHIP	1K :CHIP	#
R101	3.9K :CHIP	#	#
R102	4.7K :CHIP	#	#
R104	270 :CHIP	#	#
R105	68 :CHIP	#	#
R106	4.7K :CHIP	#	4.7K :CHIP
R107	3.9K :CHIP	1UH	3.9K :CHIP
R108	470 :CHIP	0 :CHIP	470 :CHIP
R109	56 :CHIP	#	56 :CHIP
R111	10K :CHIP	#	#
R112	6.8K :CHIP	#	#
R113	2.2K :CHIP	#	#
R114	2.2K :CHIP	#	#
R115	4.7K :CHIP	#	4.7K :CHIP
R120	1.8K :CHIP	#	1.8K :CHIP
R121	22K :CHIP	#	22K :CHIP
R122	330K :CHIP	#	330K :CHIP
R123	22K :CHIP	#	22K :CHIP
R130	1.0K :CHIP	#	1.0K :CHIP
R134	0 :CHIP	470	0 :CHIP
R135	0 :CHIP	470	0 :CHIP
R301	220 :CHIP	#	#
R302	220 :CHIP	#	220 :CHIP
R303	220 :CHIP	220 :CHIP	#
R304	1.2K :CHIP	#	1.2K :CHIP
R305	680 :CHIP	680 :CHIP	#
R306	390 :CHIP	#	390 :CHIP
R307	220 :CHIP	#	220 :CHIP
R308	120 :CHIP	#	#
R309	150 :CHIP	470 :CHIP	#
R310	390 :CHIP	#	390 :CHIP
R311	2.2K :CHIP	#	2.2K :CHIP
R313	330 :CHIP	#	330 :CHIP
R314	330 :CHIP	#	330 :CHIP
R315	22K :CHIP	#	22K :CHIP
R317	470 :CHIP	#	470 :CHIP
R318	22K :CHIP	#	#
R319	470 :CHIP	#	#
R320	22K :CHIP	#	22K :CHIP
R323	470 :CHIP	#	470 :CHIP
R324	470 :CHIP	470 :CHIP	#
R325	22K :CHIP	22K :CHIP	#
R326	22K :CHIP	22K :CHIP	#
R394	#	7.5K :CHIP	#
R602	1.5 10W	1.5 10W	3.3 10W
R627	1.5 10W	1.5 10W	#
T600	TRANSFORMER LINE FILTER	TRANSFORMER LINE FILTER	COIL LINE FILTER
TU100	BT-AG401	BTP-AA401	BT-AG402

Note: The parts indicated as "#" in this circuit diagram are not listed here, as they are not used for these models.

5-4. VOLTAGE MEASUREMENT

A BOARD VOLTAGE LIST

Ref	Pin No	Voltage[v]
IC001	1	4.7
	2	0
	3	0
	4	0
	5	5.0
	6	(0) [5.0]
	7	0
	8	(0) [0.2]
	9	5.0
	10	5.0
	11	0
	12	0
	13	0
	14	0
	15	5.0
	16	0
	17	0
	18	0
	19	0.6
	20	0
	21	5.0
	22	0
	23	(0) [5.0]
	24	(5.0) [0]
	25	(0) [0.3]
	26	3.8
	27	0
	28	0.5
	29	5.0
	30	5.0
	31	5.0
	32	0
	33	5.0
	34	2.5
	35	2.2
	36	5.0
	37	0
	38	(2.8) [4.9]
	39	0.5
	40	5.0
	41	5.0
	42	0.1
	43	0.7
	44	5.0
	45	(2.8) [5.0]
	46	(2.8) [5.0]
	47	0.4
	48	0
	49	0
	50	0
	51	0
	52	0
	53	5.0
	54	4.8
	55	5.0
	56	4.8
	57	5.0
	58	0
	59	8.8
	60	(0.2) [8.8]
	61	0
	62	0
	63	5.0
	64	5.0
IC002	1	0
	2	5.0
	3	4.9
	4	13.4
	5	5.0
	6	0
	7	0
	8	0.3
IC004	1	4.9
	2	3.8
	3	0
IC201	1	4.5
	2	4.5
	3	4.5
	4	4.5
	5	4.5
	6	4.5
	7	4.5
	8	4.5
	9	4.5
	10	4.5
	11	4.5
	12	4.5
	13	4.5
	14	4.5
	15	4.5
	16	4.5
	17	4.5
	18	4.5
	19	4.5
	20	0
	21	4.6
	22	4.6
	23	4.5
	24	9
	25	0
	26	3.8
	27	3.8
	28	4.5
IC203	1	0
	2	0
	3	20.3
	4	0
	5	0
	6	0
	7	(*) [9.8]
	8	0.4
	9	0
	10	21
	11	9.7
	12	9.7
IC301	1	0.7
	2	3.7
	3	0.4
	4	0.4
	5	(2.6) [3.6]
	6	(2.9) [4.6]
	7	4.8
	8	4.8
	9	6.7
	10	0
	11	3.4
	12	8.1
	13	(3.8) [4.4]
	14	0
	15	2.9
	16	0.5
	17	(3.4) [3.9]
	18	6.2
	19	2.6
	20	2.6
	21	2.7
	22	(2.4) [2.1]
	23	3.5
	24	3.5
	25	3.5
	26	0.1
	27	2.7
	28	2.7
	29	2.4
	30	2.4
	31	2.4
	32	2.4
	33	0.3
	34	2.5
	35	2.5
	36	4.7
	37	8.1
	38	2.5
	39	4.9
	40	1.1
	41	(*) [0.6]
	42	3.1
	43	(4.0) [4.3]
	44	0
	45	(4.2) [4.0]
	46	1.4
	47	1.4
	48	4.7
	49	4.7
	50	1.5
	51	3.8
	52	3.8
	53	(4.6) [1.1]
	54	(4.2) [8.0]
	55	2.9
	56	3.1
IC400	1	(0) [4.9]
	2	4.4
	3	8.9
	4	5.2
	5	0
	6	5.2
IC402	1	1.4
	2	1.3
	3	2.5
	4	0
	5	2.5
	6	2.5
	7	5.5
	8	8.9
IC551	1	0.6
	2	12.9
	3	12.4
	4	(13) [-12.9]
	5	0.3
	6	12.7
	7	0.6
IC601	1	0.9
	2	0.2
	3	(45.5) [0.4]
	4	(8.7) [0.4]
	5	(0.2) [0]
IC602	1	0
	2	121.9
	3	134

A BOARD VOLTAGE LIST

Ref	Pin No	Voltage[v]	Ref	Pin No	Voltage[v]	Ref	Pin No	Voltage[v]
IC604	I	13.4	Q204	B	16.5	Q314	B	0
	G	8.9		C	16.5		C	0.6
	O	0		E	15.8		E	0
IC850	1	(*) [2.2]	Q205	B	(4.8) [0.2]	Q315	B	2.6
	2	0.8		C	(0) [0.2]		C	8.9
	3	1.0		E	(0) [4.8]		E	0
	4	0	Q300	B	(3.0) [3.6]	Q318	B	2.1
	5	2.7		C	0		C	(0.4) [5.4]
	6	(*) [2.2]		E	8.9		E	2.7
	7	5.9	Q301	B	(3.0) [3.6]	Q320	B	0
	8	8.9		C	0		C	3.3
IC851	1	(2.2) [2.7]		E	(2.3) [3.9]		E	0
	2	3.2	Q302	B	(3.0) [3.9]	Q400	B	13.3
	3	3.2		C	0		C	-0.3
	4	0		E	8.9		E	13.4
	5	(2.5) [2.8]	Q303	B	(2.3) [3.7]	Q401	B	0
	6	(2.5) [2.8]		C	(7.7) [6.1]		C	0
	7	(3.9) [3.7]		E	(2.9) [4.2]		E	(-0.5) [-0.1]
	8	8.9	Q304	B	(2.9) [4.2]	Q402	B	0
PH600	1	133.4		C	(2.3) [3.7]		C	0.4
	2	(121.7) [*]		E	8.9		E	(-0.5) [-0.2]
	3	(134.4) [8.7]	Q305	B	(3.0) [4.0]	Q403	B	0.4
	4	(134.4) [1.4]		C	(2.3) [3.5]		C	0
Q002	B	(5.0) [0]		E	(2.3) [3.6]		E	(0.4) [0.6]
	C	(0) [4.9]	Q306	B	8.9	Q404	B	5.2
	E	0		C	8.9		C	0
Q003	B	(0.4) [0.1]		E	(2.9) [4.6]		E	4.5
	C	5.0	Q307	B	8.9	Q405	B	3.2
	E	0		C	(3.2) [9.0]		C	0
Q004	B	(0.2) [0.1]		E	(2.9) [4.7]		E	2.5
	C	5.0	Q308	B	0	Q406	B	1.8
	E	(0.1) [0.2]		C	(0.3) [8.8]		C	4.2
Q100	B	3.6 [7.4]		E	(0.2) [0]		E	2.5
	C	8.8	Q309	B	(1.7) [3.8]	Q407	B	(0.5) [3.5]
	E	(4.2) [8]		C	(4.5) [9.0]		C	8.9
Q103	B	0		E	(2.9) [4.7]		E	4.2
	C	3.2	Q310	B	0	Q801	B	0.2
	E	0		C	8.9		C	0
Q104	B	0		E	0		E	0
	C	0	Q311	B	8.9	Q802	B	5.0
	E	(0.4) [3.2]		C	8.9		C	(8) [9]
Q105	B	(0.4) [0]		E	(2.9) [4.7]		E	0
	C	(9.3) [0]	Q312	B	0	Q850	B	5.8
	E	(0) [0.6]		C	0		C	8.9
Q106	B	0		E	3.9		E	5.9
	C	3.9	Q313	B	0	Q851	B	(5.6) [6.0]
	E	0.6		C	8.9		C	0
Q201	B	(0.4) [4.7]		E	0		E	5.9
	C	8.9						
	E	5.3						

C BOARD VOLTAGE LIST

Ref	Pin No	Voltage[v]	Ref	Pin No	Voltage[v]	Ref	Pin No	Voltage[v]
J701	G2	(260.4) [258.4]	Q706	B	8.9	Q710	B	2.7
	H2	*		C	119		C	8.3
	KB	120		E	(8.3) [6]		E	2.0
	KG	(120) [125]	Q707	B	(122) [125.2]	Q711	B	2.7
	KR	(117) [119]		C	7.3		C	8.3
Q704	B	8.9		E	(120) [125.2]		E	2.0
	C	(121.7) [123.2]	Q708	B	(120.7) [123.4]	Q712	B	(2.7) [0.3]
	E	(8.3) [6.3]		C	7.4		C	(8.3) [6]
Q705	B	8.9		E	(118.2) [124.3]		E	(2.1) [1.8]
	C	(8.3) [124.4]	Q709	B	(119) [120.1]			
	E	(8.3) [0.3]		C	(7.3) [8]			
				E	(116) [119.8]			

5-5. WAVEFORMS

A BOARD WAVEFORM

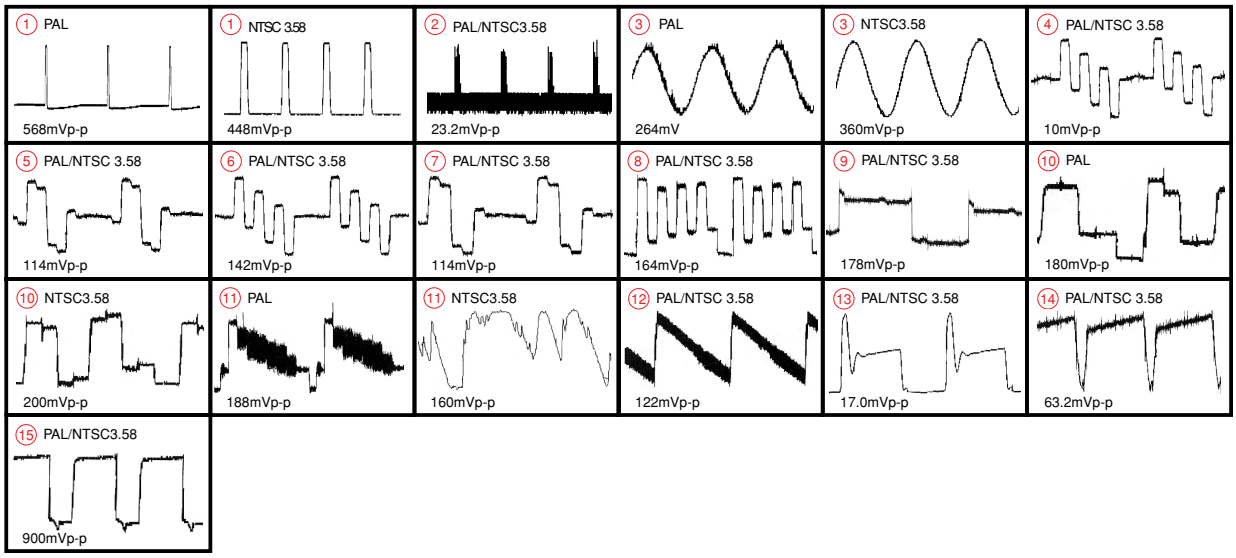

C BOARD WAVEFORM

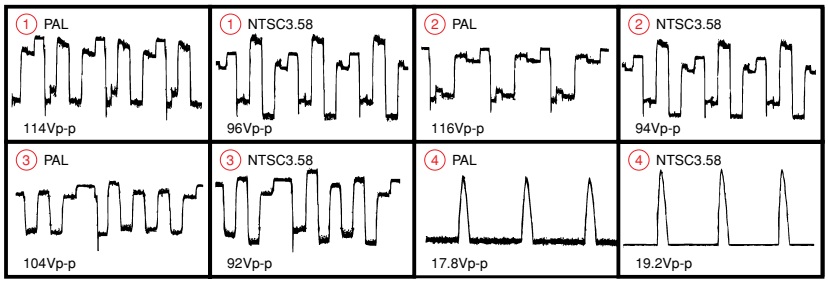

KV-HA14M80/HA14P52/HA14N80
RM-969 RM-968

5-6. PRINTED WIRING BOARDS AND PARTS LOCATION

PRINTED WIRING BOARDS

A [POWER SUPPLY,DEFLECTION,
AUDIO AND VIDEO PROCESSING,
AUDIO/VIDEO INPUT/OUTPUT AND SYSTEM CONTROLLER]

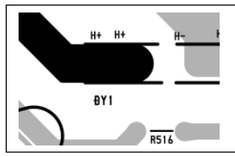

NOTE:
The circuit indicated at left contains high voltage of over 1220 Vp-p. Please pay attention when inspecting or repairing it to prevent an electric shock.

– A Board –

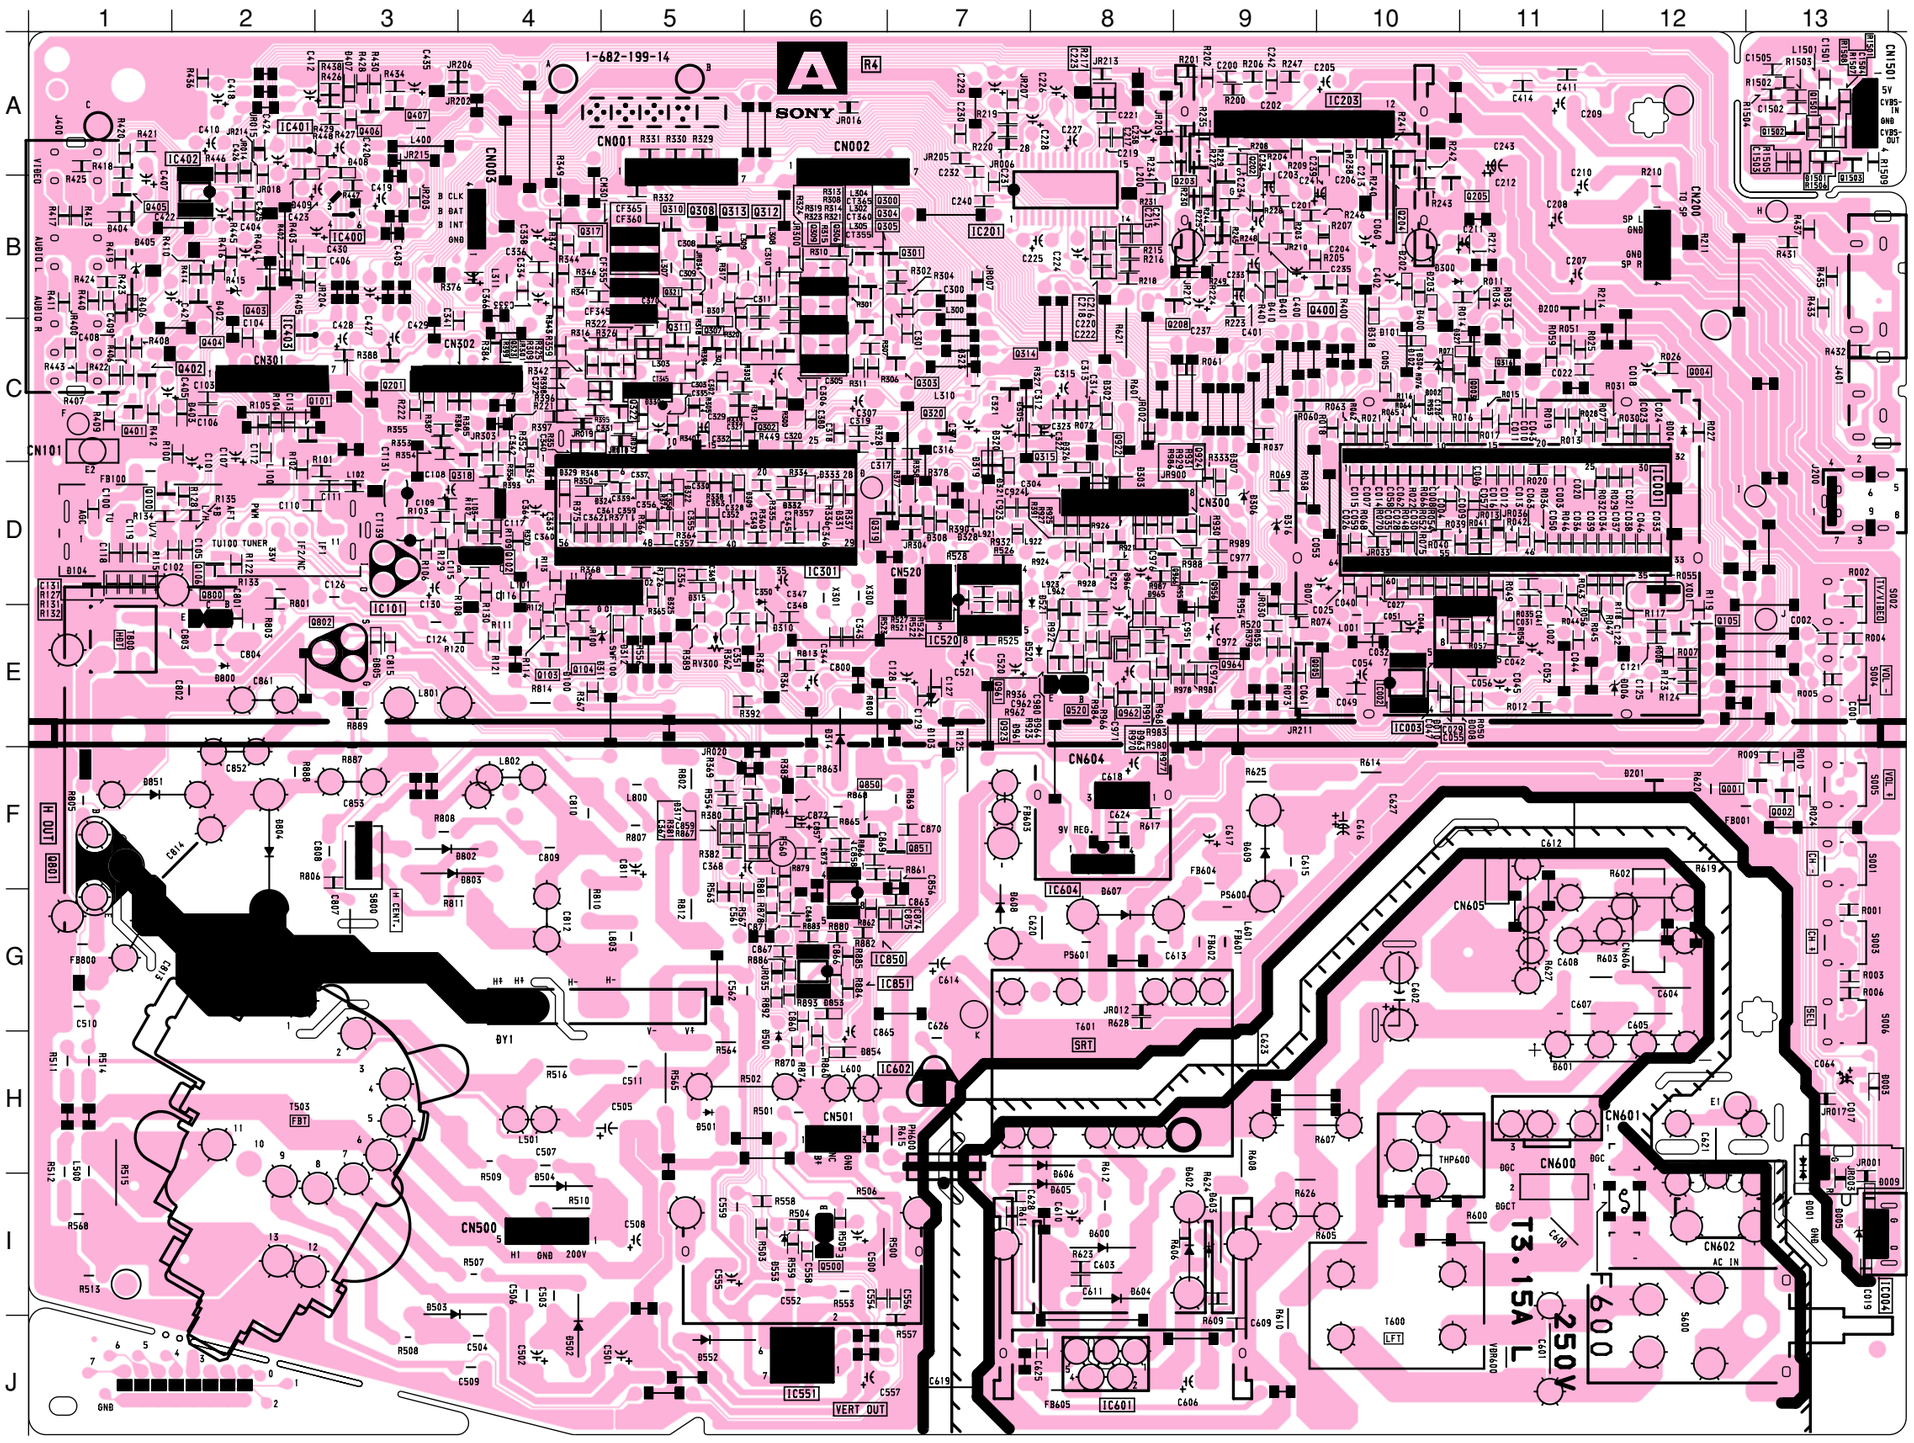

A BOARD

IC

IC001	D-12
IC002	E-10
IC003	E-10
IC004	I-13
IC101	D-3
IC201	B-7
IC203	A-10
IC301	D-6
IC400	B-3
IC401	A-2
IC402	A-2
IC403	C-2
IC520	E-7
IC551	J-6
IC601	J-8
IC602	H-7
IC604	G-8
IC850	G-6
IC851	G-6
PH600	H-7

TRANSISTOR

Q001	F-12
Q002	F-13
Q003	C-11
Q004	C-12
Q005	E-10
Q100	D-1
Q101	C-3
Q102	D-4
Q103	E-4
Q104	E-4
Q105	E-12
Q106	D-2
Q201	C-3
Q203	B-9
Q202	A-9
Q204	B-10
Q205	B-11
Q208	C-9
Q300	B-7
Q301	B-7
Q302	C-6
Q303	C-7
Q304	B-7
Q305	B-7
Q306	B-6
Q307	C-5
Q308	B-5
Q309	B-6
Q310	B-5
Q311	C-5
Q312	B-6
Q313	B-5
Q314	C-7
Q315	C-8
Q316	C-11
Q317	B-4
Q318	D-4
Q319	D-6
Q320	C-7
Q321	B-5
Q400	B-10
Q401	C-1
Q402	C-2
Q403	B-2
Q404	C-2
Q405	B-1
Q406	A-3
Q407	A-3
Q500	I-6
Q520	E-8
Q800	D-2
Q802	E-3
Q850	F-6
Q851	F-7
Q922	C-8
Q923	E-7
Q924	C-9
Q956	D-9
Q961	E-7
Q962	E-8
Q964	E-9
Q966	D-9

DIODE

D001	I-13
D002	C-10
D003	H-13
D004	C-12
D005	I-13
D006	E-12
D007	D-9
D008	E-11
D009	I-13
D100	E-4
D101	C-10
D102	C-10
D103	E-7
D104	D-1
D200	B-11
D201	F-12
D202	B-10
D203	B-10
D300	B-10
D301	B-5
D302	C-8
D303	D-8
D304	C-10
D305	C-7
D306	D-9
D307	D-9
D308	D-7
D309	D-6
D310	E-6
D312	E-5
D314	E-6
D315	D-5
D316	D-9
D317	F-5
D318	C-10
D319	D-7
D320	C-7
D321	D-7
D322	D-5
D323	C-7
D324	D-4
D325	D-5
D326	C-8
D327	C-10
D328	D-7
D400	C-10
D401	B-9
D402	B-2
D403	C-2
D404	B-1
D405	B-1
D406	B-1
D407	A-3
D408	A-3
D409	B-2
D410	B-9
D500	H-6
D501	H-5
D502	J-4
D503	I-3
D504	I-4
D520	E-7
D521	D-8
D522	J-5
D553	I-6
D600	I-8
D602	I-9
D603	I-9
D604	I-8
D605	I-8
D606	H-8
D607	G-8
D608	G-7
D609	F-9
D800	E-2
D802	F-4
D803	F-4
D804	F-2
D805	E-3
D851	F-1
D853	G-6
D854	H-6
D961	E-7
D963	E-8
D964	E-8
D965	D-8

PRINTED WIRING BOARDS

C [RGB OUTPUT]

– C Board –

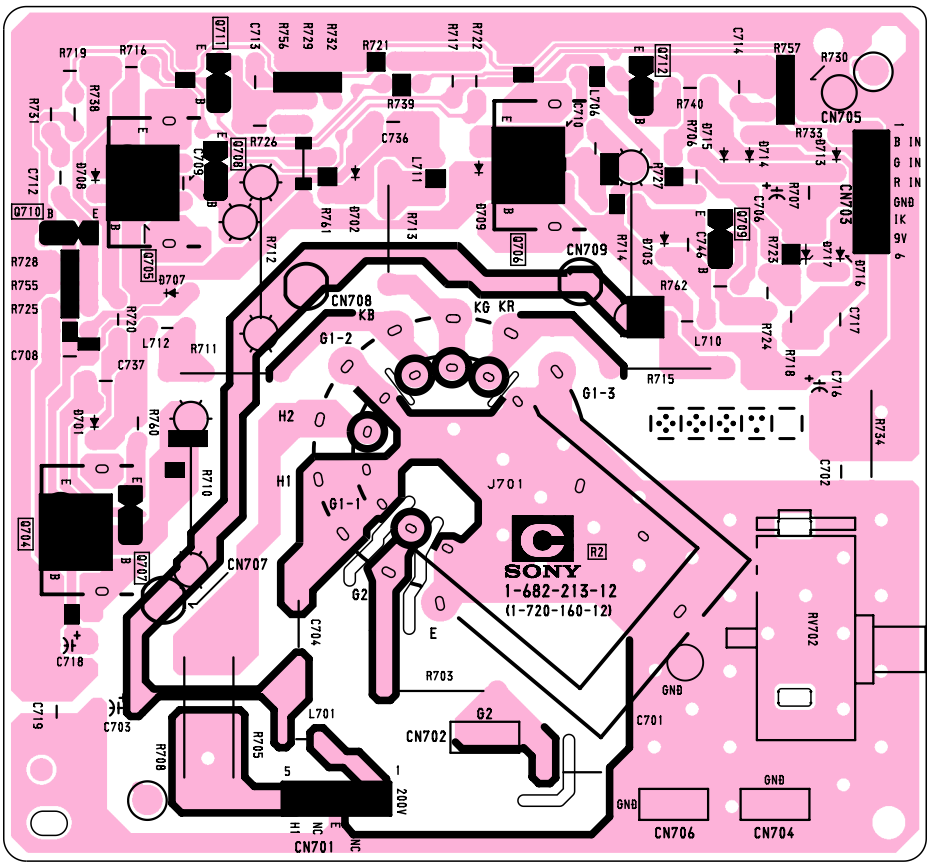

5-7. SEMICONDUCTORS

DIODE

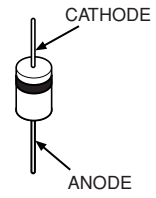		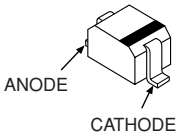	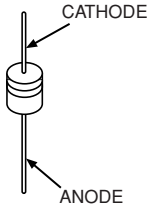	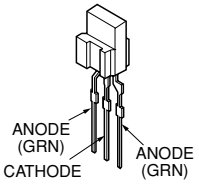	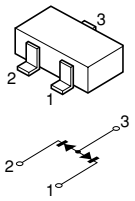
D1NL20U D3S6M-F ELIZ EG01CV1 HZS361-TE GPO8D	EGP20G NNCD8.2A-T1 NNCD9.1A-T1 RU4AM-T3 1SS119-25	RD5.6ESB2 RD5.1SB-T2 UDZSTE-179.1B 1SS355TE-17 RD5.6SB-T1 UDZSTE-175-1B	RD2.2ES-B2 RD15ES-B1 S3L20UF4 RD13SB2	SPB-25MVWF SPB-26MVWF	DA204K

TRANSISTOR

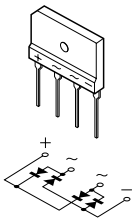	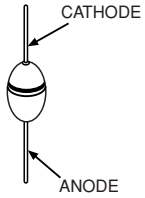	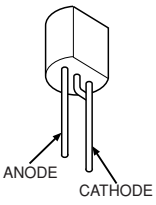	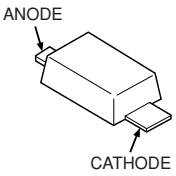		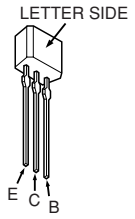
D3SB60F3	BY228	UPC574J	MA77	2SA1091-0	2SC2785-HFE

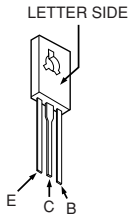					
2SC2611	IRF614-005	2SC3779C	2SC3209LK	2SD2624-CA	2SK208GR-TE85L

IC

		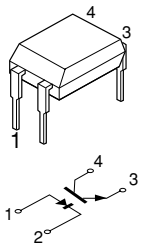	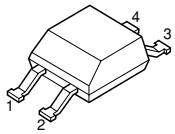	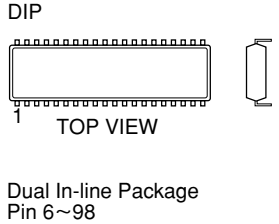
MSD601-RT1 MSB709-RT1 UN2211 UN2213 UN2216	2SA1162-G DTC144EKA	ON3171-R	PC123F2	M24C08-BN6 (A)(8 PIN) CXP85220A-083S CXP85224A-080S TDA7438D013TR CXP85224A-081S

SOP 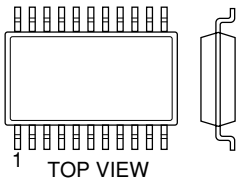 TOP VIEW Small Outline L-Leaded Pin 8~98	MARKING SIDE VIEW 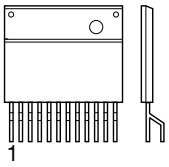 Zig-zag In -line Package Pin 6~99		
MM1319AFBE NJM2903M	STR-F6707A TDA8843	AN5522	SE-135N

	
SBX3081-21	TA7805S

SECTION 6
EXPLODED VIEWS

NOTE:

- Items with no part number and no description are not stocked because they are seldom required for routine service.
- The construction parts of an assembled part are indicated with a collation number in the remark column.
- Items marked " ∗ " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

The components identified by shading and mark ⚠ are critical for safety.
Replace only with part number specified.

6-1. PICTURE TUBE AND CHASSIS

● : 7-685-648-79 SCREW +BVTP 3 × 12
■ : 7-685-663-71 SCREW +BVTP 4 × 16

Caution : Do not take out CRT Support block while TV set in standing position.

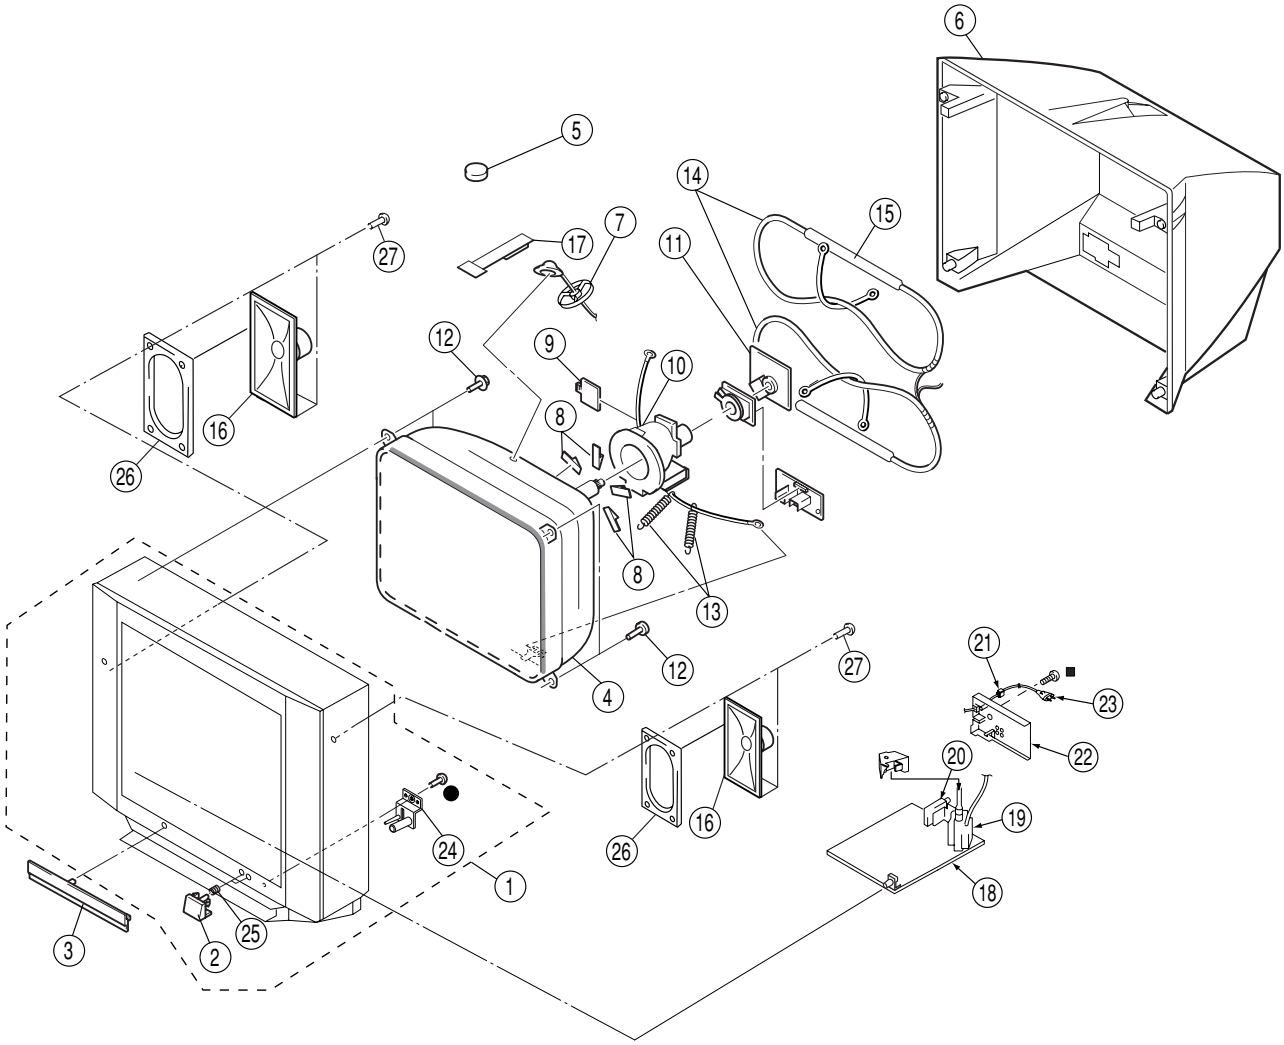

REF. NO.		PART NO.	DESCRIPTION	REMARK
1		X-4039-708-1	BEZNET ASSY (KV-HA14M80/HA14P52)	2, 24, 25
		X-4039-852-1	BEZNET ASSY (KV-HA14N80)	
2		4-083-943-01	BUTTON POWER	
3		X-4039-851-1	DOOR ASSY CONTROL (KV-HA14M80)	
		X-4039-866-1	DOOR ASSY CONTROL (KV-HA14N80)	
		X-4039-909-1	DOOR ASSY CONTROL (KV-HA14P52)	
4	⚠	8-735-570-05	PICTURE TUBE (A34LRG70X)	
5		1-452-032-00	MAGNET DISC	
6		4-083-989-01	COVER REAR	
7	*	3-704-372-41	HOLDER HV CABLE (KV-HA14M80)	
	*	3-704-372-11	HOLDER HV CABLE (KV-HA14N80/HA14P52)	
8		4-081-577-01	SPACER (S) DY	
9		4-077-228-02	PIECE TLH CONVERGENCE	
10	⚠	8-451-401-11	DEFLECTION YOKE (Y14RSA-S)	
11	*	A-1400-519-A	C BOARD MOUNTED (KV-HA14M80)	
	*	A-1332-226-A	C BOARD MOUNTED (KV-HA14N80)	
	*	A-1332-249-A	C BOARD MOUNTED (KV-HA14P52)	
12		4-365-808-31	SCREW (5) TAPPING (KV-HA14M80/HA14N80)	
		4-365-808-41	SCREW (5) TAPPING (KV-HA14P52)	
13		4-369-318-61	SPRING TENSION (KV-HA14M80)	
		4-078-765-01	SPRING EXTENSION (KV-HA14N80/HA14P52)	
14	⚠	1-419-804-11	COIL DEGAUSSING (KV-HA14M80)	
	⚠	1-419-185-11	COIL DEGAUSSING (KV-HA14N80)	
	⚠	1-419-185-31	COIL DEGAUSSING (KV-HA14P52)	
15	*	4-072-857-41	CUSHION DGC (KV-HA14M80)	
	*	4-072-857-02	CUSHION DGC (KV-HA14N80)	
	*	4-072-857-12	CUSHION DGC (KV-HA14P52)	
16		1-544-763-11	SPEAKER (12 X 5CM)	
17		4-051-736-42	PIECE A (90) CONV CORRECT	
18	*	A-1300-303-A	A BOARD COMPLETE (KV-HA14M80)	
	*	A-1300-228-A	A BOARD COMPLETE (KV-HA14N80)	
	*	A-1300-300-A	A BOARD COMPLETE (KV-HA14P52)	
19	⚠	1-453-309-21	TRANSFORMER ASSY FLY BACK (NX-4450//M3A4)	
20		8-598-591-00	TUNER BT-AG401 (KV-HA14M80)	
		8-598-591-10	TUNER BT-AG402 (KV-HA14P52)	
		8-598-590-00	TUNER BTP-AA401 (KV-HA14N80)	
21		4-022-115-21	HOLDER AC CORD (KV-HA14M80/HA14P52)	
		4-022-115-00	HOLDER AC CORD (KV-HA14N80)	
22		4-059-710-21	BRACKET TERMINAL (KV-HA14M80)	
		4-059-710-31	BRACKET TERMINAL (KV-HA14N80)	
		4-059-716-21	BRACKET TERMINAL (KV-HA14P52)	
23	⚠	1-777-563-11	CORD CONNECTOR WITH POWER (KV-HA14M80)	
	⚠	1-823-484-11	CORD POWER (WITH CONNECTOR) (KV-HA14N80)	
	⚠	1-575-023-41	CORD POWER (WITH CONNECTOR) (KV-HA14P52)	
24	*	4-083-944-01	BAR OPTICAL	
25		4-036-405-11	SPRING COMPRESSION	
26	*	4-083-987-11	CUSHION SPEAKER	
27		4-054-981-02	SCREW STEP TAPPING	

SECTION 7
ELECTRICAL PARTS LIST

A

NOTE:

The components identified by shading and mark ⚠ are critical for safety.
Replace only with part number specified.

When indicating parts by reference number, please include the board name.

- Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
- All resistors are in ohms
- F : nonflammable

CAPACITORS
- MF : µF, PF : µµF

COILS
- MMH : mH, UH : µH

REF NO.	PART NO.	DESCRIPTION	REMARK
	* A-1300-303-A	A BOARD COMPLETE (KV-HA14M80)	
	* A-1300-228-A	A BOARD COMPLETE (KV-HA14N80)	
	* A-1300-300-A	A BOARD COMPLETE (KV-HA14P52)	
		**********	
	1-533-223-11	CLIP, FUSE	
	* 4-055-304-01	HOLDER, LED (KV-HA14M80/HA14N80)	
	* 4-055-304-11	HOLDER, LED (KV-HA14P52)	
	4-082-405-01	HOLDER, FBT (KV-HA14M80)	
	* 4-082-454-01	HOLDER, FBT (KV-HA14N80/HA14P52)	
	* 4-374-846-01	COVER, CAPACITOR, CAP TYPE (KV-HA14M80 ONLY)	
	4-382-854-01	SCREW (M3X8), P, SW (+)	
	4-382-854-11	SCREW (M3X10), P, SW (+)	
	4-382-854-21	SCREW (M3X14), P, SW (+)	
	4-352-844-01	PIN, LEAD, COATING (KV-HA14N80 ONLY)	
	7-685-648-79	SCREW +BVTP 3X12 TYPE2 N-S	
		<CAPACITOR>	
C001	1-162-962-11	CERAMIC CHIP 470PF 10.00% 50V	
C002	1-162-962-11	CERAMIC CHIP 470PF 10.00% 50V	
C004	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V	
C005	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V	
C006	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V	
C007	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V	
C009	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V	
C010	1-162-927-11	CERAMIC CHIP 100PF 5.00% 50V	
C011	1-162-927-11	CERAMIC CHIP 100PF 5.00% 50V	
C012	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V	
C013	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V	
C014	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V	
C015	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V	
C016	1-162-927-11	CERAMIC CHIP 100PF 5.00% 50V	
C017	1-125-796-91	ELECT 47UF 20.00% 16V	
C018	1-125-800-91	ELECT 2.2UF 20.00% 63V (KV-HA14M80)	
C018	1-126-961-11	ELECT 2.2UF 20.00% 50V (KV-HA14N80/HA14P52)	
C019	8-719-036-94	RD5.6SB-T1	
C020	1-162-962-11	CERAMIC CHIP 470PF 10.00% 50V	
C021	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V	
C022	1-162-927-11	CERAMIC CHIP 100PF 5.00% 50V	
C023	1-162-927-11	CERAMIC CHIP 100PF 5.00% 50V	
C024	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V	
C025	1-135-834-91	CERAMIC CHIP 2.2E+06PF 6.3V	
C026	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V (KV-HA14M80/HA14P52)	
C027	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V (KV-HA14M80/HA14P52)	
C028	1-162-927-11	CERAMIC CHIP 100PF 5.00% 50V	
C029	1-162-927-11	CERAMIC CHIP 100PF 5.00% 50V	
C030	1-162-927-11	CERAMIC CHIP 100PF 5.00% 50V	
C031	1-162-927-11	CERAMIC CHIP 100PF 5.00% 50V	
C032	1-162-965-11	CERAMIC CHIP 0.0015UF 10.00% 50V	
C033	1-162-927-11	CERAMIC CHIP 100PF 5.00% 50V	
C034	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V	
C035	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V	
C036	1-164-360-11	CERAMIC CHIP 0.1UF 16V (KV-HA14P52)	
C036	1-163-038-91	CERAMIC CHIP 0.1UF 25V (KV-HA14M80/HA14N80)	
C037	1-162-927-11	CERAMIC CHIP 100PF 5.00% 50V	
C038	1-162-927-11	CERAMIC CHIP 100PF 5.00% 50V	
C039	1-163-038-91	CERAMIC CHIP 0.1UF 25V (KV-HA14M80/HA14N80)	
C039	1-164-360-11	CERAMIC CHIP 0.1UF 16V (KV-HA14P52)	
C041	1-162-924-11	CERAMIC CHIP 56PF 5.00% 50V	
C042	1-162-927-11	CERAMIC CHIP 100PF 5.00% 50V	
C043	1-162-927-11	CERAMIC CHIP 100PF 5.00% 50V	
C044	1-162-924-11	CERAMIC CHIP 56PF 5.00% 50V	
C045	1-126-962-11	ELECT 3.3UF 20.00% 63V (KV-HA14M80)	
C045	1-126-962-11	ELECT 3.3UF 20.00% 50V (KV-HA14N80/HA14P52)	
C046	1-162-995-11	CERAMIC CHIP 0.022UF 50V	
C047	1-113-619-11	CERAMIC CHIP 0.47UF 10V	
C048	1-126-965-11	ELECT 22UF 20% 50V	
C049	1-163-038-91	CERAMIC CHIP 0.1UF 25V (KV-HA14M80/HA14N80)	
C049	1-164-360-11	CERAMIC CHIP 0.1UF 16V (KV-HA14P52)	
C050	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V	
C051	1-163-038-91	CERAMIC CHIP 0.1UF 25V (KV-HA14M80/HA14N80)	
C051	1-164-360-11	CERAMIC CHIP 0.1UF 16V (KV-HA14P52)	
C052	1-126-941-11	ELECT 470UF 20% 10V	
C053	1-126-941-11	ELECT 470UF 20% 10V	
C054	1-104-666-11	ELECT 220UF 20.00% 25V (KV-HA14M80/HA14N80)	
C054	1-126-969-11	ELECT 220UF 20.00% 50V (KV-HA14P52)	
C055	1-162-960-11	CERAMIC CHIP 220PF 10.00% 50V	
C056	1-162-927-11	CERAMIC CHIP 100PF 5.00% 50V	
C057	1-162-960-11	CERAMIC CHIP 220PF 10.00% 50V	
C058	1-162-960-11	CERAMIC CHIP 220PF 10.00% 50V	
C061	1-162-966-11	CERAMIC CHIP 0.0022UF 10.00% 50V	
C063	1-162-923-11	CERAMIC CHIP 47PF 5.00% 50V	
C100	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V	
C101	1-125-797-91	ELECT 10UF 20.00% 50V	
C102	1-163-038-91	CERAMIC CHIP 0.1UF 25V (KV-HA14M80)	
C102	1-164-360-11	CERAMIC CHIP 0.1UF 16V (KV-HA14P52)	

A

REF NO.	PART NO.	DESCRIPTION		REMARK	
C103	1-163-038-91	CERAMIC CHIP (KV-HA14M80)	0.1UF		25V
C103	1-164-360-11	CERAMIC CHIP (KV-HA14P52)	0.1UF		16V
C104	1-163-038-91	CERAMIC CHIP (KV-HA14M80)	0.1UF		25V
C104	1-164-360-11	CERAMIC CHIP (KV-HA14P52)	0.1UF		16V
C105	1-163-038-91	CERAMIC CHIP (KV-HA14M80)	0.1UF		25V
C105	1-164-360-11	CERAMIC CHIP (KV-HA14P52)	0.1UF		16V
C106	1-162-968-11	CERAMIC CHIP	0.0047UF	10.00%	50V
C107	1-126-935-11	ELECT	470UF	20%	16V
C108	1-126-767-11	ELECT	1000UF	20.00%	16V
C109	1-163-017-00	CERAMIC CHIP	0.0047UF	10.00%	50V
C110	1-162-970-11	CERAMIC CHIP (KV-HA14M80 ONLY)	0.01UF	10.00%	25V
C111	1-162-970-11	CERAMIC CHIP (KV-HA14M80/HA14P52)	0.01UF	10.00%	25V
C111	1-162-922-11	CERAMIC CHIP (KV-HA14N80)	39PF	5.00%	50V
C112	1-162-970-11	CERAMIC CHIP (KV-HA14M80)	0.01UF	10.00%	25V
C113	1-162-968-11	CERAMIC CHIP (KV-HA14M80)	0.0047UF	10.00%	50V
C115	1-162-968-11	CERAMIC CHIP (KV-HA14M80/HA14P52)	0.0047UF	10.00%	50V
C115	1-216-295-91	SHORT	0 (KV-HA14N80)		
C116	1-162-968-11	CERAMIC CHIP	0.0047UF	10.00%	50V
C117	1-162-924-11	CERAMIC CHIP (KV-HA14M80/HA14P52)	56PF	5.00%	50V
C121	1-162-927-11	CERAMIC CHIP	100PF	5.00%	50V
C122	1-162-915-11	CERAMIC CHIP	10PF	0.50PF	50V
C124	1-130-493-00	MYLAR (KV-HA14M80/HA14P52)	0.068UF	5.00%	50V
C125	1-130-495-00	MYLAR (KV-HA14M80/HA14P52)	0.1UF	5.00%	50V
C126	1-130-493-00	MYLAR (KV-HA14M80/HA14P52)	0.068UF	5.00%	50V
C127	1-162-927-11	CERAMIC CHIP (KV-HA14M80/HA14P52)	100PF	5.00%	50V
C128	1-126-965-11	ELECT	22UF	20%	50V
C129	1-162-970-11	CERAMIC CHIP	0.01UF	10.00%	25V
C130	1-126-933-11	ELECT (KV-HA14N80)	100UF	20.00%	16V
C131	1-162-966-11	CERAMIC CHIP	0.0022UF	10.00%	50V
C200	1-163-023-00	CERAMIC CHIP	0.015UF	10.00%	50V
C201	1-163-023-00	CERAMIC CHIP	0.015UF	10.00%	50V
C202	1-130-495-00	MYLAR	0.1UF	5.00%	50V
C203	1-126-961-11	ELECT	2.2UF	20.00%	50V
C204	1-130-495-00	MYLAR	0.1UF	5.00%	50V
C205	1-125-800-91	ELECT (KV-HA14M80)	2.2UF	20.00%	63V
C205	1-126-961-11	ELECT (KV-HA14N80/HA14P52)	2.2UF	20.00%	50V
C206	1-126-968-11	ELECT	100UF	20.00%	50V
C207	1-126-942-61	ELECT	1000UF	20.00%	25V
C208	1-128-551-11	ELECT	22UF	20.00%	25V
C209	1-126-942-61	ELECT	1000UF	20.00%	25V
C210	1-126-965-11	ELECT	22UF	20.00%	25V
C211	1-126-959-11	ELECT	0.47UF	20.00%	50V
C212	1-126-942-61	ELECT	1000UF	20.00%	25V
C213	1-162-970-11	CERAMIC CHIP	0.01UF	10.00%	25V
C214	1-107-725-11	CERAMIC CHIP	0.1UF	10.00%	16V
C215	1-107-823-11	CERAMIC CHIP (KV-HA14M80/HA14N80)	0.47UF	10.00%	16V
C215	1-125-891-11	CERAMIC CHIP (KV-HA14P52)	0.47UF	10.00%	10V
C216	1-107-725-11	CERAMIC CHIP	0.1UF	10.00%	16V
C217	1-164-227-11	CERAMIC CHIP	0.022UF	10.00%	16V
C218	1-107-823-11	CERAMIC CHIP (KV-HA14M80/HA14N80)	0.47UF	10.00%	16V
C218	1-125-891-11	CERAMIC CHIP (KV-HA14P52)	0.47UF	10.00%	10V
C219	1-104-509-11	CERAMIC CHIP	0.018UF	10.00%	16V
C220	1-164-227-11	CERAMIC CHIP	0.022UF	10.00%	16V
C221	1-162-969-11	CERAMIC CHIP	0.0068UF	10.00%	25V
C222	1-104-509-11	CERAMIC CHIP	0.018UF	10.00%	16V
C223	1-162-969-11	CERAMIC CHIP	0.0068UF	10.00%	25V
C224	1-126-960-11	ELECT	1PF	20%	50V
C225	1-126-960-11	ELECT	1PF	20%	50V
C226	1-125-805-91	ELECT	4.7UF	20.00%	50V
C227	1-126-947-11	ELECT	47UF	20.00%	16V
C228	1-126-961-11	ELECT	2.2UF	20.00%	50V
C229	1-126-961-11	ELECT	2.2UF	20.00%	50V
C230	1-135-834-91	CERAMIC CHIP	2.2E+06PF	6.3V	
C231	1-135-834-91	CERAMIC CHIP	2.2E+06PF	6.3V	
C232	1-135-834-91	CERAMIC CHIP	2.2E+06PF	6.3V	
C234	1-107-823-11	CERAMIC CHIP (KV-HA14M80/HA14N80)	0.47UF	10.00%	16V
C234	1-125-891-11	CERAMIC CHIP (KV-HA14P52)	0.47UF	10.00%	10V
C236	1-126-960-11	ELECT	1PF	20%	50V
C237	1-125-808-91	ELECT	470UF	20.00%	35V
C240	1-135-834-91	CERAMIC CHIP	2.2E+06PF	6.3V	
C241	1-162-967-11	CERAMIC CHIP	0.0033UF	10.00%	50V
C242	1-162-967-11	CERAMIC CHIP	0.0033UF	10.00%	50V
C300	1-162-923-11	CERAMIC CHIP (KV-HA14M80)	47PF	5.00%	50V
C300	1-162-924-11	CERAMIC CHIP (KV-HA14P52)	56PF	5.00%	50V
C301	1-162-920-11	CERAMIC CHIP (KV-HA14M80/HA14P52)	27PF	5.00%	50V
C302	1-162-923-11	CERAMIC CHIP (KV-HA14M80)	47PF	5.00%	50V
C302	1-163-094-00	CERAMIC CHIP (KV-HA14N80)	11PF	5.00%	50V
C303	1-162-925-11	CERAMIC CHIP (KV-HA14M80)	68PF	5.00%	50V
C303	1-163-112-00	CERAMIC CHIP (KV-HA14N80)	62PF	5.00%	50V
C304	1-119-662-91	CERAMIC CHIP	150PF	1.00%	50V
C305	1-126-933-11	ELECT	100UF	20.00%	16V
C306	1-162-968-11	CERAMIC CHIP	0.0047UF	10.00%	50V
C308	1-163-131-00	CERAMIC CHIP (KV-HA14M80/HA14P52)	390PF	5.00%	50V
C309	1-163-263-11	CERAMIC CHIP (KV-HA14M80)	330PF	5.00%	50V
C310	1-163-131-00	CERAMIC CHIP (KV-HA14M80/HA14P52)	390PF	5.00%	50V
C311	1-162-962-11	CERAMIC CHIP (KV-HA14M80/HA14N80)	470PF	10.00%	50V
C312	1-162-916-11	CERAMIC CHIP	12PF	5.00%	50V
C315	1-125-800-91	ELECT (KV-HA14M80)	2.2UF	20.00%	63V
C315	1-126-961-11	ELECT (KV-HA14N80/HA14P52)	2.2UF	20.00%	50V

A

REF NO.	PART NO.	DESCRIPTION		REMARK	
C316	1-162-923-11	CERAMIC CHIP (KV-HA14M80)	47PF	5.00%	50V
C317	1-216-295-91	SHORT	0		
C318	1-163-038-91	CERAMIC CHIP (KV-HA14M80/HA14N80)	0.1UF		25V
C318	1-164-360-11	CERAMIC CHIP (KV-HA14P52)	0.1UF		16V
C319	1-163-038-91	CERAMIC CHIP (KV-HA14M80/HA14N80)	0.1UF		25V
C319	1-164-360-11	CERAMIC CHIP (KV-HA14P52)	0.1UF		16V
C320	1-163-038-91	CERAMIC CHIP (KV-HA14M80/HA14N80)	0.1UF		25V
C320	1-164-360-11	CERAMIC CHIP (KV-HA14P52)	0.1UF		16V
C321	1-125-805-91	ELECT	4.7UF	20.00%	50V
C323	1-162-927-11	CERAMIC CHIP	100PF	5.00%	50V
C327	1-163-038-91	CERAMIC CHIP (KV-HA14M80/HA14N80)	0.1UF		25V
C327	1-164-360-11	CERAMIC CHIP (KV-HA14P52)	0.1UF		16V
C328	1-164-222-91	CERAMIC CHIP (KV-HA14M80/HA14N80)	0.22UF		25V
C328	1-165-128-11	CERAMIC CHIP (KV-HA14P52)	0.22UF		16V
C329	1-163-038-91	CERAMIC CHIP (KV-HA14M80/HA14N80)	0.1UF		25V
C329	1-164-360-11	CERAMIC CHIP (KV-HA14P52)	0.1UF		16V
C330	1-163-038-91	CERAMIC CHIP (KV-HA14M80/HA14N80)	0.1UF		25V
C330	1-164-360-11	CERAMIC CHIP (KV-HA14P52)	0.1UF		16V
C332	1-126-933-11	ELECT	100UF	20.00%	16V
C335	1-125-796-91	ELECT	47UF	20.00%	16V
C337	1-163-038-91	CERAMIC CHIP (KV-HA14M80/HA14N80)	0.1UF		25V
C337	1-164-360-11	CERAMIC CHIP (KV-HA14P52)	0.1UF		16V
C339	1-163-038-91	CERAMIC CHIP (KV-HA14M80/HA14N80)	0.1UF		25V
C339	1-164-360-11	CERAMIC CHIP (KV-HA14P52)	0.1UF		16V
C342	1-163-038-91	CERAMIC CHIP (KV-HA14M80/HA14N80)	0.1UF		25V
C342	1-164-360-11	CERAMIC CHIP (KV-HA14P52)	0.1UF		16V
C343	1-162-917-11	CERAMIC CHIP	15PF	5.00%	50V
C344	1-163-098-00	CERAMIC CHIP (KV-HA14M80)	16PF	5.00%	50V
C344	1-162-917-11	CERAMIC CHIP (KV-HA14N80/HA14P52)	15PF	5.00%	50V
C345	1-162-967-11	CERAMIC CHIP	0.0033UF	10.00%	50V
C346	1-163-038-91	CERAMIC CHIP (KV-HA14M80/HA14N80)	0.1UF		25V
C346	1-164-360-11	CERAMIC CHIP (KV-HA14P52)	0.1UF		16V
C347	1-126-933-11	ELECT	100UF	20.00%	16V
C348	1-163-038-91	CERAMIC CHIP (KV-HA14M80/HA14N80)	0.1UF		25V
C348	1-164-360-11	CERAMIC CHIP (KV-HA14P52)	0.1UF		16V
C349	1-164-346-11	CERAMIC CHIP	1UF		16V

REF NO.	PART NO.	DESCRIPTION		REMARK	
C352	1-162-966-11	CERAMIC CHIP	0.0022UF	10.00%	50V
C353	1-107-823-11	CERAMIC CHIP (KV-HA14M80/HA14N80)	0.47UF	10.00%	16V
C353	1-125-891-11	CERAMIC CHIP (KV-HA14P52)	0.47UF	10.00%	10V
C354	1-162-968-11	CERAMIC CHIP	0.0047UF	10.00%	50V
C355	1-107-823-11	CERAMIC CHIP (KV-HA14M80/HA14N80)	0.47UF	10.00%	16V
C355	1-125-891-11	CERAMIC CHIP (KV-HA14P52)	0.47UF	10.00%	10V
C356	1-162-970-11	CERAMIC CHIP	0.01UF	10.00%	25V
C357	1-162-964-11	CERAMIC CHIP	0.001UF	10.00%	50V
C358	1-162-927-11	CERAMIC CHIP	100PF	5.00%	50V
C359	1-163-038-91	CERAMIC CHIP (KV-HA14M80/HA14N80)	0.1UF		25V
C359	1-164-360-11	CERAMIC CHIP (KV-HA14P52)	0.1UF		16V
C360	1-136-165-00	FILM	0.1UF	5.00%	50V
C361	1-135-834-91	CERAMIC CHIP	2.2E+06PF		6.3V
C362	1-113-619-11	CERAMIC CHIP	0.47UF		10V
C363	1-162-968-11	CERAMIC CHIP	0.0047UF	10.00%	50V
C364	1-125-797-91	ELECT	10UF	20.00%	50V
C366	1-126-933-11	ELECT	100UF	20.00%	16V
C369	1-137-194-81	FILM	0.47UF	5.00%	50V
C370	1-216-295-91	SHORT (KV-HA14M80/HA14N80)	0		
C400	1-126-934-11	ELECT	220UF	20.00%	16V
C403	1-115-156-11	CERAMIC CHIP	1UF		10V
C404	1-126-960-11	ELECT	1PF	20%	50V
C405	1-126-960-11	ELECT	1PF	20%	50V
C406	1-115-156-11	CERAMIC CHIP	1UF		10V
C407	1-126-934-11	ELECT	220UF	20.00%	16V
C408	1-163-038-91	CERAMIC CHIP (KV-HA14M80/HA14N80)	0.1UF		25V
C408	1-164-360-11	CERAMIC CHIP (KV-HA14P52)	0.1UF		16V
C409	1-163-038-91	CERAMIC CHIP (KV-HA14M80/HA14N80)	0.1UF		25V
C409	1-164-360-11	CERAMIC CHIP (KV-HA14P52)	0.1UF		16V
C410	1-126-933-11	ELECT	100UF	20.00%	16V
C411	1-163-038-91	CERAMIC CHIP (KV-HA14M80/HA14N80)	0.1UF		25V
C411	1-164-360-11	CERAMIC CHIP (KV-HA14P52)	0.1UF		16V
C412	1-126-965-11	ELECT	22UF	20.00%	25V
C414	1-163-038-91	CERAMIC CHIP (KV-HA14M80/HA14N80)	0.1UF		25V
C414	1-164-360-11	CERAMIC CHIP (KV-HA14P52)	0.1UF		16V
C418	1-126-933-11	ELECT	100UF	20.00%	16V
C425	1-162-927-11	CERAMIC CHIP	100PF	5.00%	50V
C426	1-162-927-11	CERAMIC CHIP	100PF	5.00%	50V
C435	1-126-934-11	ELECT	220UF	20.00%	16V
C500	1-126-933-11	ELECT	100UF	20.00%	16V
C501	1-104-666-11	ELECT	220UF	20.00%	25V
C502	1-104-666-11	ELECT	220UF	20.00%	25V
C503	1-162-318-11	CERAMIC	0.001UF	10.00%	500V
C504	1-162-318-11	CERAMIC	0.001UF	10.00%	500V
C505	1-123-024-21	ELECT	33UF		160V
C507	1-102-228-00	CERAMIC	470PF	10.00%	500V
C508	1-107-654-11	ELECT	33UF	20.00%	250V

The components identified by shading and mark ⚠ are critical for safety. Replace only with part number specified.

A

REF NO.		PART NO.	DESCRIPTION			REMARK
C509		1-137-350-11	MYLAR	0.015UF	10.00%	100V
C510		1-106-379-12	MYLAR	0.033UF	10.00%	100V
C552		1-137-194-81	FILM	0.47UF	5.00%	50V
C554		1-163-035-00	CERAMIC CHIP (KV-HA14M80/HA14N80)	0.047UF		50V
C554		1-164-361-11	CERAMIC CHIP (KV-HA14P52)	0.047UF		25V
C555		1-126-949-11	ELECT	220UF	20.00%	35V
C556		1-163-038-91	CERAMIC CHIP (KV-HA14M80/HA14N80)	0.1UF		25V
C556		1-164-360-11	CERAMIC CHIP (KV-HA14P52)	0.1UF		16V
C557		1-126-948-11	ELECT	100UF	20%	35V
C558		1-162-964-11	CERAMIC CHIP	0.001UF	10.00%	50V
C559		1-106-220-00	MYLAR	0.1UF	10.00%	100V
C561		1-162-968-11	CERAMIC CHIP	0.0047UF	10.00%	50V
C562		1-137-401-11	MYLAR	0.22UF	10.00%	100V
C600		1-161-830-00	CERAMIC	0.0047UF	99%	500V
C601	⚠	1-115-165-11	FILM	0.1UF	20.00%	275V
C602		1-117-751-11	ELECT(BLOCK)	220UF	20.00%	450V
C603		1-117-619-11	FILM	1000PF	3.00%	1.2KV
C604		1-161-830-00	CERAMIC	0.0047UF	99%	500V
C605		1-161-830-00	CERAMIC	0.0047UF	99%	500V
C606		1-104-666-11	ELECT	220UF	20.00%	25V
C607		1-161-830-00	CERAMIC	0.0047UF	99%	500V
C608		1-161-830-00	CERAMIC	0.0047UF	99%	500V
C609		1-162-962-11	CERAMIC CHIP	470PF	10.00%	50V
C610		1-126-948-11	ELECT	100UF	20%	35V
C611		1-163-145-00	CERAMIC CHIP	0.0015UF	5.00%	50V
C612	⚠	1-119-886-51	CERAMIC	470PF	10.00%	250V
C613		1-102-228-00	CERAMIC	470PF	10.00%	500V
C614		1-123-024-21	ELECT	33UF		160V
C615		1-102-228-00	CERAMIC	470PF	10.00%	500V
C616		1-126-943-11	ELECT	2200UF	20%	25V
C617		1-126-942-61	ELECT	1000UF	20.00%	25V
C618		1-126-933-11	ELECT	100UF	20.00%	16V
C619	⚠	1-119-886-51	CERAMIC	470PF	10.00%	250V
C620		1-162-134-11	CERAMIC	470PF	10.00%	2KV
C621	⚠	1-117-703-41	CERAMIC	0.0047UF	99%	250V
C626		1-106-383-00	MYLAR	0.047UF	10.00%	200V
C628		1-162-962-11	CERAMIC CHIP	470PF	10.00%	50V
C800		1-126-960-11	ELECT	1PF	20%	50V
C801		1-162-964-11	CERAMIC CHIP	0.001UF	10.00%	50V
C802		1-106-375-12	MYLAR	0.022UF	99%	200V
C803		1-102-244-00	CERAMIC	220PF	10.00%	500V
C804		1-162-318-11	CERAMIC	0.001UF	10.00%	500V
C807		1-162-115-00	CERAMIC	330PF	10.00%	2KV
C808		1-106-365-00	MYLAR	0.0082UF	10.00%	200V
C809		1-107-364-11	MYLAR	0.01UF	10.00%	200V
C810		1-106-375-12	MYLAR	0.022UF	99%	200V
C811		1-107-957-11	ELECT	1UF	20.00%	250V
C812		1-117-664-11	FILM	0.27UF	5.00%	250V
C813		1-161-754-00	CERAMIC	0.001UF	10.00%	2KV
C814		1-117-644-11	FILM	10000PF	3.00%	1.2KV
C852		1-117-661-71	FILM	0.15UF	5.00%	250V
C856		1-162-964-11	CERAMIC CHIP	0.001UF	10.00%	50V
C857		1-125-797-91	ELECT	10UF	20.00%	50V
C858		1-162-974-11	CERAMIC CHIP	0.01UF		50V
C859		1-162-974-11	CERAMIC CHIP	0.01UF		50V
C860		1-208-834-11	METAL CHIP	150K	0.5%	1/10W
C863		1-216-295-91	SHORT	0		
C865		1-126-933-11	ELECT	100UF	20.00%	16V
C866		1-162-974-11	CERAMIC CHIP	0.01UF		50V
C867		1-162-966-11	CERAMIC CHIP	0.0022UF	10.00%	50V
C868		1-162-995-11	CERAMIC CHIP	0.022UF		50V
C869		1-115-339-11	CERAMIC CHIP (KV-HA14M80/HA14N80)	0.1UF	10.00%	50V
C869		1-164-156-11	CERAMIC CHIP (KV-HA14P52)	0.1UF		25V
C870		1-162-960-11	CERAMIC CHIP	220PF	10.00%	50V
C872		1-163-038-91	CERAMIC CHIP (KV-HA14M80/HA14N80)	0.1UF		25V
C872		1-164-360-11	CERAMIC CHIP (KV-HA14P52)	0.1UF		16V
C873		1-162-974-11	CERAMIC CHIP	0.01UF		50V
C874		1-162-974-11	CERAMIC CHIP	0.01UF		50V
C875		1-163-038-91	CERAMIC CHIP (KV-HA14M80/HA14N80)	0.1UF		25V
C875		1-164-360-11	CERAMIC CHIP (KV-HA14P52)	0.1UF		16V
			<FILTER>			
CF345		1-234-684-21	FILTER, BAND PASS (F4.5C) (KV-HA14M80/HA14N80)			
CF355		1-234-686-21	FILTER, BAND PASS (F5.5C) (KV-HA14M80/HA14P52)			
CF360		1-234-689-21	FILTER, BAND PASS (F6.0C) (KV-HA14M80)			
CF365		1-234-691-21	FILTER, BAND PASS (F6.5C) (KV-HA14M80)			
CF365		1-760-107-11	FILTER, CERAMIC (KV-HA14P52)			
			<CONNECTOR>			
CN003	*	1-508-797-00	PIN, CONNECTOR 4P			
CN200		1-564-507-11	PLUG, CONNECTOR 4P			
CN300		1-564-509-11	PLUG, CONNECTOR 6P			
CN500	*	1-564-508-11	PLUG, CONNECTOR 5P			
CN600	*	1-508-786-00	PIN, CONNECTOR (5MM PITCH) 2P (KV-HA14M80/HA14N80)			
CN601	*	1-573-963-11	PIN, CONNECTOR (PC BOARD) 3P			
CN602		1-580-843-11	PIN, CONNECTOR (POWER)			
			<TRIMMER>			
CT131		1-767-774-22	TRAP, CERAMIC (KV-HA14M80/HA14P52)			
CT131		1-249-404-00	CARBON (KV-HA14N80)	82	5%	1/4W
CT139		1-767-775-22	TRAP, CERAMIC (KV-HA14M80/HA14P52)			
CT345		1-795-342-21	TRAP, CERAMIC (T4.5C) (KV-HA14M80/HA14N80)			
CT355		1-795-343-21	TRAP, CERAMIC (T55B) (KV-HA14M80/HA14P52)			
CT360		1-795-344-21	TRAP, CERAMIC (T60B) (KV-HA14M80)			
CT365		1-795-345-21	TRAP, CERAMIC (T65B) (KV-HA14M80)			
CT365		1-795-343-21	TRAP, CERAMIC (T55B) (KV-HA14P52)			
			<DIODE>			
D001		8-719-083-18	DIODE SPB-25MVWF			
D004		8-719-911-19	1SS119-25			
D005		1-162-318-11	CERAMIC	0.001UF	10.00%	500V
D006		8-719-109-89	RD5.6ESB2			
D007		8-719-159-10	RD5.1SB-T2 (KV-HA14M80/HA14N80)			
D007		8-719-069-54	UDZSTE-175.1B (KV-HA14P52)			
D009		8-719-159-10	RD5.1SB-T2 (KV-HA14M80/HA14N80)			
D009		8-719-069-54	UDZSTE-175.1B (KV-HA14P52)			

The components identified by shading and mark ⚠ are critical for safety.
Replace only with part number specified.

A

REF NO.	PART NO.	DESCRIPTION	REMARK
D100	8-719-421-40	MA77 (KV-HA14M80)	
D103	8-759-157-40	UPC574J	
D104	8-719-914-42	DA204K	
D200	8-719-914-42	DA204K	
D202	8-719-988-61	1SS355TE-17	
D203	8-719-988-61	1SS355TE-17	
D301	8-719-988-61	1SS355TE-17 (KV-HA14M80/HA14N80)	
D304	8-719-063-66	HZS361-TE	
D305	8-719-988-61	1SS355TE-17	
D306	8-719-109-54	RD2.2ES-B2	
D307	8-719-988-61	1SS355TE-17	
D308	8-719-988-61	1SS355TE-17	
D309	8-719-069-60	UDZSTE-179.1B	
D310	8-719-911-19	1SS119-25	
D311	8-719-070-15	NNCD8.2A-T1	
D312	8-719-069-60	UDZSTE-179.1B	
D314	8-719-908-03	GP08D	
D315	8-719-988-61	1SS355TE-17	
D318	8-719-988-61	1SS355TE-17	
D319	8-719-988-61	1SS355TE-17	
D320	8-719-988-61	1SS355TE-17	
D321	8-719-988-61	1SS355TE-17	
D322	8-719-069-60	UDZSTE-179.1B	
D323	8-719-069-60	UDZSTE-179.1B	
D324	8-719-069-60	UDZSTE-179.1B	
D325	8-719-069-60	UDZSTE-179.1B	
D327	8-719-988-61	1SS355TE-17	
D331	8-719-069-60	UDZSTE-179.1B (KV-HA14M80/HA14P52)	
D332	8-719-069-60	UDZSTE-179.1B (KV-HA14M80/HA14P52)	
D333	8-719-069-60	UDZSTE-179.1B (KV-HA14M80/HA14P52)	
D400	8-719-988-61	1SS355TE-17	
D401	8-719-988-61	1SS355TE-17	
D402	8-719-070-16	NNCD9.1A-T1	
D403	8-719-069-60	UDZSTE-179.1B	
D404	8-719-069-60	UDZSTE-179.1B	
D405	8-719-070-16	NNCD9.1A-T1	
D406	8-719-069-60	UDZSTE-179.1B	
D407	8-719-069-60	UDZSTE-179.1B	
D500	8-719-911-19	1SS119-25	
D501	8-719-911-19	1SS119-25	
D502	8-719-302-43	EL1Z	
D503	8-719-302-43	EL1Z	
D504	8-719-302-43	EL1Z	
D552	8-719-908-03	GP08D	
D553	8-719-109-89	RD5.6ESB2	
D600	8-719-030-33	DIODE EG01CV1	
D601	8-719-077-77	D3SB60F3	
D602	8-719-084-25	DIODE RM2LF-C4	
D603	8-719-110-39	RD15ES-B1	
D604	8-719-063-70	D1NL20U	
D605	8-719-063-70	D1NL20U	
D606	8-719-063-70	D1NL20U	
D607	8-719-027-22	D3S6M-F	
D608	8-719-312-10	RU4AM-T3	
D609	8-719-510-73	S3L20UF4	
D800	8-719-911-19	1SS119-25	
D802	8-719-908-03	GP08D	
D803	8-719-908-03	GP08D	
D804	8-719-081-00	DIODE BY228/A52A/	
D805	8-719-069-60	UDZSTE-179.1B	

REF NO.		PART NO.	DESCRIPTION	REMARK
D851		8-719-979-85	EGP20G	
D853		8-719-988-61	1SS355TE-17	
D854		8-719-158-53	RD13SB2	
			<CONNECTOR>	
DY1	*	1-580-798-11	CONNECTOR PIN (DY) 6P	
			<FUSE>	
F600	⚠	1-532-237-00	FUSE, TIME-LAG (BET) 3.15A/250V	
			<FERRITE BEAD>	
FB001		1-410-397-21	FERRITE 1.1UH	
FB100		1-410-396-71	FERRITE 0.45UH	
FB603		1-412-911-31	FERRITE 0UH	
FB604		1-410-397-21	FERRITE 1.1UH	
FB800		1-410-397-21	FERRITE 1.1UH	
			<IC>	
IC001		8-752-925-65	IC CXP85224A-080S (KV-HA14M80)	
IC001		8-752-925-68	IC CXP85220A-083S (KV-HA14N80)	
IC001		8-752-925-66	IC CXP85224A-081S (KV-HA14P52)	
IC002		8-759-371-21	MM1319AFBE	
IC003		8-759-672-78	M24C08-BN6(A)	
IC004		8-742-225-20	IC SBX3081-21	
IC101		8-759-231-53	TA7805S (KV-HA14N80)	
IC201		8-759-476-86	TDA7438D013TR	
IC203		6-700-034-01	IC AN5276	
IC301		6-700-146-01	IC TDA8844/N2 (KV-HA14M80)	
IC301		6-700-145-01	IC TDA8843/N2 (KV-HA14N80/HA14P52)	
IC402		8-759-649-89	IC MC4558CD	
IC551		8-759-835-98	IC AN5522	
IC601		8-749-019-43	IC STR-F6706A	
IC602		8-749-920-61	SE-135N	
IC604		8-759-544-13	IC KA78R09TU	
IC850		8-759-700-07	NJM2903M	
IC851		8-759-649-89	IC MC4558CD	
			<JACK>	
J200		1-770-786-11	JACK	
J400		1-779-850-11	JACK BLOCK, PIN 6P	
J401		1-770-329-11	JACK, PIN 3P	
			<CHIP CONDUCTOR>	
JR001		1-216-295-91	SHORT 0	
JR002		1-216-295-91	SHORT 0 (KV-HA14N80)	
JR003		1-216-295-91	SHORT 0	
JR006		1-216-295-91	SHORT 0	
JR013		1-216-295-91	SHORT 0	
JR014		1-216-295-91	SHORT 0	
JR015		1-216-295-91	SHORT 0	
JR016		1-216-295-91	SHORT 0	
JR018		1-216-295-91	SHORT 0	
JR020		1-216-295-91	SHORT 0	
JR034		1-216-295-91	SHORT 0 (KV-HA14M80)	
JR035		1-216-295-91	SHORT 0	

The components identified by shading and mark ⚠ are critical for safety. Replace only with part number specified.

A

REF NO.	PART NO.	DESCRIPTION	REMARK
JR036	1-216-295-91	SHORT	0
JR100	1-216-295-91	SHORT	0 (KV-HA14N80/HA14P52)
JR205	1-216-295-91	SHORT	0
JR210	1-216-295-91	SHORT	0
JR212	1-216-295-91	SHORT	0
JR214	1-216-295-91	SHORT	0
JR301	1-216-295-91	SHORT	0
JR304	1-216-295-91	SHORT	0
JR400	1-216-295-91	SHORT	0
		<COIL>	
L001	1-414-855-31	INDUCTOR	1UH
L002	1-414-184-41	INDUCTOR	15UH
L100	1-414-856-11	INDUCTOR	10UH
L101	1-410-498-11	INDUCTOR	1.2UH (KV-HA14M80/HA14P52)
L102	1-410-985-42	INDUCTOR	0.22UH (KV-HA14M80/HA14P52)
L102	1-410-987-42	INDUCTOR	0.33UH (KV-HA14N80)
L103	1-410-987-42	INDUCTOR	0.33UH (KV-HA14M80/HA14P52)
L200	1-249-401-11	CARBON	47 5% 1/4W
L300	1-410-512-11	INDUCTOR	18UH (KV-HA14M80)
L300	1-410-511-11	INDUCTOR	15UH (KV-HA14P52)
L301	1-410-510-11	INDUCTOR	12UH (KV-HA14M80)
L301	1-410-512-11	INDUCTOR	18UH (KV-HA14N80)
L302	1-410-508-11	INDUCTOR	8.2UH (KV-HA14M80)
L303	1-410-508-11	INDUCTOR	8.2UH (KV-HA14M80)
L303	1-410-512-11	INDUCTOR	18UH (KV-HA14N80)
L304	1-410-510-11	INDUCTOR	12UH (KV-HA14M80/HA14P52)
L305	1-410-510-11	INDUCTOR	12UH (KV-HA14M80/HA14P52)
L306	1-410-500-11	INDUCTOR	1.8UH (KV-HA14M80)
L306	1-410-501-11	INDUCTOR	2.2UH (KV-HA14P52)
L307	1-410-501-11	INDUCTOR	2.2UH (KV-HA14M80)
L308	1-410-501-11	INDUCTOR	2.2UH (KV-HA14M80/HA14P52)
L309	1-410-502-11	INDUCTOR	2.7UH (KV-HA14M80/HA14N80)
L310	1-408-608-31	INDUCTOR	27UH (KV-HA14M80)
L400	1-414-187-11	INDUCTOR	47UH
L500	1-408-947-00	INDUCTOR	2.2MH
L600	1-412-533-21	INDUCTOR	47UH
L601	1-414-487-41	INDUCTOR	1UH
L800	1-406-677-11	INDUCTOR	10MH
L802	1-424-795-11	COIL, HORIZONTAL LINEARITY	
L803	1-414-493-41	INDUCTOR	4.7MH
		<PHOTO COUPLER>	
PH600	⚠ 8-749-010-64	PC123F2 (KV-HA14M80/HA14N80)	
PH600	⚠ 8-749-924-35	ON3171-R (KV-HA14P52)	
		<IC LINK>	
PS600	1-533-597-41	LINK, IC	
PS601	1-533-597-41	LINK, IC	

REF NO.	PART NO.	DESCRIPTION	REMARK
		<TRANSISTOR>	
Q001	8-729-421-19	UN2213	
Q002	8-729-421-19	UN2213	
Q003	8-729-010-25	MSD601-RT1	
Q004	8-729-010-25	MSD601-RT1	
Q005	8-729-421-19	UN2213	
Q100	8-729-010-25	MSD601-RT1	
Q101	8-729-010-25	MSD601-RT1 (KV-HA14M80)	
Q102	8-729-022-54	TRANSISTOR 2SC3779C,D-AA (KV-HA14M80/HA14P52)	
Q103	8-729-424-67	UN2216 (KV-HA14M80)	
Q104	8-729-424-67	UN2216 (KV-HA14M80)	
Q105	8-729-010-25	MSD601-RT1	
Q106	8-729-010-25	MSD601-RT1 (KV-HA14M80/HA14P52)	
Q201	8-729-010-25	MSD601-RT1	
Q202	8-729-036-56	2SK208-GR-TE85L	
Q203	8-729-010-25	MSD601-RT1	
Q204	8-729-216-22	2SA1162-G	
Q205	8-729-421-22	UN2211	
Q208	1-801-806-11	TR DTC144EKA	
Q300	8-729-010-05	MSB709-RT1 (KV-HA14M80)	
Q301	8-729-010-05	MSB709-RT1 (KV-HA14M80/HA14P52)	
Q302	8-729-010-05	MSB709-RT1 (KV-HA14M80/HA14N80)	
Q303	8-729-010-25	MSD601-RT1 (KV-HA14M80/HA14P52)	
Q304	8-729-010-05	MSB709-RT1 (KV-HA14M80/HA14P52)	
Q305	8-729-010-05	MSB709-RT1 (KV-HA14M80/HA14P52)	
Q306	8-729-010-25	MSD601-RT1 (KV-HA14M80/HA14P52)	
Q307	8-729-010-25	MSD601-RT1 (KV-HA14M80)	
Q308	8-729-424-67	UN2216 (KV-HA14M80/HA14P52)	
Q309	8-729-010-25	MSD601-RT1 (KV-HA14M80/HA14P52)	
Q310	8-729-424-67	UN2216 (KV-HA14M80)	
Q311	8-729-010-25	MSD601-RT1 (KV-HA14M80/HA14N80)	
Q312	8-729-424-67	UN2216 (KV-HA14M80/HA14P52)	
Q313	8-729-424-67	UN2216 (KV-HA14M80/HA14N80)	
Q314	8-729-421-22	UN2211 (KV-HA14M80)	
Q315	8-729-010-25	MSD601-RT1	
Q318	8-729-010-25	MSD601-RT1	
Q320	8-729-421-22	UN2211	
Q321	8-729-424-67	UN2216 (KV-HA14N80)	
Q400	8-729-010-05	MSB709-RT1	
Q401	8-729-424-67	UN2216	
Q402	8-729-424-67	UN2216	
Q403	8-729-010-05	MSB709-RT1	
Q404	8-729-010-05	MSB709-RT1	
Q405	8-729-010-05	MSB709-RT1	
Q406	8-729-010-25	MSD601-RT1	
Q407	8-729-010-25	MSD601-RT1	
Q500	8-729-200-17	2SA1091-O	
Q800	8-729-140-50	2SC3209LK	
Q801	8-729-055-74	TRANSISTOR 2SD2624-CA	
Q802	8-729-050-48	TRANSISTOR IRF614-005	
Q850	8-729-010-25	MSD601-RT1	
Q851	8-729-010-05	MSB709-RT1	
		<RESISTOR>	
R001	1-216-071-00	RES-CHIP	8.2K 5% 1/10W
R002	1-216-071-00	RES-CHIP	8.2K 5% 1/10W
R003	1-216-059-00	RES-CHIP	2.7K 5% 1/10W
R004	1-216-059-00	RES-CHIP	2.7K 5% 1/10W
R005	1-216-043-91	RES-CHIP	560 5% 1/10W

A

REF NO.	PART NO.	DESCRIPTION		REMARK	
R006	1-216-043-91	RES-CHIP	560	5%	1/10W
R007	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R008	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R009	1-216-037-00	RES-CHIP	330	5%	1/10W
R010	1-216-037-00	RES-CHIP	330	5%	1/10W
R011	1-216-295-91	SHORT	0		
R012	1-216-049-11	RES-CHIP	1K	5%	1/10W
R013	1-216-021-00	RES-CHIP	68	5%	1/10W
R014	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R015	1-216-025-11	RES-CHIP	100	5%	1/10W
R016	1-216-037-00	RES-CHIP	330	5%	1/10W
R017	1-216-049-11	RES-CHIP	1K	5%	1/10W
R018	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R019	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R020	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R021	1-216-049-11	RES-CHIP (KV-HA14M80)	1K	5%	1/10W
R022	1-216-049-11	RES-CHIP	1K	5%	1/10W
R024	1-216-025-11	RES-CHIP	100	5%	1/10W
R025	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R026	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R027	1-216-101-00	RES-CHIP	150K	5%	1/10W
R028	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R029	1-216-025-11	RES-CHIP	100	5%	1/10W
R031	1-216-025-11	RES-CHIP	100	5%	1/10W
R032	1-216-049-11	RES-CHIP	1K	5%	1/10W
R033	1-216-073-91	RES-CHIP	10K	5%	1/10W
R034	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R035	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R036	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R037	1-216-049-11	RES-CHIP (KV-HA14M80/HA14P52)	1K	5%	1/10W
R038	1-216-049-11	RES-CHIP (KV-HA14M80/HA14P52)	1K	5%	1/10W
R039	1-216-043-91	RES-CHIP	560	5%	1/10W
R042	1-216-039-00	RES-CHIP	390	5%	1/10W
R043	1-216-025-11	RES-CHIP	100	5%	1/10W
R044	1-216-033-00	RES-CHIP	220	5%	1/10W
R045	1-216-073-91	RES-CHIP	10K	5%	1/10W
R046	1-216-685-11	METAL CHIP	27K	0.5%	1/10W
R047	1-216-025-11	RES-CHIP	100	5%	1/10W
R048	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R049	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R050	1-208-820-11	METAL CHIP	39K	0.5%	1/10W
R051	1-216-073-91	RES-CHIP	10K	5%	1/10W
R052	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R053	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R054	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R055	1-216-049-11	RES-CHIP	1K	5%	1/10W
R056	1-216-049-11	RES-CHIP	1K	5%	1/10W
R057	1-216-025-11	RES-CHIP	100	5%	1/10W
R058	1-216-025-11	RES-CHIP	100	5%	1/10W
R059	1-216-033-00	RES-CHIP	220	5%	1/10W
R060	1-216-033-00	RES-CHIP	220	5%	1/10W
R061	1-216-033-00	RES-CHIP	220	5%	1/10W
R062	1-216-049-11	RES-CHIP (KV-HA14M80/HA14P52)	1K	5%	1/10W
R063	1-216-049-11	RES-CHIP (KV-HA14M80/HA14P52)	1K	5%	1/10W
R064	1-216-049-11	RES-CHIP (KV-HA14M80/HA14N80)	1K	5%	1/10W

REF NO.	PART NO.	DESCRIPTION		REMARK	
R065	1-216-049-11	RES-CHIP	1K	5%	1/10W
R066	1-216-049-11	RES-CHIP	1K	5%	1/10W
R072	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R073	1-216-081-00	RES-CHIP	22K	5%	1/10W
R074	1-216-049-11	RES-CHIP	1K	5%	1/10W
R077	1-216-025-11	RES-CHIP	100	5%	1/10W
R100	1-216-049-11	RES-CHIP	1K	5%	1/10W
R101	1-216-063-91	RES-CHIP (KV-HA14M80)	3.9K	5%	1/10W
R102	1-216-065-91	RES-CHIP (KV-HA14M80)	4.7K	5%	1/10W
R103	1-211-981-11	METAL CHIP	33	0.5%	1/10W
R104	1-216-035-00	RES-CHIP (KV-HA14M80)	270	5%	1/10W
R105	1-216-021-00	RES-CHIP (KV-HA14M80)	68	5%	1/10W
R106	1-216-065-91	RES-CHIP (KV-HA14M80/HA14P52)	4.7K	5%	1/10W
R107	1-216-063-91	RES-CHIP (KV-HA14M80/HA14P52)	3.9K	5%	1/10W
R107	1-410-993-42	INDUCTOR	1UH (KV-HA14N80)		
R108	1-216-041-00	RES-CHIP (KV-HA14M80/HA14P52)	470	5%	1/10W
R108	1-216-295-91	SHORT	0 (KV-HA14N80)		
R109	1-216-019-00	RES-CHIP (KV-HA14M80/HA14P52)	56	5%	1/10W
R111	1-216-073-91	RES-CHIP (KV-HA14M80)	10K	5%	1/10W
R112	1-216-069-00	RES-CHIP (KV-HA14M80)	6.8K	5%	1/10W
R113	1-216-057-00	RES-CHIP (KV-HA14M80)	2.2K	5%	1/10W
R114	1-216-057-00	RES-CHIP (KV-HA14M80)	2.2K	5%	1/10W
R115	1-216-065-91	RES-CHIP (KV-HA14M80/HA14P52)	4.7K	5%	1/10W
R117	1-216-081-00	RES-CHIP	22K	5%	1/10W
R118	1-216-041-00	RES-CHIP	470	5%	1/10W
R119	1-216-081-00	RES-CHIP	22K	5%	1/10W
R120	1-216-055-00	RES-CHIP (KV-HA14M80/HA14P52)	1.8K	5%	1/10W
R121	1-216-081-00	RES-CHIP (KV-HA14M80/HA14P52)	22K	5%	1/10W
R122	1-216-109-00	RES-CHIP (KV-HA14M80/HA14P52)	330K	5%	1/10W
R123	1-216-081-00	RES-CHIP (KV-HA14M80/HA14P52)	22K	5%	1/10W
R124	1-216-081-00	RES-CHIP	22K	5%	1/10W
R125	1-215-925-11	METAL OXIDE	22K	5%	3W
R128	1-216-025-11	RES-CHIP	100	5%	1/10W
R129	1-211-977-11	METAL CHIP	22	0.5%	1/10W
R130	1-216-049-11	RES-CHIP (KV-HA14M80/HA14P52)	1K	5%	1/10W
R133	1-249-389-11	CARBON	4.7	5%	1/4W
R134	1-216-295-91	SHORT (KV-HA14M80/HA14P52)	0		
R134	1-216-041-00	RES-CHIP (KV-HA14N80)	470	5%	1/10W
R135	1-216-295-91	SHORT	0 (KV-HA14M80/HA14P52)		
R135	1-216-041-00	RES-CHIP (KV-HA14N80)	470	5%	1/10W
R200	1-216-061-91	RES-CHIP	3.3K	5%	1/10W
R201	1-216-069-00	RES-CHIP	6.8K	5%	1/10W
R202	1-216-081-00	RES-CHIP	22K	5%	1/10W
R203	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R204	1-216-061-91	RES-CHIP	3.3K	5%	1/10W

A

REF NO.	PART NO.	DESCRIPTION		REMARK	
R205	1-216-081-00	RES-CHIP	22K	5%	1/10W
R206	1-216-069-00	RES-CHIP	6.8K	5%	1/10W
R207	1-216-069-00	RES-CHIP	6.8K	5%	1/10W
R208	1-216-073-91	RES-CHIP	10K	5%	1/10W
R209	1-216-073-91	RES-CHIP	10K	5%	1/10W
R210	1-249-409-11	CARBON	220	5%	1/4W
R211	1-247-887-00	CARBON	220	5%	1/4W
R212	1-216-049-11	RES-CHIP	1K	5%	1/10W
R214	1-216-295-91	SHORT	0		
R215	1-216-067-00	RES-CHIP	5.6K	5%	1/10W
R216	1-216-067-00	RES-CHIP	5.6K	5%	1/10W
R217	1-216-059-00	RES-CHIP	2.7K	5%	1/10W
R218	1-216-059-00	RES-CHIP	2.7K	5%	1/10W
R219	1-216-025-11	RES-CHIP	100	5%	1/10W
R220	1-216-025-11	RES-CHIP	100	5%	1/10W
R221	1-216-025-11	RES-CHIP	100	5%	1/10W
R222	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R225	1-216-077-91	RES-CHIP	15K	5%	1/10W
R228	1-216-295-91	SHORT	0		
R229	1-216-053-00	RES-CHIP	1.5K	5%	1/10W
R230	1-216-053-00	RES-CHIP	1.5K	5%	1/10W
R231	1-216-049-11	RES-CHIP	1K	5%	1/10W
R234	1-216-113-00	RES-CHIP	470K	5%	1/10W
R235	1-216-113-00	RES-CHIP	470K	5%	1/10W
R240	1-216-077-91	RES-CHIP	15K	5%	1/10W
R241	1-216-077-91	RES-CHIP	15K	5%	1/10W
R242	1-216-073-91	RES-CHIP	10K	5%	1/10W
R243	1-216-073-91	RES-CHIP	10K	5%	1/10W
R244	1-216-113-00	RES-CHIP	470K	5%	1/10W
R248	1-216-093-91	RES-CHIP	68K	5%	1/10W
R249	1-216-049-11	RES-CHIP	1K	5%	1/10W
R300	1-216-033-00	RES-CHIP	220	5%	1/10W
R301	1-216-033-00	RES-CHIP (KV-HA14M80)	220	5%	1/10W
R302	1-216-033-00	RES-CHIP (KV-HA14M80/HA14P52)	220	5%	1/10W
R303	1-216-033-00	RES-CHIP (KV-HA14M80/HA14N80)	220	5%	1/10W
R304	1-216-051-00	RES-CHIP (KV-HA14M80/HA14P52)	1.2K	5%	1/10W
R305	1-216-045-00	RES-CHIP (KV-HA14M80/HA14N80)	680	5%	1/10W
R306	1-216-039-00	RES-CHIP (KV-HA14M80/HA14P52)	390	5%	1/10W
R307	1-216-033-00	RES-CHIP (KV-HA14M80/HA14P52)	220	5%	1/10W
R308	1-216-027-00	RES-CHIP (KV-HA14M80)	120	5%	1/10W
R309	1-216-029-00	RES-CHIP (KV-HA14M80)	150	5%	1/10W
R309	1-216-041-00	RES-CHIP (KV-HA14N80)	470	5%	1/10W
R310	1-216-039-00	RES-CHIP (KV-HA14M80/HA14P52)	390	5%	1/10W
R311	1-216-057-00	RES-CHIP (KV-HA14M80/HA14P52)	2.2K	5%	1/10W
R312	1-216-033-00	RES-CHIP	220	5%	1/10W
R313	1-216-037-00	RES-CHIP (KV-HA14M80/HA14P52)	330	5%	1/10W
R314	1-216-037-00	RES-CHIP (KV-HA14M80/HA14P52)	330	5%	1/10W
R315	1-216-081-00	RES-CHIP (KV-HA14M80/HA14P52)	22K	5%	1/10W
R316	1-216-031-00	RES-CHIP	180	5%	1/10W
R317	1-216-041-00	RES-CHIP (KV-HA14M80/HA14P52)	470	5%	1/10W
R318	1-216-081-00	RES-CHIP (KV-HA14M80)	22K	5%	1/10W
R319	1-216-041-00	RES-CHIP (KV-HA14M80)	470	5%	1/10W
R320	1-216-081-00	RES-CHIP (KV-HA14M80/HA14P52)	22K	5%	1/10W
R323	1-216-041-00	RES-CHIP (KV-HA14M80/HA14P52)	470	5%	1/10W
R324	1-216-041-00	RES-CHIP (KV-HA14M80/HA14N80)	470	5%	1/10W
R325	1-216-081-00	RES-CHIP (KV-HA14M80/HA14N80)	22K	5%	1/10W
R326	1-216-081-00	RES-CHIP (KV-HA14M80/HA14N80)	22K	5%	1/10W
R327	1-216-049-11	RES-CHIP	1K	5%	1/10W
R328	1-216-025-11	RES-CHIP	100	5%	1/10W
R329	1-216-043-91	RES-CHIP	560	5%	1/10W
R330	1-216-295-91	SHORT	0		
R331	1-216-295-91	SHORT	0		
R332	1-216-295-91	SHORT	0		
R333	1-216-025-11	RES-CHIP	100	5%	1/10W
R334	1-216-025-11	RES-CHIP	100	5%	1/10W
R335	1-216-025-11	RES-CHIP	100	5%	1/10W
R336	1-216-025-11	RES-CHIP	100	5%	1/10W
R337	1-216-073-91	RES-CHIP	10K	5%	1/10W
R339	1-216-035-00	RES-CHIP	270	5%	1/10W
R340	1-162-974-11	CERAMIC CHIP	0.01UF		50V
R342	1-216-295-91	SHORT	0		
R345	1-216-025-11	RES-CHIP	100	5%	1/10W
R348	1-216-025-11	RES-CHIP	100	5%	1/10W
R350	1-216-039-00	RES-CHIP	390	5%	1/10W
R353	1-216-119-00	RES-CHIP	820K	5%	1/10W
R354	1-216-119-00	RES-CHIP	820K	5%	1/10W
R355	1-216-061-91	RES-CHIP	3.3K	5%	1/10W
R356	1-216-061-91	RES-CHIP	3.3K	5%	1/10W
R357	1-216-101-00	RES-CHIP	150K	5%	1/10W
R358	1-216-025-11	RES-CHIP	100	5%	1/10W
R360	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R361	1-216-033-00	RES-CHIP	220	5%	1/10W
R362	1-216-083-00	RES-CHIP	27K	5%	1/10W
R363	1-216-295-91	SHORT	0		
R364	1-216-077-91	RES-CHIP	15K	5%	1/10W
R365	1-216-295-91	SHORT	0		
R367	1-216-099-00	RES-CHIP	120K	5%	1/10W
R368	1-216-049-11	RES-CHIP	1K	5%	1/10W
R369	1-216-123-11	RES-CHIP	1.2M	5%	1/10W
R370	1-216-083-00	RES-CHIP	27K	5%	1/10W
R371	1-208-820-11	METAL CHIP	39K	0.5%	1/10W
R374	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R376	1-216-295-91	SHORT	0		
R389	1-216-109-00	RES-CHIP	330K	5%	1/10W
R390	1-216-089-91	RES-CHIP	47K	5%	1/10W
R391	1-216-089-91	RES-CHIP	47K	5%	1/10W
R392	1-216-069-00	RES-CHIP	6.8K	5%	1/10W
R393	1-216-295-91	SHORT	0		
R394	1-216-070-00	RES-CHIP (KV-HA14N80)	7.5K	5%	1/10W
R400	1-216-295-91	SHORT	0		

The components identified by shading and mark ⚠ are critical for safety. Replace only with part number specified.

A

REF NO.	PART NO.	DESCRIPTION		REMARK	
R401	1-216-049-11	RES-CHIP	1K	5%	1/10W
R402	1-216-025-11	RES-CHIP	100	5%	1/10W
R403	1-216-073-91	RES-CHIP	10K	5%	1/10W
R404	1-216-049-11	RES-CHIP	1K	5%	1/10W
R405	1-216-073-91	RES-CHIP	10K	5%	1/10W
R406	1-216-113-00	RES-CHIP	470K	5%	1/10W
R407	1-216-049-11	RES-CHIP	1K	5%	1/10W
R408	1-216-049-11	RES-CHIP	1K	5%	1/10W
R409	1-216-113-00	RES-CHIP	470K	5%	1/10W
R410	1-216-025-11	RES-CHIP	100	5%	1/10W
R411	1-216-049-11	RES-CHIP	1K	5%	1/10W
R412	1-216-049-11	RES-CHIP	1K	5%	1/10W
R413	1-216-113-00	RES-CHIP	470K	5%	1/10W
R414	1-216-049-11	RES-CHIP	1K	5%	1/10W
R415	1-216-073-91	RES-CHIP	10K	5%	1/10W
R416	1-216-073-91	RES-CHIP	10K	5%	1/10W
R417	1-216-021-00	RES-CHIP	68	5%	1/10W
R418	1-216-025-11	RES-CHIP	100	5%	1/10W
R419	1-208-820-11	METAL CHIP	39K	0.5%	1/10W
R420	1-216-049-11	RES-CHIP	1K	5%	1/10W
R421	1-216-049-11	RES-CHIP	1K	5%	1/10W
R422	1-216-091-00	RES-CHIP	56K	5%	1/10W
R423	1-208-820-11	METAL CHIP	39K	0.5%	1/10W
R424	1-216-091-00	RES-CHIP	56K	5%	1/10W
R425	1-216-022-00	RES-CHIP	75	5%	1/10W
R426	1-216-049-11	RES-CHIP	1K	5%	1/10W
R427	1-216-051-00	RES-CHIP	1.2K	5%	1/10W
R428	1-216-041-00	RES-CHIP	470	5%	1/10W
R429	1-216-073-91	RES-CHIP	10K	5%	1/10W
R430	1-216-063-91	RES-CHIP	3.9K	5%	1/10W
R431	1-216-091-00	RES-CHIP	56K	5%	1/10W
R432	1-216-121-11	RES-CHIP	1M	5%	1/10W
R433	1-216-091-00	RES-CHIP	56K	5%	1/10W
R434	1-216-049-11	RES-CHIP	1K	5%	1/10W
R435	1-216-121-11	RES-CHIP	1M	5%	1/10W
R436	1-216-022-00	RES-CHIP	75	5%	1/10W
R438	1-216-049-11	RES-CHIP	1K	5%	1/10W
R440	1-216-121-11	RES-CHIP	1M	5%	1/10W
R443	1-216-121-11	RES-CHIP	1M	5%	1/10W
R445	1-216-089-91	RES-CHIP	47K	5%	1/10W
R446	1-216-089-91	RES-CHIP	47K	5%	1/10W
R500	1-260-126-81	CARBON	180K	5%	1/2W
R501	1-249-418-11	CARBON	1.2K	5%	1/4W
R502	1-216-371-00	METAL OXIDE	1.5	5%	2W
R503	1-216-091-00	RES-CHIP	56K	5%	1/10W
R504	1-216-091-00	RES-CHIP	56K	5%	1/10W
R505	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R506	1-260-125-11	CARBON	150K	5%	1/2W
R507	1-260-288-11	CARBON	0.47	5%	1/2W
R508	1-260-288-11	CARBON	0.47	5%	1/2W
R509	1-260-288-11	CARBON	0.47	5%	1/2W
R510	1-260-127-11	CARBON	220K	5%	1/2W
R511	1-215-463-00	METAL	56K	1%	1/4W
R512	1-215-453-00	METAL	22K	1%	1/4W
R513	1-215-449-00	METAL	15K	1%	1/4W
R514	1-249-385-11	CARBON	2.2K	5%	1/4W
R553	1-249-385-11	CARBON	2.2	5%	1/4W
R554	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R557	1-216-655-11	METAL CHIP	1.5K	0.5%	1/10W
R558	1-216-081-00	RES-CHIP	22K	5%	1/10W

REF NO.	PART NO.	DESCRIPTION		REMARK	
R559	1-216-089-91	RES-CHIP	47K	5%	1/10W
R563	1-216-655-11	METAL CHIP	1.5K	0.5%	1/10W
R564	1-215-865-11	METAL OXIDE	220	5%	1W
R565	1-216-350-11	METAL OXIDE	1.2	5%	1W
R567	1-208-790-11	METAL CHIP	2.2K	0.5%	1/10W
R568	1-215-457-00	METAL	33K	1%	1/4W
R600	1-215-915-11	METAL OXIDE	470	5%	3W
R602	1-220-820-31	CEMENTED (KV-HA14M80/HA14N80)	1.5	5%	10W
R602	1-202-962-11	CEMENTED (KV-HA14P52)	3.3	5%	10W
R605	1-207-615-00	METAL	0.33	10%	2W
R606	1-216-045-00	RES-CHIP	680	5%	1/10W
R608	1-260-129-11	CARBON	330K	5%	1/2W
R609	1-216-097-11	RES-CHIP	100K	5%	1/10W
R610	1-215-926-00	METAL OXIDE	33K	5%	3W
R611	1-216-061-91	RES-CHIP	3.3K	5%	1/10W
R612	1-249-419-11	CARBON	1.5K	5%	1/4W
R615	1-215-877-11	METAL OXIDE	22K	5%	1W
R617	1-216-049-11	RES-CHIP	1K	5%	1/10W
R619	⚠ 1-218-265-11	METAL	8.2M	5%	1W
R620	1-249-389-11	CARBON	4.7	5%	1/4W
R623	1-216-053-00	RES-CHIP	1.5K	5%	1/10W
R624	1-260-125-11	CARBON	150K	5%	1/2W
R626	1-216-349-00	METAL OXIDE	1	5%	1W
R627	1-220-820-31	CEMENTED (KV-HA14M80/HA14N80)	1.5	5%	10W
R800	1-216-049-11	RES-CHIP	1K	5%	1/10W
R801	1-216-081-00	RES-CHIP	22K	5%	1/10W
R802	1-215-918-00	METAL OXIDE	1.5K	5%	3W
R803	1-260-332-51	CARBON	2.2K	5%	1/2W
R806	1-216-295-91	SHORT	0		
R808	1-249-385-11	CARBON	2.2K	5%	1/4W
R810	1-215-886-11	METAL OXIDE	100	5%	2W
R811	1-215-911-11	METAL OXIDE	100	5%	3W
R812	1-215-918-00	METAL OXIDE	1.5K	5%	3W
R813	1-216-049-11	RES-CHIP	1K	5%	1/10W
R814	1-215-918-00	METAL OXIDE	1.5K	5%	3W
R860	1-216-103-00	RES-CHIP	180K	5%	1/10W
R861	1-216-295-91	SHORT	0		
R862	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R863	1-216-073-91	RES-CHIP	10K	5%	1/10W
R864	1-208-794-11	METAL CHIP	3.3K	0.5%	1/10W
R865	1-216-073-91	RES-CHIP	10K	5%	1/10W
R866	1-216-049-11	RES-CHIP	1K	5%	1/10W
R867	1-208-812-11	METAL CHIP	18K	0.5%	1/10W
R868	1-249-393-11	CARBON	10	5%	1/4W
R869	1-249-381-11	CARBON	1	5%	1/4W
R870	1-216-103-00	RES-CHIP	180K	5%	1/10W
R874	1-215-475-00	METAL	180K	1%	1/4W
R878	1-216-049-11	RES-CHIP	1K	5%	1/10W
R879	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R880	1-216-097-11	RES-CHIP	100K	5%	1/10W
R881	1-216-085-91	RES-CHIP	33K	5%	1/10W
R882	1-216-073-91	RES-CHIP	10K	5%	1/10W
R883	1-216-067-00	RES-CHIP	5.6K	5%	1/10W
R884	1-216-089-91	RES-CHIP	47K	5%	1/10W
R885	1-216-073-91	RES-CHIP	10K	5%	1/10W
R886	1-216-295-91	SHORT	0		
R887	1-215-477-00	METAL	220K	1%	1/4W
R888	1-215-477-00	METAL	220K	1%	1/4W
R889	1-208-832-11	METAL CHIP	120K	0.5%	1/10W

The components identified by shading and mark ⚠ are critical for safety. Replace only with part number specified.

A C

REF NO.		PART NO.	DESCRIPTION	REMARK
			<VARIABLE RESISTOR>	
RV300		1-241-769-11	RES, ADJ, CARBON 470K	
			<SWITCH>	
S001		1-692-431-21	SWITCH, TACTILE	
S002		1-692-431-21	SWITCH, TACTILE	
S003		1-692-431-21	SWITCH, TACTILE	
S004		1-692-431-21	SWITCH, TACTILE	
S005		1-692-431-21	SWITCH, TACTILE	
S006		1-692-431-21	SWITCH, TACTILE	
S600	⚠	1-571-433-21	SWITCH, PUSH (AC POWER)	
S800		1-572-707-11	SWITCH, LEVER	
			<#########>	
SWF100		1-781-042-11	FILTER, SURFACE WAVE	
			<TRANSFORMER>	
T503	⚠	1-453-309-21	TRANSFORMER ASSY FLYBACK (NX-4450//M3A4)	
T600		1-431-747-11	TRANSFORMER, LINE FILTER (KV-HA14M80/HA14N80)	
T600		1-424-682-11	COIL, LINE FILTER (KV-HA14P52)	
T601	⚠	1-437-333-11	TRANSFORMER, CONVERTER (SRT)	
T800		1-435-374-11	TRANSFORMER, FERRITE (HDT)	
			<THERMISTOR>	
THP600		1-803-744-11	THERMISTOR, POSITIVE	
			<TUNER>	
TU100		8-598-591-00	VSS TUNER BT-AG401 (KV-HA14M80)	
TU100		8-598-590-00	TUNER, FSS BTP-AA401 (KV-HA14N80)	
TU100		8-598-591-10	TUNER, VSS BT-AG402 (KV-HA14P52)	
			<VARISTOR>	
VDR600		1-803-830-31	VARISTOR (ERZV14D621)	
			<CRYSTAL>	
X001		1-577-358-21	VIBRATOR, CERAMIC	
X300		1-567-505-11	OSCILLATOR, CRYSTAL	
X301		1-567-504-11	OSCILLATOR, CRYSTAL	

****

REF NO.		PART NO.	DESCRIPTION			REMARK
	*	A-1400-519-A	C BOARD MOUNTED (KV-HA14M80)			
	*	A-1332-226-A	C BOARD MOUNTED (KV-HA14N80)			
	*	A-1332-299-A	C BOARD MOUNTED (KV-HA14P52)			
			**********			
		4-382-854-01	SCREW (M3X8), P, SW (+)			
			<CAPACITOR>			
C701		1-115-350-51	CERAMIC	0.0047UF		2KV
C702		1-102-074-00	CERAMIC	0.001UF	10.00%	50V
C703		1-107-651-11	ELECT	4.7UF	20.00%	250V
C704		1-130-202-00	FILM	0.022UF	5.00%	400V
C708		1-102-114-00	CERAMIC	470PF	10.00%	50V
C709		1-102-114-00	CERAMIC	470PF	10.00%	50V
C710		1-102-114-00	CERAMIC	470PF	10.00%	50V
C712		1-102-114-00	CERAMIC	470PF	10.00%	50V
C713		1-102-114-00	CERAMIC	470PF	10.00%	50V
C714		1-102-114-00	CERAMIC	470PF	10.00%	50V
C716		1-126-933-11	ELECT	100UF	20.00%	16V
C717		1-102-106-00	CERAMIC	100PF	10.00%	50V
C718		1-126-933-11	ELECT	100UF	20.00%	16V
C719		1-102-116-00	CERAMIC	680PF	10.00%	50V
C736		1-102-114-00	CERAMIC	470PF	10.00%	50V
C737		1-102-114-00	CERAMIC	470PF	10.00%	50V
C746		1-102-114-00	CERAMIC	470PF	10.00%	50V
			<#########>			
CLP701	*	4-042-408-01	PIN, COATING LEAD			
			<CONNECTOR>			
CN701	*	1-564-508-11	PLUG, CONNECTOR 5P			
CN702		1-695-915-11	TAB (CONTACT)			
CN703		1-564-509-11	PLUG, CONNECTOR 6P			
CN704		1-695-915-11	TAB (CONTACT)			
			<DIODE>			
D701		8-719-911-19	1SS119-25			
D702		8-719-911-19	1SS119-25			
D703		8-719-911-19	1SS119-25			
D707		8-719-911-19	1SS119-25			
D708		8-719-911-19	1SS119-25			
D709		8-719-911-19	1SS119-25			
D716		8-719-911-19	1SS119-25			
D717		8-719-070-16	NNCD9.1A-T1			
			<JACK>			
J701	⚠	1-540-071-22	SOCKET, CRT			
			<COIL>			
L701		1-412-529-11	INDUCTOR	22UH		
L706		1-414-191-11	INDUCTOR	150UH		
			<TRANSISTOR>			
Q704		8-729-326-11	2SC2611			
Q705		8-729-326-11	2SC2611			

C

REF NO.	PART NO.	DESCRIPTION			REMARK
Q706	8-729-326-11	2SC2611			
Q707	8-729-200-17	2SA1091-O			
Q708	8-729-200-17	2SA1091-O			
Q709	8-729-200-17	2SA1091-O			
Q710	8-729-119-78	2SC2785-HFE			
Q711	8-729-119-78	2SC2785-HFE			
Q712	8-729-119-78	2SC2785-HFE			
		<RESISTOR>			
R703	1-219-752-11	CARBON	100K	5%	1/2W
R705	1-216-365-00	METAL OXIDE	0.47	5%	2W
R710	1-216-486-00	METAL OXIDE	8.2K	5%	3W
R711	1-260-105-11	CARBON	3.3K	5%	1/2W
R712	1-216-486-00	METAL OXIDE	8.2K	5%	3W
R713	1-260-107-11	CARBON	4.7K	5%	1/2W
R714	1-216-486-00	METAL OXIDE	8.2K	5%	3W
R715	1-260-107-11	CARBON	4.7K	5%	1/2W
R716	1-249-417-11	CARBON	1K	5%	1/4W
R717	1-249-417-11	CARBON	1K	5%	1/4W
R718	1-249-417-11	CARBON	1K	5%	1/4W
R725	1-249-424-11	CARBON	3.9K	5%	1/4W
R726	1-249-424-11	CARBON	3.9K	5%	1/4W
R727	1-249-424-11	CARBON	3.9K	5%	1/4W
R728	1-249-408-11	CARBON	180	5%	1/4W
R729	1-249-408-11	CARBON	180	5%	1/4W
R730	1-249-408-11	CARBON	180	5%	1/4W
R731	1-249-399-11	CARBON	33	5%	1/4W
R732	1-249-399-11	CARBON	33	5%	1/4W
R733	1-249-399-11	CARBON	33	5%	1/4W
R734	1-219-743-11	CARBON	100	5%	1/2W
R738	1-247-807-31	CARBON	100	5%	1/4W
R739	1-247-807-31	CARBON	100	5%	1/4W
R740	1-247-807-31	CARBON	100	5%	1/4W
		<VARIABLE RESISTOR>			
RV702	1-241-656-11	RES, ADJ, METAL FILM 110M			

****

REF NO.	PART NO.	DESCRIPTION	REMARK
		ACCESSORIES AND PACKING MATERIALS	
		**********	
	1-501-372-81	ANTENNA, TELESCOPIC (KV-HA14N80)	
	1-417-170-11	MATCHING TRANSFORMER, ANTENNA (KV-HA14N80)	
*	4-077-069-01	BAG, PROTECTION (KV-HA14M80)	
*	4-392-859-01	BAG, PROTECTION (KV-HA14N80)	
*	4-037-759-01	BAG, PROTECTION (KV-HA14P52)	
*	4-087-683-01	CUSHION, LOWER (KV-HA14M80)	
*	4-087-667-01	CUSHION, LOWER (KV-HA14N80)	
*	4-087-684-01	CUSHION, UPPER (KV-HA14M80)	
*	4-087-668-01	CUSHION, UPPER (KV-HA14N80)	
*	4-085-657-01	CUSHION, UPPER (KV-HA14P52)	
*	4-087-685-01	INDIVIDUAL CARTON (KV-HA14M80)	
*	4-087-045-01	INDIVIDUAL CARTON (KV-HA14N80)	
*	4-087-669-01	INDIVIDUAL CARTON	(KV-HA14P52)
	4-087-198-11	MANUAL, INSTRUCTION (KV-HA14M80)	
	4-086-776-11	MANUAL, INSTRUCTION (KV-HA14N80)	
	4-086-232-12	MANUAL, INSTRUCTION	(KV-HA14P52)
	4-392-003-31	BAND, HOLD	
	3-701-910-00	SCREW, SPECIAL (DIA. 3.8X20)	
	4-392-004-21	CLIP	

****

		BATTERY COVER REMOTE COMMANDER	
		**********	
	1-477-047-11	REMOTE COMMANDER (RM-969) (KV-HA14M80/HA14P52)	
	1-477-162-11	REMOTE COMMANDER (RM-968) (KV-HA14N80)	
	4-084-290-01	BATTERY COVER REMOTE COMMANDER	

Sony Corporation
Sony Technology Malaysia Sdn. Bhd.
Visual Products General Area

9-872-281-01

English
© 2002.1